

Karaoke USA

DVD / MP3G / CDG KARAOKE & BLUETOOTH MEDIA PLAYER

User's Guide

MODEL:
GF757



(ipod® not included)

Before operating this product,
please read these instructions

Contents

 
Warnings and Precautions.....	1
Important Safety Instructions.....	2
Caution.....	3
What's in the Gift Box.....	4
Song List on your Disc.....	5-6
Features.....	7
Front Panel Illustration.....	8
Top and Rear Panel Illustration.....	9
Connecting to a TV Set.....	10
Connect MP3/MP4/iPod®.....	10
Remote Control.....	11
Remote Control Operation.....	12-15
Remote Control Preparation.....	16
How to Play a Disc.....	17
MP3G Disc and MP3G Format Music Playback.....	18
Play Bluetooth Music.....	19
Play SD Card and USB.....	20-21
Record Operation Procedures.....	22
Playback the Recorded File.....	23
The Setup Menu System.....	24-25
Specifications.....	26
Troubleshooting.....	27

Warnings and Precautions

WARNING: To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

“**Caution Marking and Rating Label**” is affixed under the lid or on the bottom of the unit with a mass not exceeding 7kg.

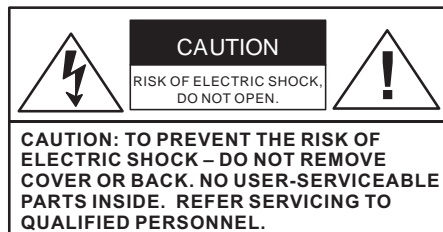

This symbol is intended to alert you to the presence of uninsulated, dangerous voltage within the unit's enclosure that might be of a sufficient magnitude to constitute a risk of electric shock. DO NOT OPEN THE UNITS CASE.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

SAFETY

For units with an insertable AC Power Adapter cordset:

- The power adapter should remain operable for its intended use. Disconnect the AC Power Adapter if you are not intending to use the unit for a long period of time.
- When connecting or disconnecting the AC Power Adapter Cord, grip the plug and not the cord itself. Pulling the cord may cause damage and create a hazard.

For units with a Rechargeable Battery:

- Do not expose batteries to excessive conditions – extreme cold, heat, sun or fire.

MOISTURE AND CONDENSATION

If the unit is exposed to moisture and extreme cold temperatures and moved to a warm environment, condensation may form on the units internal components. Under these circumstances, turning the power “ON” may cause damage to the unit or cause harm to the user. Allow the unit to stand in a warm environment for 1 to 3 hours and allow the unit to air dry safely.

WHEN IN USE

- Do not use this unit in conditions that are extreme – hot, cold, dusty or humid.
- Do not restrict the air flow of the unit by placing it on a soft surface like a bed, carpet or covering.

FCC INFORMATION

This unit complies with part 15 of the “FCC Rules.” Operation is subject to the following conditions:

1. This unit may not cause harmful interference.
2. This unit must accept any interference received, including interference that may cause undesirable operation.



Double insulation.
This is a Class II apparatus.

Important Safety Instructions

1. Read these instructions. All safety and operating instructions should be read before the product is operated.

2. Keep these instructions. The safety and operating instructions should be retained for future reference.

3. Heed all warnings. All warnings on the product and in the operating instructions should be adhered to.

4. Follow all instructions. All operating and use instructions should be followed.

5. Water and Moisture. Do not use this product near water. For example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool or similar conditions. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on or near this product.

6. Cleaning. Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

7. Ventilation. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.

8. Heat. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices that produce heat, including amplifiers.

9. Grounding or Polarization. (If applicable) Do not disable or circumvent the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of this outlet.

10. Power Cord Protection. Protect the power cord from being walked on, pinched, cut or damaged in any way. If any damage occurs, consult with a trained technician for repairs.

11. Accessories. Only use accessories specified and approved by the manufacture. Do not place this product on an unstable cart, stand, tripod, bracket, or table not previously approved by the manufacturer. The product may fall causing serious injury to a child, adult or to the product itself. Any mounting of the product should be done within the manufacturer's guidelines.

12. Transporting. If a preapproved device is used to transport this product, caution and care must be observed and practiced to avoid damages. Make sure the device and product together are stable before moving.



PORTABLE
CART
WARNING

13. Lightning. Unplug this product and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will help prevent damage to the product due to lightning and power line surges.

14. Servicing. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

 
15. Power Sources. Only connect to the type of household power supply as indicated in the operating instructions and rating label. If you are not sure of the type of power supplied to your home, consult with local power company. For products intended to operate from battery power, or other sources, refer to the manufacturer's operating instructions.

16. Overloading. Do not overload wall outlets or extension cords. This can result in a risk of fire or electric shock.

17. Foreign Material. Protect this product from intrusion of any foreign substances like dirt, water, moisture and insects. Do not force any foreign materials or chemicals into this product. This could result in a risk of fire or electric shock.

18. Replacement Parts and Safety Check. When replacement parts are required, be sure the service technician has used replacement parts specified and approved by the manufacturer. Ask the service technician to perform safety checks to ensure proper operation to avoid possible fire, electric shock, or other hazards.

19. Outdoor Antenna Grounding. If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. If there's any doubt to the proper grounding of these systems, contact a qualified electrician to inspect your location.

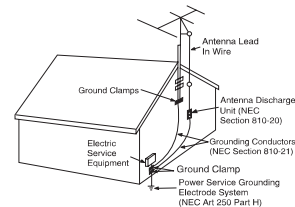

20. Wall or Ceiling Mounting. The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

21. Disconnect Device. Make sure all disconnect devices are in proper working condition and readily available in the event of an emergency or if power off is needed quickly.

22. Protective Attachment Plug. (If applicable) This product may be equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of this protective device. If replacement of the plug is required, be sure the qualified service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

23. Power Lines. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them may be fatal. Always consult with your local power company before installing an outside antenna.

Caution

- Please use the original box and packing materials for safe transportation of this product.

- It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.

- Do not move this product during playing. Doing so may cause damage to the pickup and the disc.

- Press OPEN/CLOSE button to open tray. Do not push or pull tray. Do not touch tray when opening or closing.

- This unit does not fully support the USB Playing and Record/ Ripping.

- Warning: When the EQ function is turned on, the Ripping effect/ result would not be too good/ ideal.

- Do not use hard or sharp instruments to touch the TFT Screen, it may scratch or damage its surface!

What's in the Giftbox?



GF757 X1



 
Microphone x 2



RCA Cables x 1



MP3/iPOD
Holder x 1

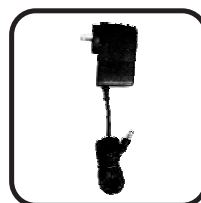


AC/DC
Adaptor x 1



Remote
Control x 1



 3.5mm AUX IN Cable X1

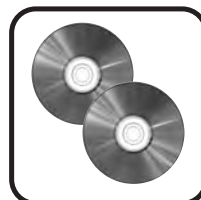

Disc x 2



Users Manual x 1



Warranty Card x 1

Song List on your Discs

9347 Sing A Long Karaoke Songs (200 Traditional Karaoke Songs)


- | | | |
|---|---|--|
| 1. Alexander's Ragtime Band | 68. Here We Go Looby Loo | 135. Polly Wolly Doodle |
| 2. All Things Bright And Beautiful | 69. Hey Diddle Diddle | 136. Pop Goes The Weasel |
| 3. All Through The Night | 70. Hickory Dickory Dock | 137. Ride A Cock Horse To Banbury Cross |
| 4. Alouette | 71. Higgledy Piggledy My Black Hen | 138. Right Hand Says Good Morning |
| 5. Alphabet Song, The | 72. Home On The Range | 139. Ring Around The Rosie |
| 6. America (My Country Tis Of Thee) | 73. Humpty Dumpty | 140. Rise And Shine |
| 7. Animal Fair | 74. Hunting We Will Go, A | 141. Rock A Bye Baby |
| 8. Around And Around The Village | 75. Hush Little Baby | 142. Rock A Bye Baby Green |
| 9. Aye Aye Aye The Limerick Song | 76. Hush-a-bye | 143. Rock Island Line |
| 10. B I N G O | 77. I Am A Young Musician | 144. Rocking The Cradle |
| 11. Baa Baa Black Sheep | 78. I Gave My Love A Cherry | 145. Rose Of Tralee |
| 12. Barney Buntline | 79. I Had A Little Nut Tree | 146. Row Row Row Your Boat |
| 13. Be Kind To Your Web Footed Friends | 80. I Love You Truly | 147. Russian Cradle Song |
| 14. Bear Went Over The Mountain | 81. I Spy | 148. Sailing Sailing |
| 15. Big Rock Candy Mountain | 82. If You're Happy And You Know It | 149. School Days |
| 16. Billy Boy | 83. I'll Take You Home Again, Kathleen | 150. She'll Be Coming Around The Mountain |
| 17. Billy Pringle | 84. I'm A Little Teapot | 151. Shoo Fly Don't Bother Me |
| 18. Bird's Song | 85. I'm Always Chasing Rainbows | 152. Shortening Bread |
| 19. Blessed Assurance | 86. I'm Looking Over A Four Leaf Clover | 153. Simple Simon |
| 20. Blow The Man Down | 87. In The Good Old Summertime | 154. Sing A Song Of Sixpence |
| 21. Blue Bells Of Scotland | 88. It Ain't Gonna Rain No More | 155. Six Little Ducks |
| 22. Bluebird | 89. It's Raining It's Pouring | 156. Skip To My Lou |
| 23. Bollweevil | 90. I've Been Working On The Railroad | 157. Sleep Baby Sleep |
| 24. Bye, Baby Bunting | 91. Jack And Jill | 158. Spelling |
| 25. Caissons Go Rolling Along | 92. Jack Be Nimble | 159. Spider And The Fly, The |
| 26. Calendar Song | 93. Jack Spratt | 160. Star Spangled Banner, The |
| 27. Camptown Races | 94. Jenny Jenkins | 161. Sur Le Pont D'avignon |
| 28. Capital Ship, A | 95. Jimmy Crack Corn | 162. Swanee River |
| 29. Cat Came Back, The | 96. Lady Bird Lady Bird | 163. Sweetly Sings The Donkey |
| 30. Cinderella | 97. Letters Of The Alphabet | 164. Swing Low Sweet Chariot |
| 31. Clementine | 98. Little Black Bull | 165. Tailor And The Mouse |
| 32. Cock A Doodle Doo | 99. Little Boy Blue | 166. Take Me Out To The Ball Game |
| 33. Cockles And Mussels | 100. Little Jack Horner | 167. Ten In A Bed |
| 34. Cocky Robin | 101. Little Sally Waters | 168. The Ants Go Marching |
| 35. Colors | 102. Little Things, The | 169. The Eensy Weensy Spider |
| 36. Come, O Come, Emanuel | 103. Little Tommy Tucker | 170. The Farmer In The Dell |
| 37. Counting Song | 104. London Bridge Falling Down | 171. The Holly And The Ivy |
| 38. Crawdad Song | 105. London Street | 172. The Muffin Man |
| 39. Crocodile, The | 106. Ma She's Making Eyes At Me | 173. The Old Gray Mare |
| 40. Cuckoo Is A Pretty Bird | 107. Mademoiselle From Armentieres | 174. There Was A Little Man |
| 41. Day And Night | 108. Marine's Hymn | 175. There Was A Tree |
| 42. Dixie | 109. Michael Row The Boat Ashore | 176. There's A Hole In Middle Of Sea |
| 43. Do Your Ears Hang Low | 110. Midnight Special, The | 177. This Little Pig Went To Market |
| 44. Dry Bones | 111. Moonlight Bay | 178. This Old Man |
| 45. Elephant And The Flea | 112. My Old Dog Tray | 179. Three Blind Mice |
| 46. Father Grumble | 113. My Old Hen | 180. Three Little Kittens |
| 47. Fiddle De De | 114. Now I Lay Me Down To Sleep | 181. Three Little Pigs |
| 48. Fishes | 115. Oats Beans And Barley Grow | 182. Tisket A Tasket, A |
| 49. Five Currant Buns | 116. Off To Bed Now | 183. To Market To Market |
| 50. For He's A Jolly Good Fellow | 117. Oh Dear What Can The Matter Be | 184. Toot Toot Toosie Goodbye |
| 51. For Me And My Gal | 118. Ol Woman Who Lived In A Shoe | 185. Try Try Again |
| 52. Fox | 119. Old Blue | 186. Tura Lura Lura |
| 53. Frere Jacques | 120. Old John Braddlem | 187. Turkey In The Straw |
| 54. Froggie Went A Courting | 121. Old Mother Hubbard | 188. Vive La Compagne |
| 55. Georgie Porgie | 122. On The Banks Of The Sacramento | 189. Wabash Cannonball, The |
| 56. German Lullaby | 123. On Top Of Old Smokey | 190. Waltzing Matilda |
| 57. Girls And Boys Come Out To Play | 124. One Meat Ball | 191. We Hunted And We Hunted |
| 58. Git Along Little Dogies | 125. One Two Buckle My Shoe | 192. We Three Kings |
| 59. Golden Slumbers | 126. One Two Three Four Five | 193. What Child Is This |
| 60. Good Morning Merry Sunshine | 127. Oranges And Lemons | 194. When Johnny Comes Marching Home |
| 61. Goosey Goosey Gander | 128. Over In The Meadow | 195. Where Oh Where Has My Little Dog Gone |
| 62. Grasshopper | 129. Over The River And Through The Woods | 196. Who Threw The Overalls In Mrs. Murphy's Chowder |
| 63. Grasshoppers Three | 130. Pat A Cake | 197. Wish You A Happy Birthday |
| 64. Greensleeves | 131. Pease Porridge Hot | 198. World Turned Upside Down, The |
| 65. Ground Hog | 132. Peg O' My Heart | 199. Yankee Doodle |
| 66. Harrigan | 133. Peter Peter Pumpkin Eater | 200. Yellow Rose Of Texas |
| 67. Here We Go Around The Mulberry Bush | 134. Polly Put The Kettle On | |

Song List on your Discs

9346 Holiday Favorites (100 Traditional English and Spanish Karaoke Songs)


- | | |
|--|---|
| 1. Abide With Me | 68. Oh You Beautiful Doll |
| 2. Amazing Grace | 69. Oh, Susanna |
| 3. Angel De Los Reinos Santos | 70. Old King Cole |
| 4. Angels From The Realms Of Glory | 71. Old MacDonald Had A Farm |
| 5. Angels We Have Heard On High | 72. Old Time Religion |
| 6. April Shower | 73. One Day At A Time |
| 7. Auld Lang Syne | 74. One More River To Cross |
| 8. Ave Maria | 75. Onward Christian Soldiers |
| 9. Away In A Manger | 76. Peace In The Valley |
| 10. Battle Hymn Of The Republic | 77. Precious Lord Take My Hand |
| 11. Bicycle Built For Two | 78. Precious Memories |
| 12. Bill Bailey, Won't You Come Home | 79. Rock Of Ages |
| 13. Boom, Boom, Ain't It Great To Be Crazy | 80. Rock-A-My Soul |
| 14. Brahm's Lullaby | 81. Silent Night |
| 15. Bringing In The Sheaves | 82. Sweet By And By |
| 16. Campanas de Navidad | 83. Sweet Hour Of Prayer |
| 17. Church in The Wildwood | 84. The Little Drummer Boy |
| 18. Con Mi Burrito Sabanero | 85. The Lord's Prayer |
| 19. Daddy Sang Bass | 86. The Old Rugged Cross |
| 20. Danny Boy | 87. This Little Light Of Mine |
| 21. Deck The Halls | 88. Toda La Noche |
| 22. Ding Dong Que Alegria | 89. Twelve Days Of Christmas |
| 23. Doce Dias De Navidad | 90. Twinkle Twinkle Little Star |
| 24. Down By The Riverside | 91. We Gather Together |
| 25. El Buen Rey Wenceslao | 92. We Wish You A Merry Christmas |
| 26. El Primer Noel | 93. Wedding Song (There Is Love) |
| 27. El Tamborilero | 94. What A Friend We Have In Jesus |
| 28. First Noel, The | 95. When Irish Eyes Are Smiling |
| 29. Frankie And Johnny | 96. When The Roll Is Called Up Yonder |
| 30. Give My Regards To Broadway | 97. While Shepherds Watched, Their Flocks |
| 31. Go Tell It On The Mountain | 98. Whispering Hope |
| 32. God Rest Ye Merry Gentlemen | 99. Ya Llego La Navidad |
| 33. Hail Hail The Gang's All Here | 100. You're A Grand Old Flag |
| 34. Hark! The Herald Angels Sing | |
| 35. He's Got The Whole World In His Hand | |
| 36. His Eye Is On The Sparrow | |
| 37. How Great Thou Art | |
| 38. I Love To Tell The Story | |
| 39. I'll Fly Away | |
| 40. In The Garden | |
| 41. It Came Upon A Midnight Clear | |
| 42. It Is No Secret What God Can Do | |
| 43. Jeanie With The Light Brown Hair | |
| 44. Jesus Loves Me | |
| 45. Jingle Bells (Childrens) | |
| 46. Joy To The World | |
| 47. Just A Closer Walk With Thee | |
| 48. Let Me Call You Sweetheart | |
| 49. Little Bo Peep | |
| 50. Little Miss Muffet | |
| 51. Llego A Mi Medianoche | |
| 52. Los Tres Reyes | |
| 53. Mary Had A Little Lamb | |
| 54. Mary Quite Contrary | |
| 55. Mozart's Lullaby | |
| 56. My Bonnie Lies Over The Ocean | |
| 57. My Old Kentucky Home | |
| 58. My Wild Irish Rose | |
| 59. Navidad, Navidad | |
| 60. Noche De Paz | |
| 61. Noche Santa | |
| 62. O Holy Night | |
| 63. Oh Christmas Tree | |
| 64. Oh Come All Ye Faithful | |
| 65. Oh Little Town Of Bethlehem | |
| 66. Oh Ven Oh Ven Emmanuel | |
| 67. Oh When The Saints Go Marching In | |

 Features

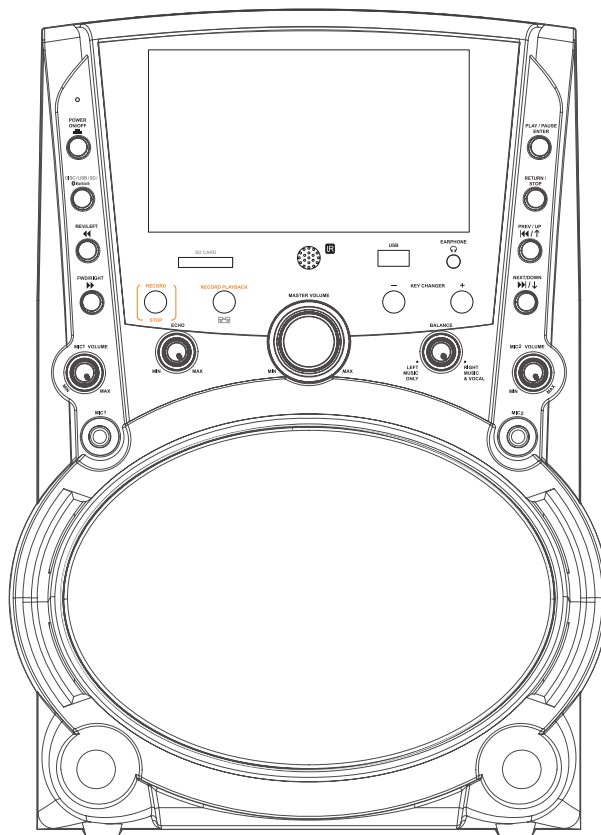


- DVD/CD+G/MP3+G Karaoke Player
- 7" TFT color screen
- Record CD+G/MP3+G and Voice
- Record and Instant Playback
- 50W power output
- Remote Control
- 2 Microphone
- 2 Microphone inputs
- 2 Microphone holders
- USB/SD card slots
- USB charger for MP3/iPod
- Analog Echo Control
- Balance Control
- Digital Key Control
- Audio and Video Input
- Audio and Video output
- Audio/Video RCA cable
- 3.5mm to RCA cable
- AC 100V~240V
AC/DC Adaptor included
- DC 12V Car Adaptor (optional)

 Front Panel Illustration

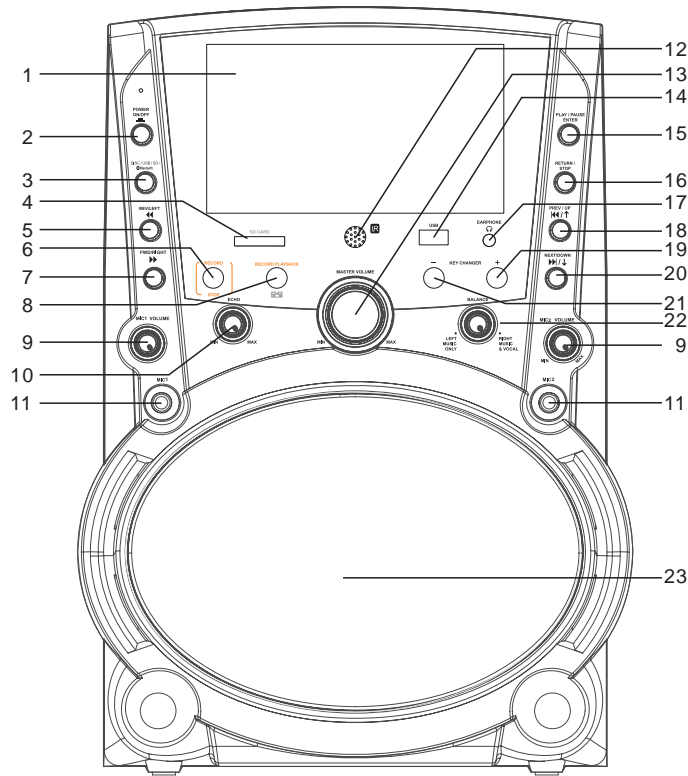


1. TFT Screen
2. POWER ON/OFF button
3. DISC-SD-USB/Bluetooth: Choose Content Source Disc, SD , USB or Bluetooth
4. SD CARD: SD slot to accommodate SD cards
5. REV/LEFT ◀: REVERSE, or Navigate LEFT in the menu
6. RECORD/STOP: Record start & stop
7. FWD/RIGHT ▶: FORWARD or Navigate RIGHT in the menu
8. RECORD PLAYBACK: Playback the recorded track
9. MIC VOLUME: Microphone volume control
10. ECHO: ECHO control
11. MIC INPUT: Microphone input jacks (LEFT and RIGHT)
12. IR LED: Remote control infrared receiver
13. MASTER VOLUME: Music volume control
14. USB: USB slot to accommodate USB
15. PLAY/PAUSE/ENTER: Select a menu item / play or pause a song
16. RETURN/STOP: Return in menu section or Stop playing
17. EARPHONE: Standard 3.5mm earphone jack
18. PREV/UP ⏮: PREVIOUS song or Navigate UP in the menu
19. KEY CHANGER +: Raise the tone
20. NEXT/DOWN ⏭: NEXT song or Navigate DOWN in the menu
21. KEY CHANGER -: Lower the tone
22. BALANCE: MUSIC ONLY/MUSIC & VOCAL
23. SPEAKER: Audio speaker

 Top and Rear Panel Illustration

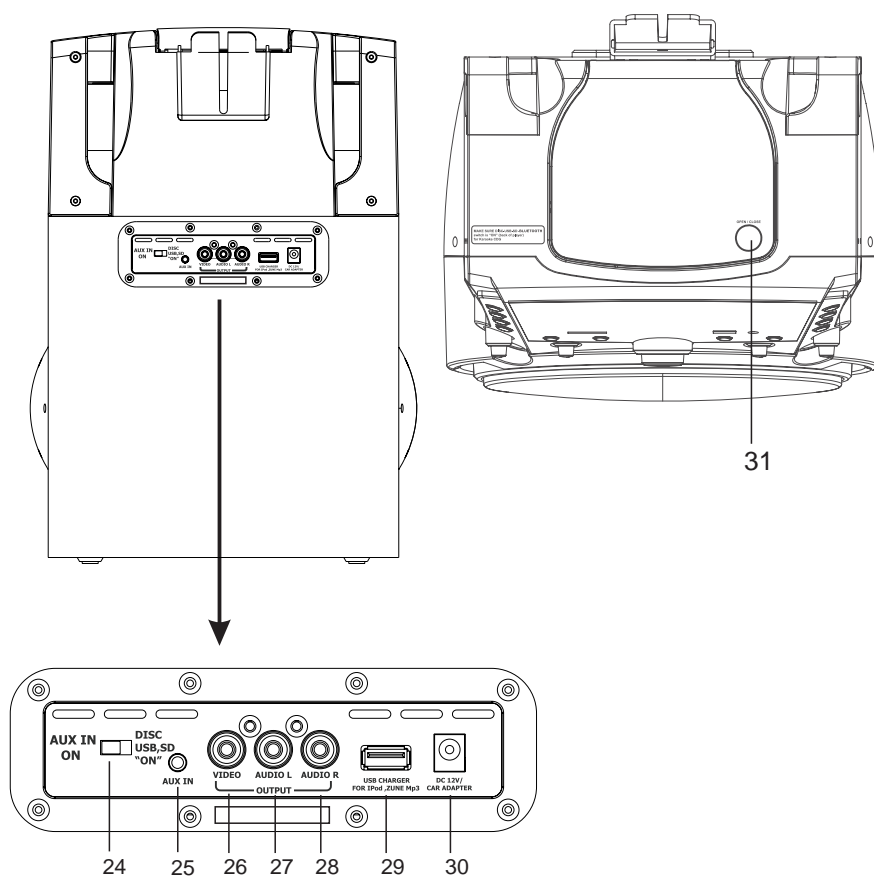

Connecting to a TV Set

 
To watch lyrics on your TV screen, connect Yellow (video), Red (audio) and White (audio) RCA ends into matching color jacks on TV. To view lyrics, you must select an input channel on your TV like Video 1, Video 2, Aux, etc. It will never be channels 2, 3, 4, 5, etc.

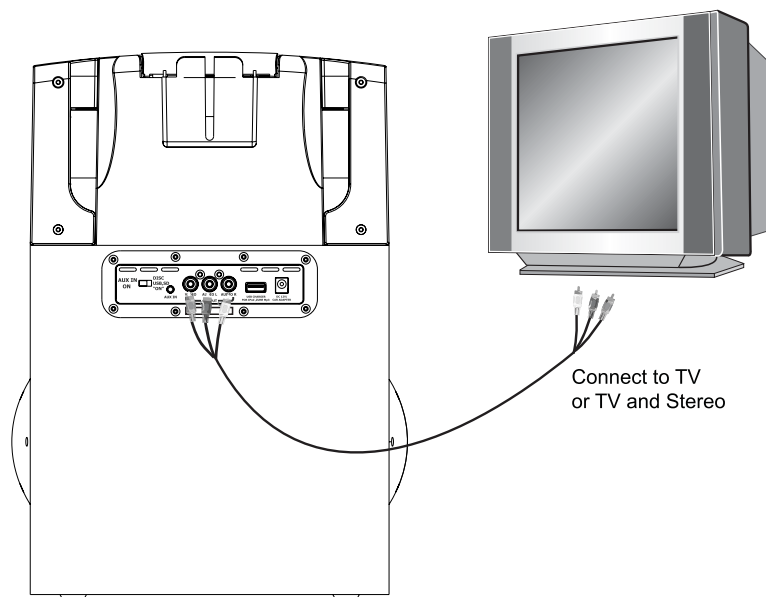

Notes:


Use composite video cable and left/right audio cable.

 Connect MP3/MP4/iPod®

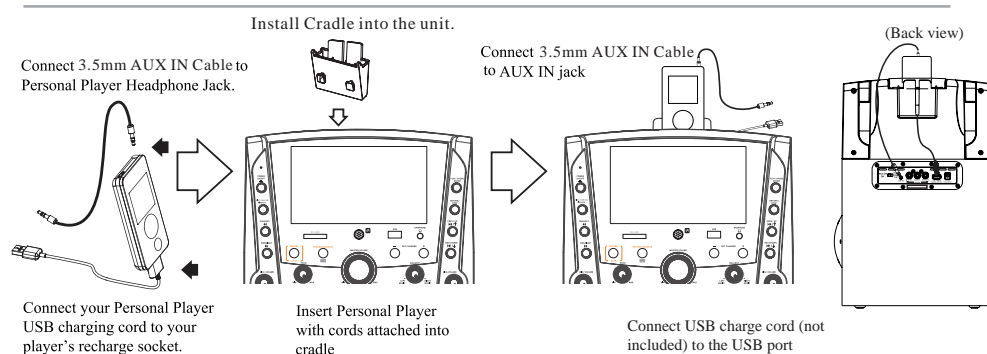

Works with iPod®, MP3 & MP4 Players. (iPod®, MP3 & MP4 Personal Players not included)
iPod® is a registered trademark of Apple Computer, Inc.
All rights reserved

 Remote Control

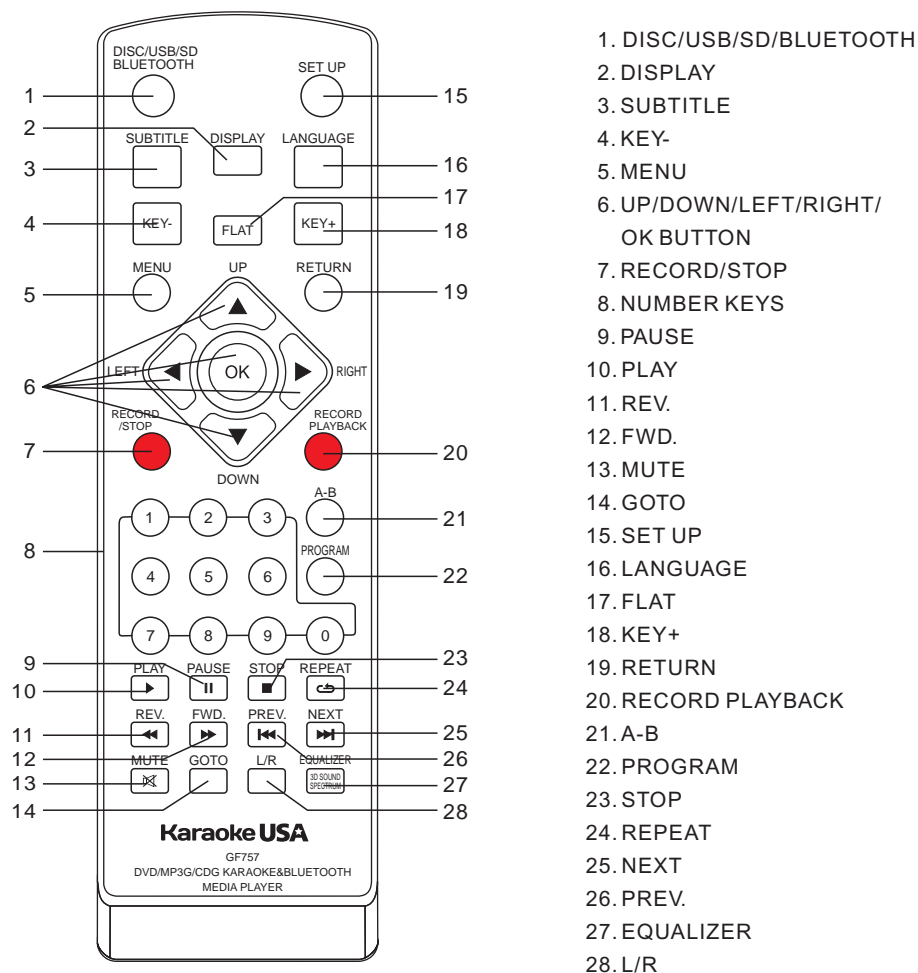


NOTE:

1. Please note that reference numbers for the remote are described at the beginning on page 10 of this manual.
2. In this manual, "◀" "▶" "▲" "▼" will be used to represent different NAVIGATION ARROWS on the remote respectively.
3. In order to operate any of the remote functions, you must first turn on the Karaoke Player & Select the "DISC" mode.

 
Remote Control Operation

1. DISC/USB/SD /BLUETOOTH

1.  ● Press to change media in [DISC->USB->SD->BLUETOOTH]. Select and press "OK".

2. DISPLAY


- During playback,press DISPLAY to show the current time counter position.

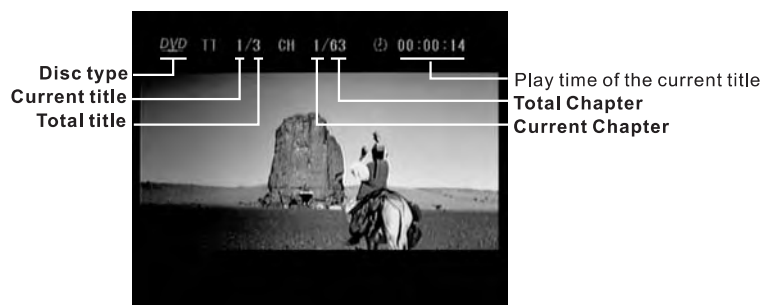

Press DISPLAY to show the Audio and Subtitle message menu.



 
3. SUBTITLE


3.  ● Press to display the subtitles.
(Only applicable in movie, depends on your disc or your download file.)

4. KEY-

4.  ● Transpose the music key down.


5. MENU

 
5.  ● During DVD, playback, press MENU to return to the program menu.
Note: This function is subject to the disc.

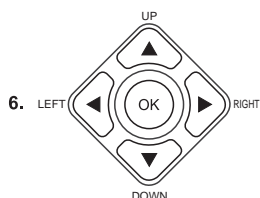


6.  ● Used for navigation within a selection menu.


Remote Control Operation

 
7. **RECORD /STOP**  ● Record your vocal and music to the USB or SD card.
(Note: USB or SD card must be inserted before start recording. DVD disc is not available for recording.)

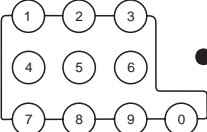8.  ● Used to specify a track number for playing, changing, or programming.


9. **PAUSE**  ● Press PAUSE during playback to pause playback.

 
10. **PLAY**  ● Press PLAY from stop mode to start play.

 11. **REV.**  ● During CD/DVD playback, press or hold ◀◀ to scan reverse. The player will review the disc at 2,4,8 and 20 times normal speed as follows:




Press PLAY to resume normal playback.

 12. **FWD.**  ● During CD/DVD playback, press or hold ▶▶ to scan forward. The player will review the disc at 2,4,8 and 20 times normal speed as follows:



Press PLAY to resume normal playback.

13. **MUTE**  ● Press MUTE to mute the Audio output.
● Press MUTE again to resume normal Audio output.

14. **GOTO**  ● During playback, press GOTO show the current time counter position.



Remote Control Operation

15. **SETUP**
☐ ● Press to setup the TV settings according to your needs.
16. **LANGUAGE**
 ● To show the movie language.(Depends on your download file.)
17. **FLAT**
 ● Set the music key as normal.
18. **KEY+**
 ● Transpose the music key up.
19. **RETURN**
☐ ● Works with the PBC function to return to a menu screen while playing.
20. **RECORD
PLAYBACK**
☐ ● Press this button to listen the music that you **JUST** recorded.
21. **A-B**
☐ ● Press A-B first to set location A: REPEAT: A-,press again to set location B, and then playback will repeat during the two locations: REPEAT: A-B.Press A-B the third time to cancel the function and return to normal playback: REPEAT: CANCEL.
22. **PROGRAM**
☐ ● This is the function provide you to listen the tracks in a desire order.
 While [PROGRAM] is on, press ENTER to display the [Program submenu]:






 
PROG			
1	5	9	13
2	6	10	14
3	7	11	15
4	8	12	16
PLAY CLEAR			

Input the track numbers in the order you would like them to play. When you have finished, press PLAY then press ENTER to play the tracks in the new programmed order. Select CLEAR then press ENTER to clear all numbers.

PROG			
T C	T C	T C	T C
1	5	9	13
2	6	10	14
3	7	11	15
4	8	12	16
PLAY CLEAR			

Input the title and chapter numbers in the desired order. Then press PLAY then press ENTER to play the chapters in the order you have set. Select CLEAR then press ENTER to clear all the numbers.

 
Remote Control Operation

23. **STOP**  ● Press STOP once during playback to stop and hold playback.
● Press PLAY to resume playback from the point you pressed STOP.
● Press STOP twice to stop playback completely.
24. **REPEAT**  ● Press this key to play selected item repeatedly.
The screen shows as below:
REP:[OFF] REP:[REP1] EP:[REP ALL]
25. **NEXT**  ● Press NEXT to skip to next chapter or track.
26. **PREV**  ● Press PREV to skip to previous chapter or track.
27. **EQUALIZER**  ● This key is set the different sound effect of the music.
28. **L/R**  ● Activates the multiplex function, which switches to NORMAL (stereo), L-ch monaural and R-ch MONAURAL.


Remote Control Preparation

Battery installation


1. Open the cover

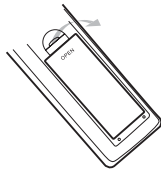



 
2. Install batteries (AAA 1.5Vx2, not included)

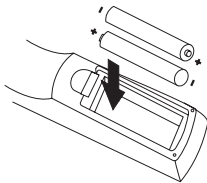

 3. Close the cover

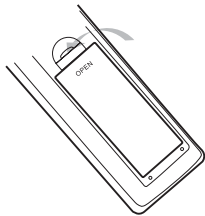

Using the remote control

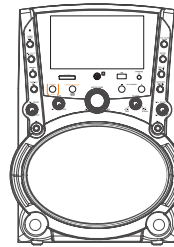   


Notes:

- Point the remote control directly at the player's remote sensor.
- Do not leave the remote control in an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- When this machine will not be used for an extended period of time, please remove all batteries from the Battery Compartment.


How to play a disc

Your GF757 will support CD,CDG,MP3,MP3G and DVD format disc.

 
1. Connect the DC adaptor to the unit;

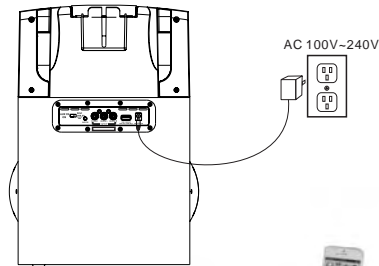

 2. Load your disc;

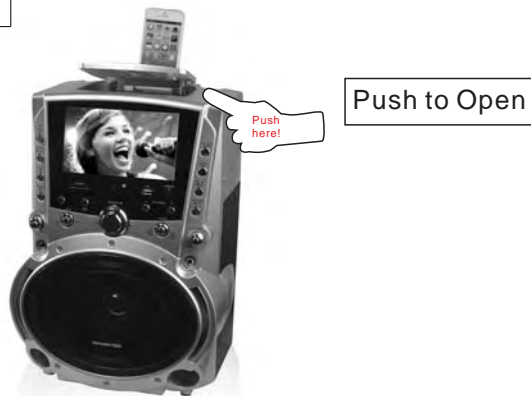


 
3. Close the CD door;

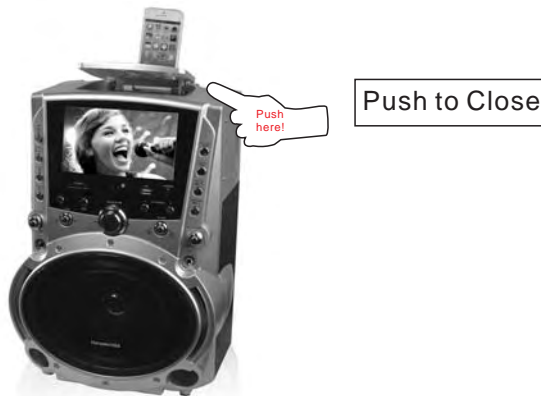

4. Turn on the unit by POWER ON/OFF button, the power indicator will light up;
5. Press **PLAY** to start your disc playing.

MP3G disc and MP3G format music playback

  When an MP3G Disc, SD Card or USB device is connected, the screen will display as follows:

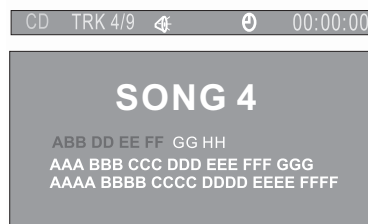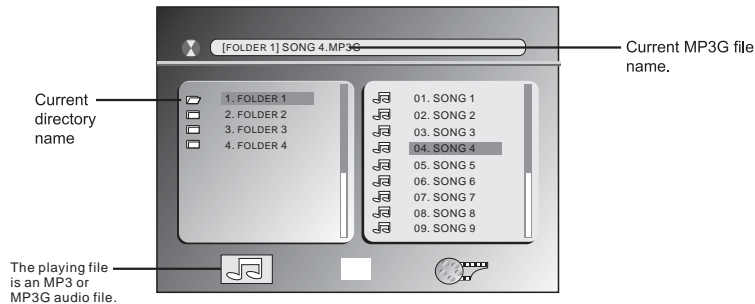

Press ▲ ▼ to select the file when the cursor appears in the file window.

Press select to play the current file select by the cursor.

Press ◀ ▶ to switch between the directory window and the file window.

 
Note: The player will not function correctly under the following condition:

1. The disc is badly scratched, damaged or dirty.
2. The disc is not finalized.
3. The recording format is not supported by the player.

Play Bluetooth Music

1. Pairing Your Smart Phone Using Bluetooth:

- A. Power the unit ON and select DISC/USB/SD/BLUETOOTH mode;
- B. Select to Bluetooth mode by the **button** DISC/USB/SD/BLUETOOTH,

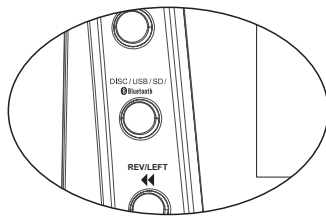

(in the front panel or on the remote control)

when in Bluetooth, the screen it shows: BLUETOOTH MODE NO CONNECTION.

2. Setting your smart device to "Discover" the unit.

- A. Active your Bluetooth function on your personal device;
- B. Select "Setup", "Connect" or the "Bluetooth" Menu on your Smart device;
- C. Select the option to "Discover" or "Add" a Bluetooth device.

3. Using Your Smart Device to Connect the Unit:

- A. Your Smart Device will "Discover" GF757;
- B. The Smart Device will ask if you want to pair with GF757;
- C. Select "Yes" or "OK" to accept the pairing and your Smart Device will confirm when complete.
- D. If they are paired, the screen will show "BLUETOOTH CONNECTED" and a sound "Be";
- E. If they are not paired, the screen shows "BLUETOOTH NO CONNECTION" all the time;
- F. Repeat "Step 1,2,3" above until they get paired.


4. Playing Audio Via Bluetooth After Pairing:

- A. Press the ►|| Button to "Play" or "Pause" the Audio Files from your Smart Device.
- B. To select music, search the "Music Center" or "Media Player" on your smart device.
- C. Press the "Play" button on your Smart Device to start music playing.
- D. Adjust volume to maximum on your Smart Device.
- E. Control volume using the +/- buttons on the Unit.
- F. Music will "Pause" automatically when your Smart Device receives a telephone call. Music will resume when call is ended.

Play SD Card and USB

Play Music

 Before you do this, make sure you have download the music (MP3,MP3G format) to your SD card or USB. Plug the SD card or USB to the machine, Press "DISC/SD/USB/BLUETOOTH" to select your desire device, Then the screen will shows:

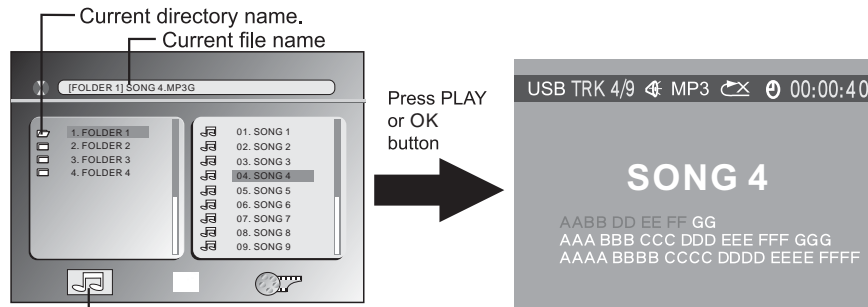

The frame shows it is in music mode.

 
Press ▼ ▲ to select the file when the cursor appears in the file window.

Press OK or PLAY to play the current file select by the cursor.

Press ◀ ▶ to switch between the directory window and the file window.

View Photo

Before you do this, make sure you have download the image (JPG. format) to your SD card or USB (The operation same as "Play Music") . And the screen will shows:

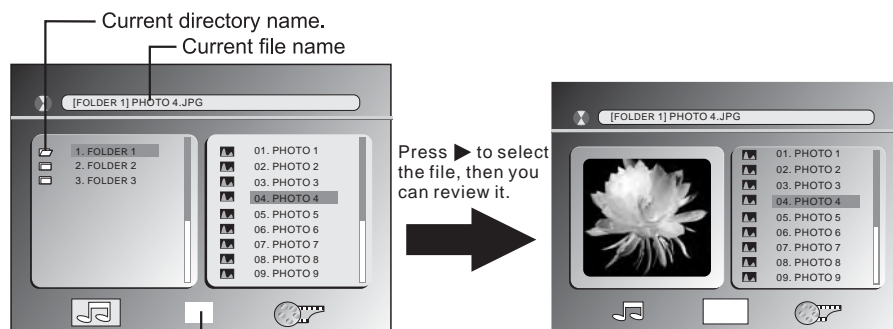


The frame shows it is in photo mode.



Play SD Card and USB

Watch Movie

 Before you do this, make sure you have download the movie (AVI. format) to your SD card or USB (The operation same as “Play Music”). And the screen will shows:

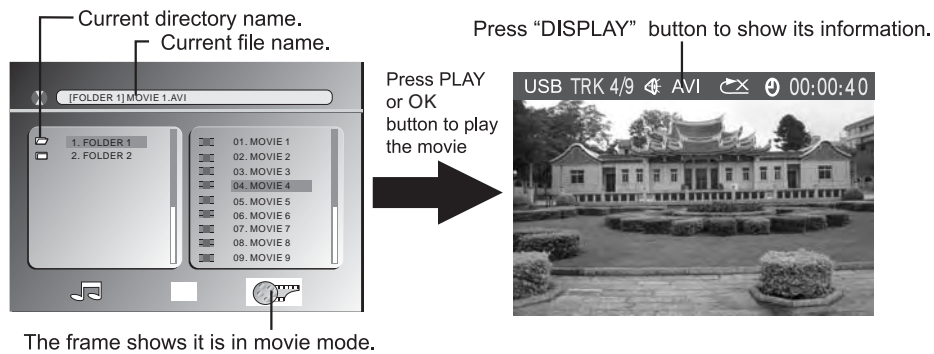

Record Operation Procedures

 
1. Load Disc, SD card or USB, select song Title from the song list and press PLAY, the unit plays. (This unit supports the MP3, MP3+G, CD, CD+G format's song.)
2. Press the red RECORD/STOP button --> screen shows " USB Ready or SD Card Ready".
3. User can start singing into the Microphone and record. When finished, Press RECORD/STOP to stop Recording.

When recording, the screen shows the below:


(In different disc format, recording picture is different on the screen.)

A. In MP3G mode:


①. Playing

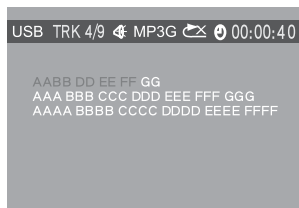

②. Recording

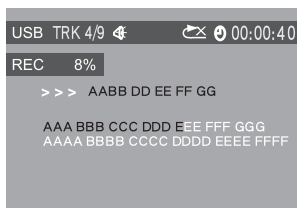 


③. Recording finished

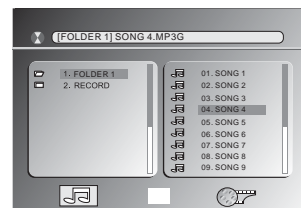 


B. In CDG mode:

 ①. Playing

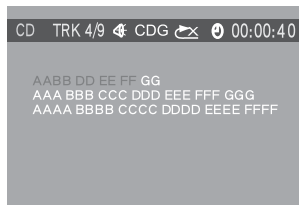

②. Recording

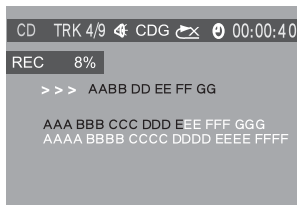 

③. Recording finished



4. Press "RECORD PLAYBACK" to listen the song you just recorded.

Note:

not all USB stickers format the same way. Some USB stickers may not work properly, please try a different brand if you have record problem.

99 percent of the SD card are format and works good in this machine.

DVD format disc does not support the record function.

 
Playback the Recorded File

1. Press "RECORD PLAYBACK" **JUST RIGHT AFTER YOUR RECORDING.**
2. Press DISC/SD/USB/ BLUETOOTH button to select USB or SD mode.

A



- B. Select RECORD folder, then press OK.
--> Screen shows all tack No.

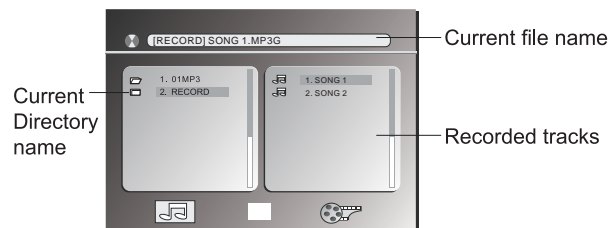

- C. Use the navigation buttons to pick the identical track number when the Song/Vocal was recorded,
Press OK to play.

The Setup Menu System

Advanced Features

1. SYSTEM SETUP

The system setup options are illustrated as below:

1.1 TV SYSTEM

According to the Color System of the TV, you can choose the TV System.

1.2 SCREEN SAVER

The SCREEN SAVER function is automatically and always on; when the player is in STOP, after few minutes in Open or No disc state, it will appear a DVD logo moving around the screen.

 
1.3 TV TYPE

According to the TV type, you can choose 16:9, 4:3LB or 4:3PS.

16:9 : The picture fills the screen of a wide screen TV.

4:3 PS : Pan and Scan, the image is cut in order to fit the whole screen.

4:3 LB: Letter box, two black bands will appear on the upper and lower part of the screen.

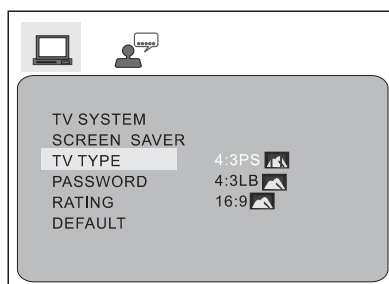

1.4 PASSWORD

The password option is initialized locked, and you can not set the ratings limit or change the password. In order to set the Ratings feature to work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 0000, then press OK to confirm. To change the password, you will be prompted for the old password, then be prompted for a new one. Enter a 4-digit number (this is your password). Press remember your PASSWORD, as the DEFAULT setting will revert everything.

1.5 RATING

The Rating feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types for DVDs that your family watches.

1.6 DEFAULT

The DEFAULT setup options are RESTORE factory setup.

When your unit does not work properly, it may probably result from some wrong settings. Please try the Restore Factory Setting function to see if the unit can restore to its normal working status.

The Setup Menu System

 
Advanced Features

2. LANGUAGE SETUP

The language setup options are illustrated as below:


2.1 OSD LANGUAGE

Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press Enter to confirm, then the language will be set as OSD language.

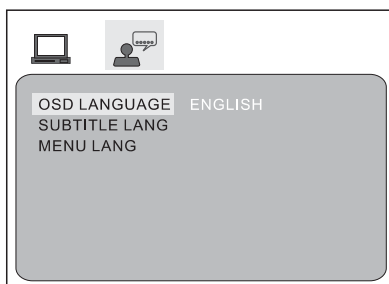

2.2 SUBTITLE LANG

 
Highlight the SUBTITLE LANG option, and press the Arrow buttons to choose the subtitle language you prefer. Press OK to confirm. If the disc you are playing has that language, it will display subtitles in that language.

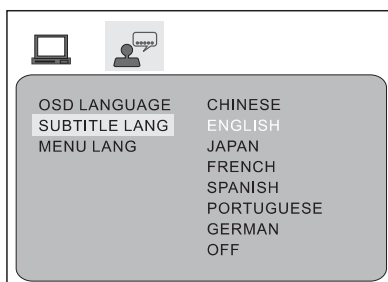

2.3 MENU LANG

Highlight the MENU LANG option, and press the Arrow buttons to choose the menu language you prefer. Press OK to confirm. If the disc you are playing has that Language, it will display the menu in the language.

 Notes: If your preferred language is not available, the disc s default language will be played.

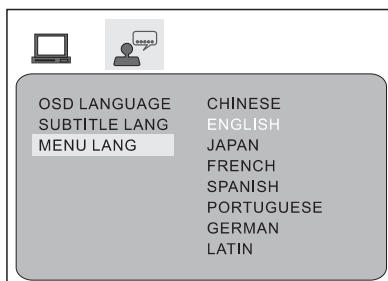

Specifications

Power requirements: DC12V
50W Peak Power Output (25W RMS)
Video standard: NTSC
Unit Weight: 4.2KG

Video output
1.0V(p-p)/ 75Ω, sync, negative polarity, RCA pin jack x 1
Audio output
2.0 channel output: RCA pin jack(L,R) x 2

Frequency response: 20Hz to 20kHz
S/N ratio: >90dB
Total harmonic distortion: <0.0025%

Accessories
DC Adapter x 1
RCA cables x 1
3.5mm AUX IN cable X1
Remote Control x 1
User's Manual x 1
Warranty Card x 1
Holder for MP3/iPod® x 1
Demo Disc x 2
Microphone x2

Troubleshooting

If you have any questions, please consult the troubleshooting guide below.

NO PICTURE OR SOUND

- Make sure the Power switch is ON.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

PICTURE BUT NO SOUND ON TV

- Ensure the audio jacks are securely connected.
- Ensure the audio connector is not damaged.
- Ensure the volume is turned up in setup.
- Ensure you have entered the correct AV input for your TV.
- Ensure the audio is not set to mute.

SOUND BUT NO PICTURE ON TV

 
- Ensure the video jacks are securely connected.
- Ensure you have entered the correct AV input for your TV.
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

"NO DISC" DISPLAYED

- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

SD CARD

* Use the SD Card which meets SD standards. If not, it may cause the Karaoke to malfunction.

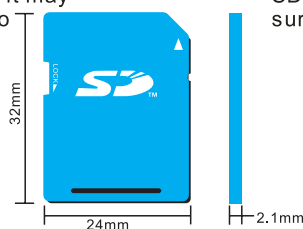

"BAD DISC" DISPLAYED

- Ensure the disc is not warped, damaged or deformed.
- Ensure the disc is not badly stained or damaged.
- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

REMOTE NOT WORKING

- Make sure the Main unit's POWER button is on.
- Ensure the remote batteries are working.
- Point the remote control directly at the player's IR sensor.
- Remove any obstacles between the remote and the IR sensor.

UNIT NOT WORKING

- Turn off the power, and then turn it on again.

 
SOUND BUT NO PICTURE ON TV

- Ensure you have selected the proper mode on the unit.
- Ensure you have download the proper format from the computer to your device.
- Some HC SD card or USB maynot compatible with this unit.

UNIT NOT WORKING

- Turn off the power, and then turn it on again.

* Gently insert the SD Card label surface facing front.

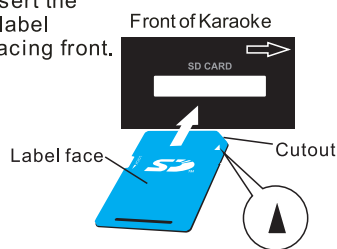

* Compliant card type: SDHC Card, SD Card, miniSD Card, miniSDHC Card, microSD Card, microSDHC Card (requiring miniSD Card/miniSDHC Card/microSD Card/microSDHC Card adapter)

* If a miniSD Card, miniSDHC Card, microSD Card or microSDHC Card is used, insert/remove it together with the adapter.

Karaoke USA

KARAOKE USA
1185 GOODEN Crossing
LARGO, FL 33778 USA
TECH SUPPORT: WWW.KARAOKEUSA.COM/CS
DOWNLOAD SONGS: WWW.SINGTHEHITS.COM
SALES DEPARTMENT: SALES@KARAOKEUSA.COM

Printed in China