

**Karaoke USA**

# **CDG /MP3G KARAOKE & BLUETOOTH MEDIA PLAYER**

- English
- Español
- Français

**EN** User's Guide

MODEL:  
GF920



Smart Device not included

Before operating this product, please read these instructions.

# Contents

---

 
Warnings and Precautions.....	01
Important Safety Instructions.....	02
Caution.....	03
What's in the Gift Box.....	04
Song List on your Disc.....	05-06
Features.....	07
Front Panel Illustration.....	08
Top&Rear Panel Illustration.....	09
Remote Control Functions.....	10
Monitor Message.....	11
Connect Power Adapter.....	11
Charging Internal Battery.....	12
Using Microphone.....	12
Charging Your Mobile.....	13
Replace Built - in Battery.....	13
Install Cradle.....	14
Place Smart Device into Cradle.....	14
Connecting to Television / Ext. Device.....	15
Loading a Disc.....	16
Playing Disc Music.....	16
Install USB Memory Stick.....	17
Playing USB Music Files.....	17
Using Repeat / Program.....	18
Using Bluetooth.....	19
Disco Light.....	19
Using Echo.....	19
Using Balance.....	19
Record Feature Instructions.....	20
Specification.....	21

# Warnings and Precautions

**WARNING:** To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

“Caution Marking and Rating Label” is affixed under the lid or on the bottom of the unit with a mass not exceeding 7kg.

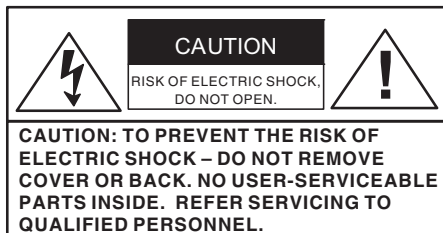

This symbol is intended to alert you to the presence of uninsulated, dangerous voltage within the unit's enclosure that might be of a sufficient magnitude to constitute a risk of electric shock. DO NOT OPEN THE UNITS CASE.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

## SAFETY

For units with an insertable AC Power Adapter cord set:

- The power adapter should remain operable for its intended use. Disconnect the AC Power Adapter if you are not intending to use the unit for a long period of time.
- When connecting or disconnecting the AC Power Adapter Cord, grip the plug and not the cord itself. Pulling the cord may cause damage and create a hazard.

For units with a Rechargeable Battery:

- Do not expose batteries to excessive conditions – extreme cold, heat, sun or fire.

## MOISTURE AND CONDENSATION

If the unit is exposed to moisture and extreme cold temperatures and moved to a warm environment, condensation may form on the units internal components. Under these circumstances, turning the power “ON” may cause damage to the unit or cause harm to the user. Allow the unit to stand in a warm environment for 1 to 3 hours and allow the unit to air dry safely.

## WHEN IN USE

- Do not use this unit in conditions that are extreme – hot, cold, dusty or humid.
- Do not restrict the air flow of the unit by placing it on a soft surface like a bed, carpet or covering.

## FCC INFORMATION

This unit complies with part 15 of the “FCC Rules.” Operation is subject to the following conditions:

1. This unit may not cause harmful interference.
2. This unit must accept any interference received, including interference that may cause undesirable operation.



Double insulation.  
This is a Class II apparatus.

FCC ID: 2ANH7-3938021TFT

# Important Safety Instructions

**1. Read These Instructions:** All safety and operations manual should be read before the product is operated.

**2. Keep These Instructions:** The safety and operations manual should be retained for future reference.

**3. Heed All Warnings:** All warnings applicable to the unit and in the operations manual should be adhered to.

**4. Follow All Instructions:** All operations manual should be followed.

**5. Water and Moisture:** Do not use this unit near water. For example, do not use near a bath tub, wash bowl, kitchen sink, or laundry tub. Do not use this unit in a wet basement or near a swimming pool or similar location. The unit shall not be exposed to dripping or splashing and no objects filled with liquids (ex: vases), shall be placed on or near this unit.

**6. Cleaning:** Clean the unit only with a dry cloth. Unit must be unplugged from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the unit.

**7. Ventilation:** Slots and openings in the cabinet of the unit are provided to ensure reliable operation and ventilation and to protect the unit from overheating. The openings must not be covered and should never be blocked by placing the product on a soft surface like a bed, sofa, or rug. This unit should not be placed in a built-in installation like a bookcase or rack, unless proper ventilation is provided.

**8. Heat:** Do not install the unit near any heat source like a radiator, heat register, stove or other device that produces heat, including amplifiers.

**9. Grounding or Polarization:** If applicable, do not disable or circumvent the polarized or grounding-type plug. A polarized plug has 2 blades with 1 wider than the other. A grounding-type plug has 2 blades and a 3<sup>rd</sup> grounding plug. The wide blade, or the 3<sup>rd</sup> prong, is provided for your safety. If the provided plug does not fit into an outlet, consult a qualified electrician for replacement of this outlet.

**10. Power Cord Protection:** Protect the power cord from being walked on, pinched or cut or damaged in any

way. If any damage occurs, consult with a trained technician for repair.

**11. Accessories:** Only use accessories specified and approved by the manufacturer. Do not place this unit on an unstable cart, stand, tripod, bracket or table that has not been previously approved by the manufacturer. This unit may fall, causing serious injury to a child, adult or to the unit itself. Any mounting of the unit should be done within the manufacturer's guidelines.

**12. Transporting:** If a pre-approved device is used to transport this unit, caution and care must be observed and practiced to avoid damages. Make sure the device and unit together are stable before moving.



PORTABLE  
CART  
WARNING

**13. Lightning:** Unplug this unit and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will help prevent damage to the unit due to lightning and power line surges.

**14. Servicing:** Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

 
**15. Power Sources:** Only connect to the type of household power supply as indicated in the operations manual and "Caution Marking and Rating Label." If you are not sure of the type of power supplied to your home (or location of the outlet the unit is being plugged into), consult with the local power company. For units intended to operate from battery power, or other sources, refer to the manufacturer's operations manual.

**16. Overloading:** Do not overload wall outlets or extension cords. This can result in a risk of fire or electric shock and may be hazardous.

**17. Foreign Material:** Protect this unit from intrusion of any foreign substances like dirt, water, moisture and insects. Do not force any foreign materials or chemicals into this unit. This could result in a risk of fire or electric shock and may be hazardous.

**18. Replacement Parts and Safety Check:** When replacement parts are required, be sure the service technician has used replacement parts specified and approved by the manufacturer. Ask the service technician to perform safety checks to ensure the proper operation to avoid possible fire, electric shock or other hazards.

**19. Outdoor Antenna Grounding:** If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. If there is any doubt to the proper grounding of these systems, contact a qualified electrician to inspect your location.

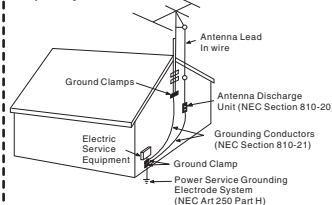

**20. Wall or Ceiling Mounted:** The unit should be mounted to a wall or a ceiling only as recommended by the manufacturer.

**21. Disconnect Device:** Make sure all disconnect devices are in proper working condition and readily available in the event of an emergency or if power "off" is needed quickly.

**22. Protective Attachment Plug:** If applicable, this unit may be equipped with an attachment plug having overload protection. This is a safety feature. See the operations manual for replacement or resetting of this protective device. If replacement of the plug is required, be sure the qualified service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

**23. Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal. Always consult with your local power company before installing an outside antenna.

## Caution

---

- Please use the original box and packing materials for safe transportation of this product.
- It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.
- Do not move this product during playing. Doing so may cause damage to the pickup and the disc.
- Press OPEN CD DOOR button to open tray. Do not pull the tray. Do not touch tray when opening or closing.
- USB Flash Devices should be formatted to FAT32 on your computer before use.
- When EQ function /key control is turned on, the Recording effect/result would not be ideal.
- Do not use hard or sharp instruments to touch the TFT Screen, it may scratch or damage its surface!

## What's in the Gift Box

---



GF920 X1



 
Microphone x 2



RCA Cable x 1



Smart Device  
Holder x 1

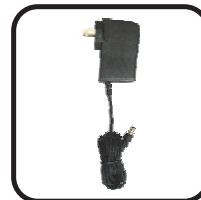


AC Adaptor x 1  
DC15V/2A



Remote Control x 1  
(Included CR2025 3V  
lithium battery)



 AUX IN  
Cable x 1

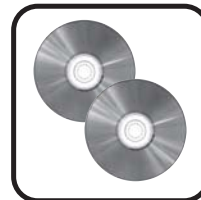

MP3G Demo  
Disc x 2



User's Guide x 1



Warranty Card x 1

# Song List on your Discs

## 9347 Sing A Long Karaoke Songs (200 Traditional Karaoke Songs)

1. Alexander's Ragtime Band
2. All Things Bright And Beautiful
3. All Through The Night
4. Alouette
5. Alphabet Song, The
6. America (My Country Tis Of Thee)
7. Animal Fair
8. Around And Around The Village
9. Aye Aye Aye Aye The Limerick Song
10. B I N G O
11. Baa Baa Black Sheep
12. Barney Buntline
13. Be Kind To Your Web Footed Friends
14. Bear Went Over The Mountain
15. Big Rock Candy Mountain
16. Billy Boy
17. Billy Pringle
18. Bird's Song
19. Blessed Assurance
20. Blow The Man Down
21. Blue Bells Of Scotland
22. Bluebird
23. Bollweevil
24. Bye, Baby Bunting
25. Caissons Go Rolling Along
26. Calendar Song
27. Camptown Races
28. Capital Ship, A
29. Cat Came Back, The
30. Cinderella
31. Clementine
32. Cock A Doodle Doo
33. Cockles And Mussels
34. Cocky Robin
35. Colors
36. Come, O Come, Emanuel
37. Counting Song
38. Crawdad Song
39. Crocodile, The
40. Cuckoo Is A Pretty Bird
41. Day And Night
42. Dixie
43. Do Your Ears Hang Low
44. Dry Bones
45. Elephant And The Flea
46. Father Grumble
47. Fiddle De De
48. Fishes
49. Five Currant Buns
50. For He's A Jolly Good Fellow
51. For Me And My Gal
52. Fox
53. Frere Jacques
54. Froggie Went A Courting
55. Georgie Porgie
56. German Lullaby
57. Girls And Boys Come Out To Play
58. Git Along Little Dogies
59. Golden Slumbers
60. Good Morning Merry Sunshine
61. Goosey Goosey Gander
62. Grasshopper
63. Grasshoppers Three
64. Greensleeves
65. Ground Hog
66. Harrigan
67. Here We Go Around The Mulberry Bush
68. Here We Go Looby Loo
69. Hey Diddle Diddle
70. Hickory Dickory Dock
71. Higgledy Piggledy My Black Hen
72. Home On The Range
73. Humpty Dumpty
74. Hunting We Will Go, A
75. Hush Little Baby
76. Hush-a-bye
77. I Am A Young Musician
78. I Gave My Love A Cherry
79. I Had A Little Nut Tree
80. I Love You Truly
81. I Spy
82. If You're Happy And You Know It
83. I'll Take You Home Again, Kathleen
84. I'm A Little Teapot
85. I'm Always Chasing Rainbows
86. I'm Looking Over A Four Leaf Clover
87. In The Good Old Summertime
88. It Ain't Gonna Rain No More
89. It's Raining It's Pouring
90. I've Been Working On The Railroad
91. Jack And Jill
92. Jack Be Nimble
93. Jack Spratt
94. Jenny Jenkins
95. Jimmy Crack Corn
96. Lady Bird Lady Bird
97. Letters Of The Alphabet
98. Little Black Bull
99. Little Boy Blue
100. Little Jack Horner
101. Little Sally Waters
102. Little Things, The
103. Little Tommy Tucker
104. London Bridge Falling Down
105. London Street
106. Ma She's Making Eyes At Me
107. Mademoiselle From Armentieres
108. Marine's Hymn
109. Michael Row The Boat Ashore
110. Midnight Special, The
111. Moonlight Bay
112. My Old Dog Tray
113. My Old Hen
114. Now I Lay Me Down To Sleep
115. Oats Beans And Barley Grow
116. Off To Bed Now
117. Oh Dear What Can The Matter Be
118. Ol Woman Who Lived In A Shoe
119. Old Blue
120. Old John Braddlem
121. Old Mother Hubbard
122. On The Banks Of The Sacramento
123. On Top Of Old Smokey
124. One Meat Ball
125. One Two Buckle My Shoe
126. One Two Three Four Five
127. Oranges And Lemons
128. Over In The Meadow
129. Over The River And Through The Woods
130. Pat A Cake
131. Pease Porridge Hot
132. Peg O' My Heart
133. Peter Peter Pumpkin Eater
134. Polly Put The Kettle On
135. Polly Wolly Doodle
136. Pop Goes The Weasel
137. Ride A Cock Horse To Banbury Cross
138. Right Hand Says Good Morning
139. Ring Around The Rosie
140. Rise And Shine
141. Rock A Bye Baby
142. Rock A Bye Baby Green
143. Rock Island Line
144. Rocking The Cradle
145. Rose Of Tralee
146. Row Row Row Your Boat
147. Russian Cradle Song
148. Sailing Sailing
149. School Days
150. She'll Be Coming Around The Mountain
151. Shoo Fly Don't Bother Me
152. Shortening Bread
153. Simple Simon
154. Sing A Song Of Sixpence
155. Six Little Ducks
156. Skip To My Lou
157. Sleep Baby Sleep
158. Spelling
159. Spider And The Fly, The
160. Star Spangled Banner, The
161. Sur Le Pont D'avignon
162. Swanee River
163. Sweetly Sings The Donkey
164. Swing Low Sweet Chariot
165. Tailor And The Mouse
166. Take Me Out To The Ball Game
167. Ten In A Bed
168. The Ants Go Marching
169. The Eensy Weensy Spider
170. The Farmer In The Dell
171. The Holly And The Ivy
172. The Muffin Man
173. The Old Gray Mare
174. There Was A Little Man
175. There Was A Tree
176. There's A Hole In Middle Of Sea
177. This Little Pig Went To Market
178. This Old Man
179. Three Blind Mice
180. Three Little Kittens
181. Three Little Pigs
182. Tisket A Tasket, A
183. To Market To Market
184. Toot Toot Toosie Goodbye
185. Try Try Again
186. Tura Lura Lura
187. Turkey In The Straw
188. Vive La Compagne
189. Wabash Cannonball, The
190. Waltzing Matilda
191. We Hunted And We Hunted
192. We Three Kings
193. What Child Is This
194. When Johnny Comes Marching Home
195. Where Oh Where Has My Little Dog Gone
196. Who Threw The Overalls In Mrs. Murphy's Chowder
197. Wish You A Happy Birthday
198. World Turned Upside Down, The
199. Yankee Doodle
200. Yellow Rose Of Texas

Any and all discs shown are for illustration only and may or may not represent the actual disc(s) included in this package

## Song List on your Discs

---

### 9346 Favorite Karaoke Songs (100 Traditional English and Spanish Karaoke Songs)

- |  |   |
|--|---|
| 1. Abide With Me                           | 68. Oh You Beautiful Doll                 |
| 2. Amazing Grace                           | 69. Oh, Susanna                           |
| 3. Angel De Los Reinos Santos              | 70. Old King Cole                         |
| 4. Angels From The Realms Of Glory         | 71. Old MacDonald Had A Farm              |
| 5. Angels We Have Heard On High            | 72. Old Time Religion                     |
| 6. April Shower                            | 73. One Day At A Time                     |
| 7. Auld Lang Syne                          | 74. One More River To Cross               |
| 8. Ave Maria                               | 75. Onward Christian Soldiers             |
| 9. Away In A Manger                        | 76. Peace In The Valley                   |
| 10. Battle Hymn Of The Republic            | 77. Precious Lord Take My Hand            |
| 11. Bicycle Built For Two                  | 78. Precious Memories                     |
| 12. Bill Bailey, Won't You Come Home       | 79. Rock Of Ages                          |
| 13. Boom, Boom, Ain't It Great To Be Crazy | 80. Rock-A-My Soul                        |
| 14. Brahms's Lullaby                       | 81. Silent Night                          |
| 15. Bringing In The Sheaves                | 82. Sweet By And By                       |
| 16. Campanas de Navidad                    | 83. Sweet Hour Of Prayer                  |
| 17. Church in The Wildwood                 | 84. The Little Drummer Boy                |
| 18. Con Mi Burrito Sabanero                | 85. The Lord's Prayer                     |
| 19. Daddy Sang Bass                        | 86. The Old Rugged Cross                  |
| 20. Danny Boy                              | 87. This Little Light Of Mine             |
| 21. Deck The Halls                         | 88. Toda La Noche                         |
| 22. Ding Dong Que Alegria                  | 89. Twelve Days Of Christmas              |
| 23. Doce Dias De Navidad                   | 90. Twinkle Twinkle Little Star           |
| 24. Down By The Riverside                  | 91. We Gather Together                    |
| 25. El Buen Rey Wenceslao                  | 92. We Wish You A Merry Christmas         |
| 26. El Primer Noel                         | 93. Wedding Song (There Is Love)          |
| 27. El Tamborilero                         | 94. What A Friend We Have In Jesus        |
| 28. First Noel, The                        | 95. When Irish Eyes Are Smiling           |
| 29. Frankie And Johnny                     | 96. When The Roll Is Called Up Yonder     |
| 30. Give My Regards To Broadway            | 97. While Shepherds Watched, Their Flocks |
| 31. Go Tell It On The Mountain             | 98. Whispering Hope                       |
| 32. God Rest Ye Merry Gentlemen            | 99. Ya Llego La Navidad                   |
| 33. Hail Hail The Gang's All Here          | 100. You're A Grand Old Flag              |
| 34. Hark! The Herald Angels Sing           |   |
| 35. He's Got The Whole World In His Hand   |   |
| 36. His Eye Is On The Sparrow              |   |
| 37. How Great Thou Art                     |   |
| 38. I Love To Tell The Story               |   |
| 39. I'll Fly Away                          |   |
| 40. In The Garden                          |   |
| 41. It Came Upon A Midnight Clear          |   |
| 42. It Is No Secret What God Can Do        |   |
| 43. Jeannie With The Light Brown Hair      |   |
| 44. Jesus Loves Me                         |   |
| 45. Jingle Bells (Childrens)               |   |
| 46. Joy To The World                       |   |
| 47. Just A Closer Walk With Thee           |   |
| 48. Let Me Call You Sweetheart             |   |
| 49. Little Bo Peep                         |   |
| 50. Little Miss Muffet                     |   |
| 51. Llego A Mi Medianoche                  |   |
| 52. Los Tres Reyes                         |   |
| 53. Mary Had A Little Lamb                 |   |
| 54. Mary Quite Contrary                    |   |
| 55. Mozart's Lullaby                       |   |
| 56. My Bonnie Lies Over The Ocean          |   |
| 57. My Old Kentucky Home                   |   |
| 58. My Wild Irish Rose                     |   |
| 59. Navidad, Navidad                       |   |
| 60. Noche De Paz                           |   |
| 61. Noche Santa                            |   |
| 62. O Holy Night                           |   |
| 63. Oh Christmas Tree                      |   |
| 64. Oh Come All Ye Faithful                |   |
| 65. Oh Little Town Of Bethlehem            |   |
| 66. Oh Ven Oh Ven Emmanuel                 |   |
| 67. Oh When The Saints Go Marching In      |   |

Any and all discs shown are for illustration only and may or may not represent the actual disc(s) included in this package



 
## Features

---




- CD+G/MP3+G Karaoke Player
- 7" TFT Color Screen
- Record CD+G/MP3+G Video/Audio mix
- PA System record function
- Record and Record Instant Playback
- 300W Peak Power Output
- Remote Control
- 2 Microphones
- 2 Microphone Inputs and Holders
- USB Slots (up to 32GB)
- USB Charger for Smart Device
- LED Lightings that Synchronize and Flash with the rhythm of Music
- Analog Echo Control
- Bluetooth wireless connection and Speaker
- Balance Control
- Digital Key Control
- Audio Input
- Audio and Video Output
- Audio/Video RCA Cable
- 3.5mm to RCA Cable
- AC 110V~240V Adaptor

## Front Panel Illustration

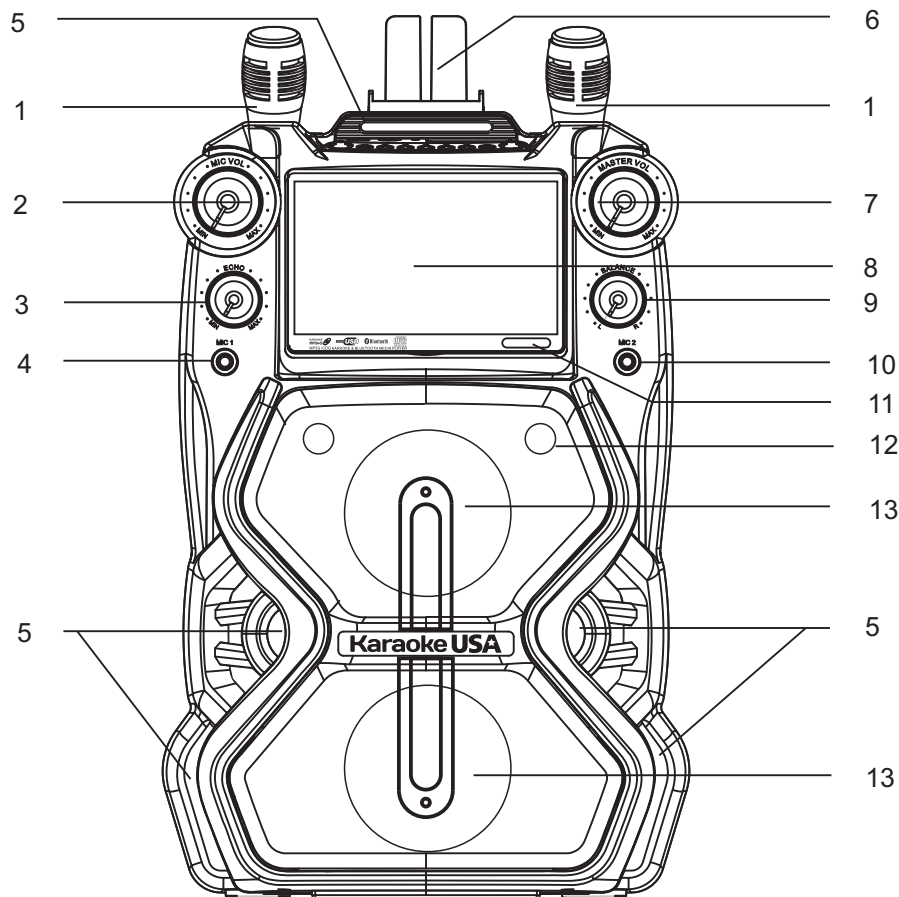


1. MICROPHONE HOLDER
2. MICROPHONE VOLUME CONTROL
3. ECHO CONTROL
4. MICROPHONE 1 INPUT
5. LED LIGHT
6. SMART DEVICE CRADLE
7. MASTER VOLUME CONTROL
8. TFT DISPLAY AND DISC DOOR
9. BALANCE CONTROL
10. MICROPHONE 2 INPUT
11. REMOTE SENSOR
12. SPEAKER (HIGH-RANGE)
13. SPEAKER (MID-RANGE)

## Top & Rear Panel Illustration

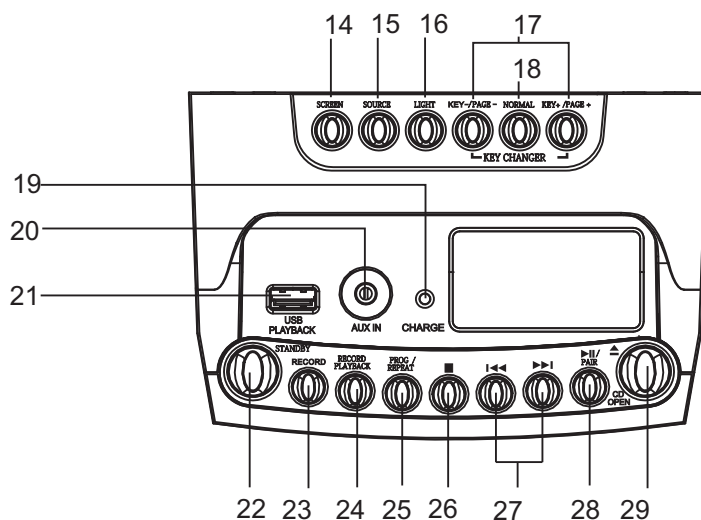 


- |                            |                                    |
|----------------------------|------------------------------------|
| 14. SCREEN Button          | 22. STANDBY Button                 |
| 15. SOURCE Button          | 23. RECORD Button                  |
| 16. LIGHT Button           | 24. RECORD PLAYBACK Button         |
| 17. KEY CHANGER Button :   | 25. PROG / REPEAT Button           |
| KEY- / PAGE- or KEY+/PAGE+ | 26. ■ STOP Button                  |
| 18. KEY NORMAL Button      | 27. I◀◀ / ▶▶I SKIP/ SEARCH Button  |
| 19. CHARGING Indicator     | 28. ▶II/PAIR / PLAY / PAUSE button |
| 20. AUX IN Input           | 29. ▲ DISC DOOR OPEN Button        |
| 21. USB Port For Play Back |                                    |

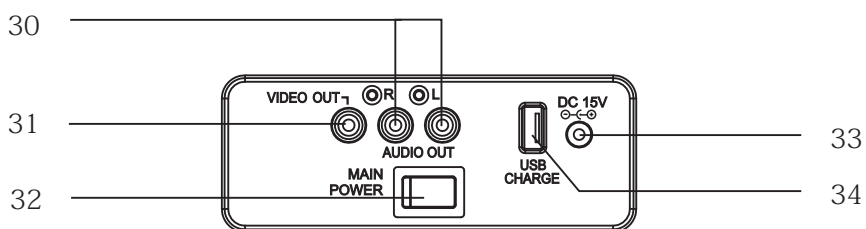 

- |                           |
|---------------------------|
| 30. AUDIO OUT RCA Jack    |
| 31. VIDEO OUT RCA Jack    |
| 32. MAIN POWER Switch     |
| 33. DC IN Jack            |
| 34. USB Port For Charging |

## Remote Control Functions

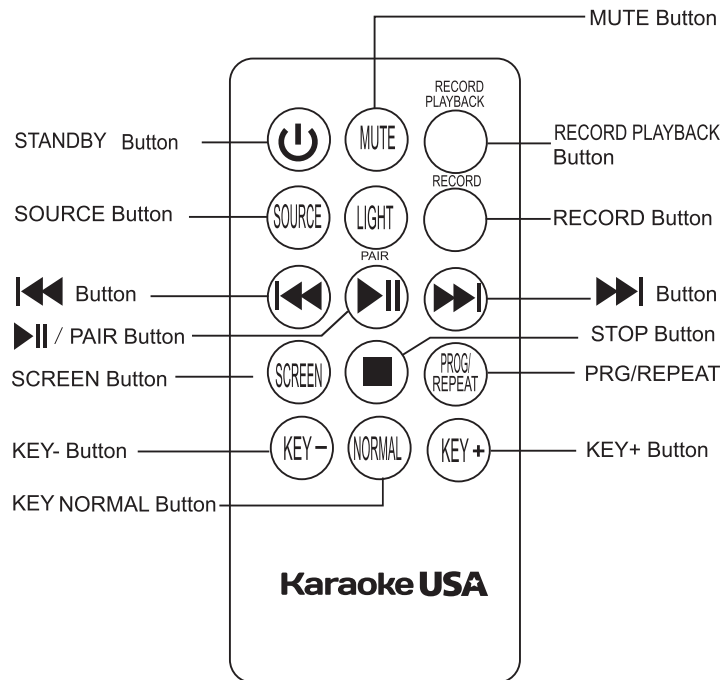 

### Notes:

1. Press the MUTE button of remote to mute the audio sound, press again to resume. Other button of remote same as main unit function.
2. Remove spacer tab before using this unit for first time .
3. Press the buttons of the remote to pointing the main unit remote sensor area to fully control the main unit.

### INSTALLING OR REPLACING REMOTE CONTROL BATTERY

 
1. Pull the battery door at the back of the unit as shown figure.
2. Insert the battery in the battery door with "+" positive facing up. Only CR2025 3V lithium battery should be used.
3. Insert the battery door with new battery back into the unit.

### BATTERY WARNING:


1. Make sure the correct polarity of battery to be installed.
2. Make sure you dispose of batteries properly (refer to your local regulations).
3. Do not open batteries.
4. Do not dispose of batteries in fire.
5. Do not heat up batteries.
6. Do not expose batteries to water.
7. Do not charge or recharge batteries.



## Monitor Message

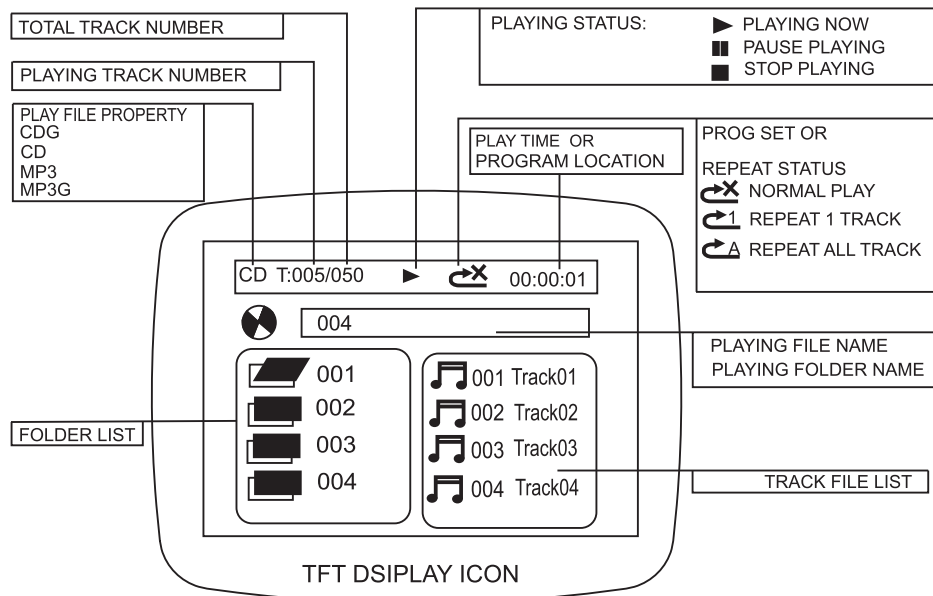

## Connect Power Adapter

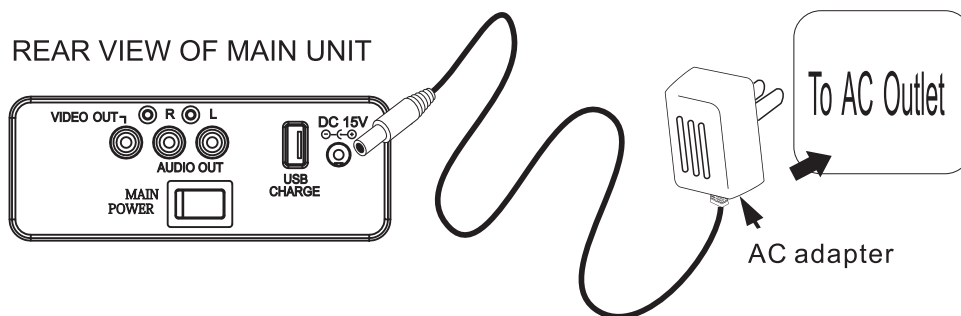 

Plug the included AC adapter into the standard AC power outlet to power the unit. Connect small end to DC INPUT jack of the KARAOKE MACHINE. After adapter connection, Slide the MAIN POWER switch to ON position and press STANDBY button to turn on unit. Press the SOURCE button ( unit or remote) to select USB / DISC / BLUETOOTH / AUX mode for listening.

## Charging Internal Battery

---

The KARAOKE MACHINE operates on a built-in battery that can be recharged using included adapter.

### CHARGING THE BATTERY FOR FIRST TIME

1. Connect the including adapter for start charging the internal battery
2. Charge the built-in battery a minimum of 12 hours prior to first use. Plug the included adapter for charging.
3. The CHARGING indicator will light to RED color while charging and turn to GREEN color when the unit is fully charged.
4. When battery charging completed, unplug the adapter.

### RECHARGING THE INTERNAL BATTERY

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the internal battery charge is low, the CHARGING indicator will turn "ON" RED color and FLASH" alerting you to recharge the internal battery as soon as possible.

### BATTERY WARNING:

 
1. Do not open batteries.
2. Do not dispose of batteries in fire.
3. Do not heat up batteries.
4. Do not expose batteries to water.

## Using Microphone


---

Requires a microphone (included 2 microphone) .

1. Plug the microphone (see below figure) into the MIC 1 INPUT or MIC 2 INPUT of the KARAOKE MACHINE.
2. Slide the ON /OFF switch of MICROPHONE,
3. Use the MIC VOL dial to adjust the volume of audio sound from the microphone.

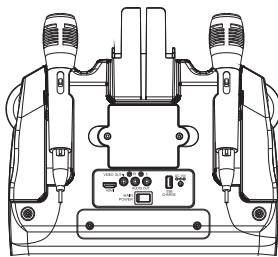

REAR VIEW OF MAIN UNIT

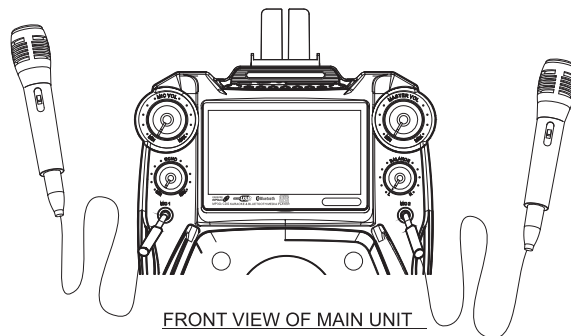 

FRONT VIEW OF MAIN UNIT

## Charging Your Mobile

 
Connect USB cable (not included) for charging your smart device.

1. Plug the standard end of the USB cable into the USB port located on the rear of the KARAOKE MACHINE. Plug the small end of the USB cable into the device you wish to charge.
2. Observe the battery charge indicator on your device and the charging will start immediately.
3. Remove the charging cable when charging complete.

Notes:

- USB charging port supplies DC 5V output,
- USB charging port cannot support data transfer or connect to computer.
- Do not connect USB port of this unit to other external power charger USB ports or computer, it may damage both units and void the warranty.

REAR VIEW OF MAIN UNIT

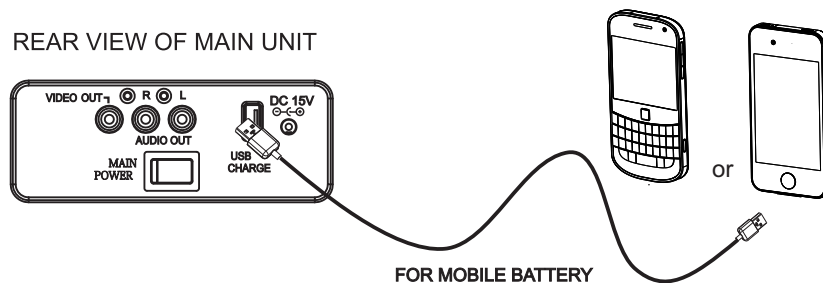


## Replace Built-in Battery

1. Push the POWER switch to OFF position.
2. Use screw driver to open the battery door
3. Move out the internal battery
4. Push in new battery pack into battery compartment.
5. Close the battery door.
6. Use screw driver to lock the battery door.

Notes:

- Batteries shall not be exposed to excessive heat such as sunshine, fire
- Only same or equivalent type batteries as recommend are to be used.
- Do not dispose of batteries in fire, battery may explode or leak.

 REAR VIEW OF MAIN UNIT

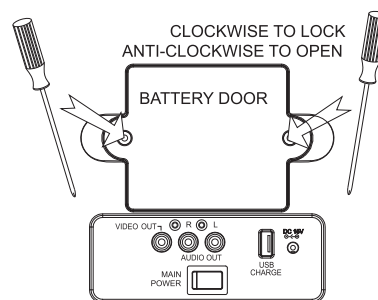


## Install Cradle

---

### INSTALL CRADLE INTO THE UNIT

 Install the cradle (included ) to hold the Mobile & Tablet onto unit.

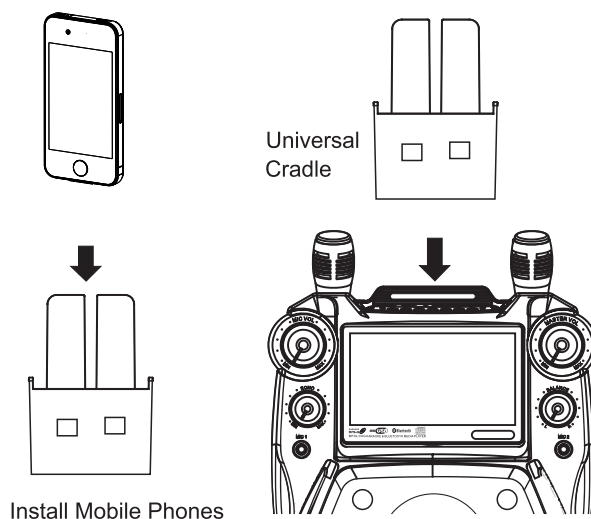


## Place Smart Device into Cradle

---

### PLACE EXTERNAL DEVICE

 
Insert Personal Player / Mobile Phone / Tablet with cradle onto the unit.

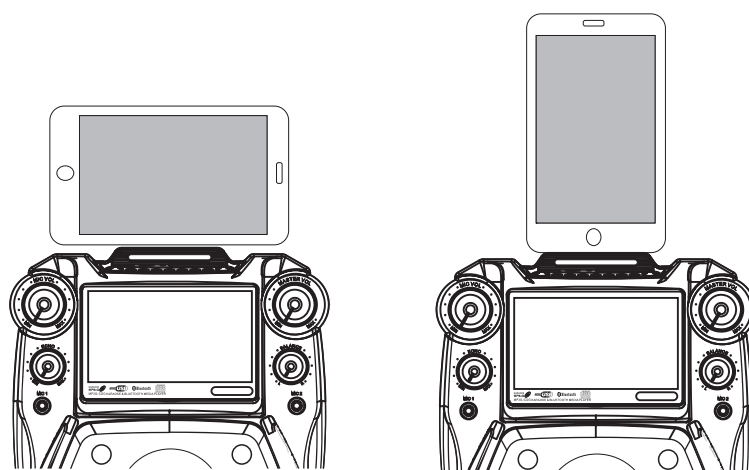



## Connecting to a Television / Ext. Device

 ---

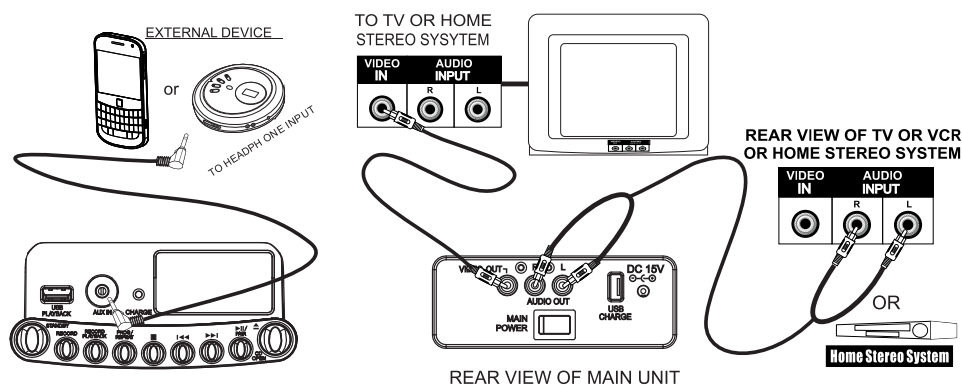

### AUX IN ( AUDIO IN / LINE IN )

To connect a MP3 Player or other Audio Device you will need a 3.5mm Auxiliary Cable.

1. Connect a 3.5mm Auxiliary Cable to the AUX IN jack on top of unit and to the Audio Output or Phones on the audio device you wish to play.
2. Press SOURCE button to AUX mode.
3. Turn on both units.
4. After the connection, the external device will sound from speakers of your unit.

### COMPOSITE VIDEO OUTPUT

1. Require an RCA video cable and plug the included RCA audio/video cable into the VIDEO OUT of the KARAOKE MACHINE and a composite video input on a television.
2. Adjust the television to the correct input setting.
3. When playing a USB ( MP3+G ) or CDG disc that the KARAOKE MACHINE will output written lyrics / video / image to the connected television.

### RCA AUDIO OUTPUT

 
1. Require an RCA audio cable and plug the included RCA audio/video cable into the AUDIO OUT of the KARAOKE MACHINE and a RCA audio input on a television or stereo system.
2. Adjust the television or stereo system to the correct input setting.
3. When playing the USB / Disc / Bluetooth that the KARAOKE MACHINE will output audio to the connected television or stereo system. Use the external device to control the output sound level.

## Loading a Disc

---

1. Turn on POWER follow previous page CONNECT POWER ADAPTER
2. Press the CD DOOR OPEN AREA to open the CD DOOR.
3. Place a DISC into the CD compartment.
4. Close the CD DOOR.
5. Press the SOURCE button to select DISC mode.

Notes: This unit is designed to play CDs bearing these identification logos.

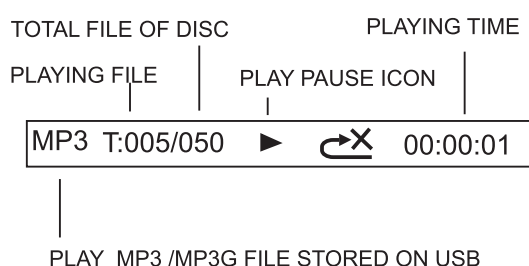

## Playing Disc Music

---

 
1. Turn on POWER and select DISC mode follow **LOADING A DISC** page.
2. Press **▶||** the button to begin playing the loaded disc. The PLAY/PAUSE icon will light on display.
3. Rotate the MASTER VOLUME dial to select the sound level.
4. To temporarily stop playing, press the **▶||** button once (PAUSE indicator will light ). To resume play, press the **▶||** button one more.
5. Press **◀◀/▶▶** buttons to skip between next or previous tracks.
6. Hold the **◀◀/▶▶** buttons to fast search through the track.  
**Note:** The fast-forward / fast-rewind functions will not work for CDG discs.
7. Search Folder : In stop mode, press PAGE + / PAGE- button to search.
8. Key Control : In music playing, press PAGE + / PAGE- button to select different sound speed.
9. Connect the VIDEO OUT jack to TV, the lyrics text will show on TV.
10. Press **■** the button to stop playing.

## Install USB Memory Stick

---

1. Turn on POWER follow previous page CONNECT POWER ADAPTER
2. Plug the USB memory stick to USB input jack ( on top panel of main unit).
3. Press the SOURCE button to USB mode. The USB playback start.

Notes: The system is able to decode and playback MP3 OR MP3+G files which are stored in the memory media of your USB thumb drive.

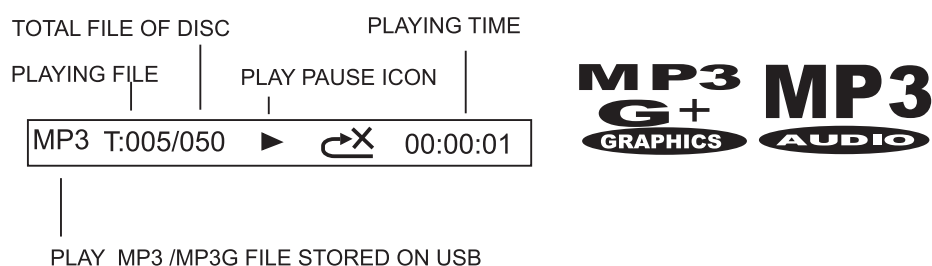

## Playing USB Music Files

---



 
1. Turn on POWER follow previous page **INSTALL USB MEMORY STICK**.
2. After install USB, the unit will be start play automatically.
3. If unit not start play, press the **▶||** PLAY/ PAUSE button to begin playing the loaded USB.  
Rotate the MASTER VOLUME dial to select sound level.
4. To temporarily stop playing, press the **▶||** button once to pause mode. To resume play, press the **▶||** button again.
5. Press **◀◀/▶▶** buttons to skip between next or previous tracks.
6. Hold the **◀◀/▶▶** buttons to fast search through the track.  
Note: The fast-forward / fast-rewind functions will not work for MP3G file.
7. Search Folder : In stop mode, press PAGE + / PAGE- button to search.
8. Key Control : In music playing, press PAGE + / PAGE- button to select different sound speed.
9. Connect the VIDEO OUT jack to TV, the lyrics text will show on TV.
10. Press **■** the button to stop playing.

 
## Using Repeat / Program

---

### REPEAT FUNCTION





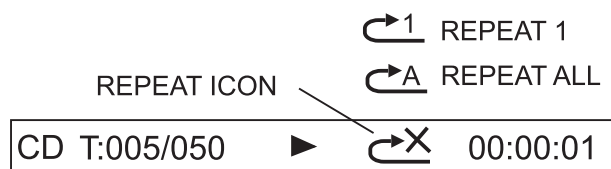
When play music on USB / DISC mode of the KARAOKE MACHINE.


1. To repeat the current track: Press the REPEAT button until the  icon will show on the display. The track will continue to play .
2. To repeat all the tracks: Pressing the REPEAT button until the  icon show in the monitor. All the tracks on the disc will be played repeatedly.
3. To clear the repeat function: Press the REPEAT button until the  icon show in the monitor.



### PROGRAM FUNCTION

 When play music on USB / DISC mode of the KARAOKE MACHINE.

1. Press the  button once to stop playing / on stop mode.
2. Press the PROGRAM button. The PROGRAM (PROG) SET 01:01 will show in the monitor, the track number "- -" digits are flashing.
3. If necessary, press the PAGE+ / PAGE- button to select folder.
4. Press the  /  button to select a desired track.
5. Press PROGRAM button to confirm entry.
6. You can repeat the steps 3-5 up to a maximum of 20 tracks. When maximum of 20 tracks have been programmed, "PROG FULL" message appears briefly in the monitor.
7. When you have completed programming and press  button to start playing.
8. Press  button twice or open the CD DOOR to clear all the programmed entries.

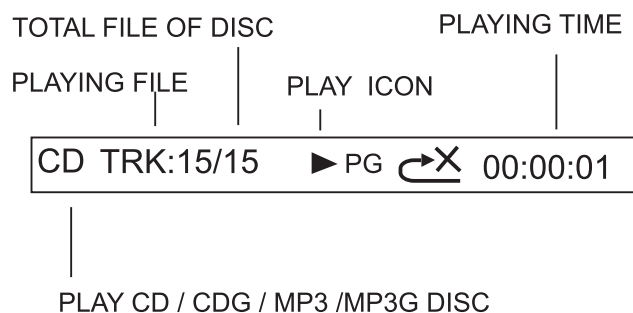

## Using Bluetooth

---

Connecting Bluetooth to your Smartphone / Tablet

1. Press the POWER button to turn on unit.
2. On your smartphone / Tablet, turn on Bluetooth and enable device scanning.
3. When GF920 shows on the Bluetooth scan, select it to connect it to your device.
4. When both devices are successfully connected, you are ready to play music wirelessly from your device.
5. Press the PLAY button of the KARAOKE MACHINE or external Bluetooth device to start music playback.
6. Press the ◀▶ button of the KARAOKE MACHINE next / previous of external Bluetooth device to switch between music tracks.
7. Hold the PAIR button to reconnect other Bluetooth device.

Notes: When your unit playing mobile music by Bluetooth and receiving an incoming call on your mobile phone, the music will be stop and ring sound from your mobile phone. Just end the call that the music will sound automatic.

## Disco Light

---

When unit turn on, the disco light will show on speaker panel. Press the LIGHT button to turn on /off the disco light show.

## Using Echo

---

Turn on KARAOKE MACHINE and connect microphone. Adjust the ECHO knob of KARAOKE MACHINE to enhance your voice for a concert hall effect.

## Using Balance

---

Turn on the KARAOKE MACHINE and play the MP3G file / CDG disc music. Rotate the BALANCE knob to hear the music and vocals or to hear the music only.

NOTE: To use the BALANCE function, a CD+G disc MP3G file must be used. Otherwise it will operate as a standard BALANCE control.

## Record Feature Instructions

---

This unit can record the unit music sound to USB from DISC / BLUETOOTH / AUX mode.

1. Turn on POWER follow previous page **INSTALL USB MEMORY STICK**.
2. Follow below step to use recording.

### Using recording from CD, CD+G, MP3, MP3G:

- a. Place the CD/CD+G/MP3+G disc on CD compartment.
- b. Press SOURCE button to DISC mode.
- c. Press **⏮/⏭** or PAGE +/ PAGE- button to search special track.
- d. Press **▶||** the button to start play.
- e. Finally, press the RECORD button to start recording. Press the button again to stop the recording.

### Using recording from BLUETOOTH :

- a. Press SOURCE button to BLUETOOTH mode.
- b. Connect the Bluetooth to external device.
- c. Press the **▶||** button to start play.
- d. Finally, press the RECORD button to start recording. Press the button again to stop the recording.

### Using recording from AUX :

- a. Press SOURCE button to AUX mode.
- b. Start play the external device.
- c. Finally, press the RECORD button to start recording. Press the button again to stop the recording.

Note: Make sure the USB enough memory for all recording

### Recall the recording file from USB

Turn on POWER follow previous page **INSTALL USB MEMORY STICK**.

Press SOURCE button to select USB mode

Press RECORD PLAYBACK button to start playback recorded file.

If more file show on display, press **⏮/⏭** button to select different file.

## Specification

---

AC/DC Power Adapter	Use included adapter AC Input : 120~240V , 50 / 60 Hz , DC Output : 15V , 2000 mA
Built-In battery	11.1V, 6000 mAh
USB Slot (Top)	Up to 32GB memory
USB Charger (Rear)	For Smart Devices Charging (5V/1000mA)
Music Format	Support CD / CDG / MP3+G/ MP3
Bluetooth	Support music share from mobile
Master Power Output	70W(RMS) /300W Peak Power
Mid-Range Speakers	45Hz-12KHz(5 inch,30W,6Ω) x 2
High-Range Speakers	17KHz-20KHz(1.5 inch,5W,6Ω) x 2

Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.

# Karaoke USA

KARAOKE USA  
1185 GOODEN CROSSING  
LARGO, FL 33778 USA

TECH SUPPORT: [WWW.KARAOKEUSA.COM/CS](http://WWW.KARAOKEUSA.COM/CS)  
DOWNLOAD SONGS: [WWW.SINGTHEHITS.COM](http://WWW.SINGTHEHITS.COM)  
SALES DEPARTMENT: [SALES@KARAOKEUSA.COM](mailto:SALES@KARAOKEUSA.COM)

Printed in China