

Karaoke USA

PROFESSIONAL DVD/CD+G /MP3+G KARAOKE PLAYER

User's Guide



MODEL:
GP978



Smart Device not included

Before operating this product, please read these instructions.

Contents

 
Warnings and Precautions.....	01
Important Safety Instructions.....	02
Caution.....	03
What's in the Gift Box.....	04
Song List on your Disc.....	05-06
Features.....	07
Front Panel Illustration.....	08
Panel Illustration.....	09
Connecting to a TV Set.....	10
Smart Device Connection	10
Remote Control.....	11
Remote Control Operation.....	12-14
Remote Control Preparation.....	15
How to Play a Disc.....	16
MP3G Disc and MP3G Format Music Playback.....	17
Play Bluetooth Music.....	18
Play SD Card and USB.....	19
Record Operation Procedures.....	20
Playback the Recorded File.....	21
The Setup Menu System.....	22-26
Specifications.....	26
Troubleshooting.....	27
Notes on SD Card.....	28

Warnings and Precautions

WARNING: To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

“**Caution Marking and Rating Label**” is affixed under the lid or on the bottom of the unit with a mass not exceeding 7kg.

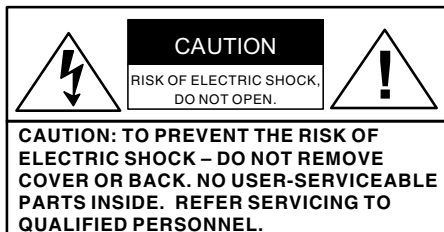

This symbol is intended to alert you to the presence of uninsulated, dangerous voltage within the unit's enclosure that might be of a sufficient magnitude to constitute a risk of electric shock. **DO NOT OPEN THE UNITS CASE.**



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

SAFETY

For units with an insertable AC Power Adapter cord set:

- The power adapter should remain operable for its intended use. Disconnect the AC Power Adapter if you are not intending to use the unit for a long period of time.
- When connecting or disconnecting the AC Power Adapter Cord, grip the plug and not the cord itself. Pulling the cord may cause damage and create a hazard.

For units with a Rechargeable Battery:

- Do not expose batteries to excessive conditions – extreme cold, heat, sun or fire.

MOISTURE AND CONDENSATION

If the unit is exposed to moisture and extreme cold temperatures and moved to a warm environment, condensation may form on the units internal components. Under these circumstances, turning the power “ON” may cause damage to the unit or cause harm to the user. Allow the unit to stand in a warm environment for 1 to 3 hours and allow the unit to air dry safely.

WHEN IN USE

- Do not use this unit in conditions that are extreme – hot, cold, dusty or humid.
- Do not restrict the air flow of the unit by placing it on a soft surface like a bed, carpet or covering.

FCC INFORMATION

This unit complies with part 15 of the “FCC Rules.” Operation is subject to the following conditions:

1. This unit may not cause harmful interference.
2. This unit must accept any interference received, including interference that may cause undesirable operation.



Double insulation.
This is a Class II apparatus.

Important Safety Instructions

1. Read These Instructions: All safety and operations manual should be read before the product is operated.

2. Keep These Instructions: The safety and operations manual should be retained for future reference.

3. Heed All Warnings: All warnings applicable to the unit and in the operations manual should be adhered to.

4. Follow All Instructions: All operations manual should be followed.

5. Water and Moisture: Do not use this unit near water. For example, do not use near a bath tub, wash bowl, kitchen sink, or laundry tub. Do not use this unit in a wet basement or near a swimming pool or similar location. The unit shall not be exposed to dripping or splashing and no objects filled with liquids (ex: vases), shall be placed on or near this unit.

6. Cleaning: Clean the unit only with a dry cloth. Unit must be unplugged from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the unit.

7. Ventilation: Slots and openings in the cabinet of the unit are provided to ensure reliable operation and ventilation and to protect the unit from overheating. The openings must not be covered and should never be blocked by placing the product on a soft surface like a bed, sofa, or rug. This unit should not be placed in a built-in installation like a bookcase or rack, unless proper ventilation is provided.

8. Heat: Do not install the unit near any heat source like a radiator, heat register, stove or other device that produces heat, including amplifiers.

9. Grounding or Polarization: If applicable, do not disable or circumvent the polarized or grounding-type plug. A polarized plug has 2 blades with 1 wider than the other. A grounding-type plug has 2 blades and a 3rd grounding plug. The wide blade, or the 3rd prong, is provided for your safety. If the provided plug does not fit into an outlet, consult a qualified electrician for replacement of this outlet.

10. Power Cord Protection: Protect the power cord from being walked on, pinched or cut or damaged in any

way. If any damage occurs, consult with a trained technician for repair.

11. Accessories: Only use accessories specified and approved by the manufacturer. Do not place this unit on an unstable cart, stand, tripod, bracket or table that has not been previously approved by the manufacturer. This unit may fall, causing serious injury to a child, adult or to the unit itself. Any mounting of the unit should be done within the manufacturer's guidelines.

12. Transporting: If a pre-approved device is used to transport this unit, caution and care must be observed and practiced to avoid damages. Make sure the device and unit together are stable before moving.



S3125A

PORTABLE
CART
WARNING

13. Lightning: Unplug this unit and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will help prevent damage to the unit due to lightning and power line surges.

14. Servicing: Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

 
15. Power Sources: Only connect to the type of household power supply as indicated in the operations manual and "Caution Marking and Rating Label." If you are not sure of the type of power supplied to your home (or location of the outlet the unit is being plugged into), consult with the local power company. For units intended to operate from battery power, or other sources, refer to the manufacturer's operations manual.

16. Overloading: Do not overload wall outlets or extension cords. This can result in a risk of fire or electric shock and may be hazardous.

17. Foreign Material: Protect this unit from intrusion of any foreign substances like dirt, water, moisture and insects. Do not force any foreign materials or chemicals into this unit. This could result in a risk of fire or electric shock and may be hazardous.

18. Replacement Parts and Safety Check: When replacement parts are required, be sure the service technician has used replacement parts specified and approved by the manufacturer. Ask the service technician to perform safety checks to ensure the proper operation to avoid possible fire, electric shock or other hazards.

19. Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. If there is any doubt to the proper grounding of these systems, contact a qualified electrician to inspect your location.

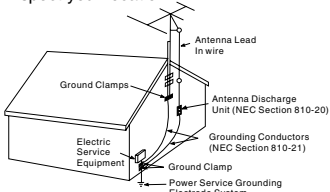

20. Wall or Ceiling Mounted: The unit should be mounted to a wall or a ceiling only as recommended by the manufacturer.

21. Disconnect Device: Make sure all disconnect devices are in proper working condition and readily available in the event of an emergency or if power "off" is needed quickly.

22. Protective Attachment Plug: If applicable, this unit may be equipped with an attachment plug having overload protection. This is a safety feature. See the operations manual for replacement or resetting of this protective device. If replacement of the plug is required, be sure the qualified service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

23. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal. Always consult with your local power company before installing an outside antenna.

Caution

- Please use the original box and packing materials for safe transportation of this product.

- It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.

- Do not move this product during playing. Doing so may cause damage to the pickup and the disc.

- Press OPEN/CLOSE button to open tray (on the top). Do not pull the tray. Do not touch the tray when opening or closing.

- USB Flash Devices and SD Cards should be formatted to FAT32 on your computer before use.

- When EQ function /key control is turned on, the Recording effect/result would not be ideal.

- Do not use hard or sharp instruments to touch the TFT Screen, it may scratch or damage its surface!

What's in the Giftbox?



GP978 X 1



Microphone x 2



RCA Cable x 1



 
Smart Device
Holder x 1



AC Cord x 1



Remote Control x 1

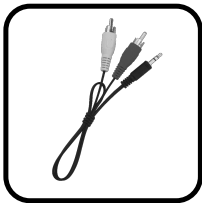

Cable for
Smart Device x 1



MP3G Demo
Disc x 2



User's Guide x 1



Warranty Card x 1

Song List on your Discs

9347 Sing A Long Karaoke Songs (200 Traditional Karaoke Songs)

1. Alexander's Ragtime Band
2. All Things Bright And Beautiful
3. All Through The Night
4. Alouette
5. Alphabet Song, The
6. America (My Country 'Tis Of Thee)
7. Animal Fair
8. Around And Around The Village
9. Aye Aye Aye The Limerick Song
10. B I N G O
11. Baa Baa Black Sheep
12. Barney Buntline
13. Be Kind To Your Web Footed Friends
14. Bear Went Over The Mountain
15. Big Rock Candy Mountain
16. Billy Boy
17. Billy Fringle
18. Bird's Song
19. Blessed Assurance
20. Blow The Man Down
21. Blue Bells Of Scotland
22. Bluebird
23. Bollweevil
24. Bye, Baby Bunting
25. Caissons Go Rolling Along
26. Calendar Song
27. Camptown Races
28. Capital Ship, A
29. Cat Came Back, The
30. Cinderella
31. Clementine
32. Cock A Doodle Doo
33. Cockles And Mussels
34. Cocky Robin
35. Colors
36. Come, O Come, Emanuel
37. Counting Song
38. Crowdad Song
39. Crocodile, The
40. Cuckoo Is A Pretty Bird
41. Day And Night
42. Dixie
43. Do Your Ears Hang Low
44. Dry Bones
45. Elephant And The Flea
46. Father Grumble
47. Fiddle De De
48. Fishes
49. Five Currant Buns
50. For He's A Jolly Good Fellow
51. For Me And My Gal
52. Fox
53. Frere Jacques
54. Froggie Went A Courting
55. Georgie Porgie
56. German Lullaby
57. Girls And Boys Come Out To Play
58. Git Along Little Dogies
59. Golden Slumbers
60. Good Morning Merry Sunshine
61. Goosey Goosey Gander
62. Grasshopper
63. Grasshoppers Three
64. Greensleeves
65. Ground Hog
66. Harrigan
67. Here We Go Around The Mulberry Bush
68. Here We Go Looby Loo
69. Hey Diddle Diddle
70. Hickory Dickory Dock
71. Higgledy Piggledy My Black Hen
72. Home On The Range
73. Humpty Dumpty
74. Hunting We Will Go, A
75. Hush Little Baby
76. Hush-a-bye
77. I Am A Young Musician
78. I Gave My Love A Cherry
79. I Had A Little Nut Tree
80. I Love You Truly
81. I Spy
82. If You're Happy And You Know It
83. I'll Take You Home Again, Kathleen
84. I'm A Little Teapot
85. I'm Always Chasing Rainbows
86. I'm Looking Over A Four Leaf Clover
87. In The Good Old Summertime
88. It Ain't Gonna Rain No More
89. It's Raining It's Pouring
90. I've Been Working On The Railroad
91. Jack And Jill
92. Jack Be Nimble
93. Jack Spratt
94. Jenny Jenkins
95. Jimmy Crack Corn
96. Lady Bird Lady Bird
97. Letters Of The Alphabet
98. Little Black Bull
99. Little Boy Blue
100. Little Jack Horner
101. Little Sally Waters
102. Little Things, The
103. Little Tommy Tucker
104. London Bridge Falling Down
105. London Street
106. Ma She's Making Eyes At Me
107. Mademoiselle From Armentieres
108. Marine's Hymn
109. Michael Row The Boat Ashore
110. Midnight Special, The
111. Moonlight Bay
112. My Old Dog Tray
113. My Old Hen
114. Now I Lay Me Down To Sleep
115. Oats Beans And Barley Grow
116. Off To Bed Now
117. Oh Dear What Can The Matter Be
118. O! Woman Who Lived In A Shoe
119. Old Blue
120. Old John Braddlem
121. Old Mother Hubbard
122. On The Banks Of The Sacramento
123. On Top Of Old Smokey
124. One Meat Ball
125. One Two Buckle My Shoe
126. One Two Three Four Five
127. Oranges And Lemons
128. Over In The Meadow
129. Over The River And Through The Woods
130. Pat A Cake
131. Pease Porridge Hot
132. Peg O' My Heart
133. Peter Peter Pumpkin Eater
134. Polly Put The Kettle On
135. Polly Wolly Doodle
136. Pop Goes The Weasel
137. Ride A Cock Horse To Banbury Cross
138. Right Hand Says Good Morning
139. Ring Around The Rosie
140. Rise And Shine
141. Rock A Bye Baby
142. Rock A Bye Baby Green
143. Rock Island Line
144. Rocking The Cradle
145. Rose Of Tralee
146. Row Row Row Your Boat
147. Russian Cradle Song
148. Sailing Sailing
149. School Days
150. She'll Be Coming Around The Mountain
151. Shoo Fly Don't Bother Me
152. Shortening Bread
153. Simple Simon
154. Sing A Song Of Sixpence
155. Six Little Ducks
156. Skip To My Lou
157. Sleep Baby Sleep
158. Spelling
159. Spider And The Fly, The
160. Star Spangled Banner, The
161. Sur Le Pont D'avignon
162. Swanee River
163. Sweetly Sings The Donkey
164. Swing Low Sweet Chariot
165. Tailor And The Mouse
166. Take Me Out To The Ball Game
167. Ten In A Bed
168. The Ants Go Marching
169. The Eensy Weensy Spider
170. The Farmer In The Dell
171. The Holly And The Ivy
172. The Muffin Man
173. The Old Gray Mare
174. There Was A Little Man
175. There Was A Tree
176. There's A Hole In Middle Of Sea
177. This Little Pig Went To Market
178. This Old Man
179. Three Blind Mice
180. Three Little Kittens
181. Three Little Pigs
182. Tisket A Tasket, A
183. To Market To Market
184. Toot Toot Toosie Goodbye
185. Try Try Again
186. Tura Lura Lura
187. Turkey In The Straw
188. Vive La Compagne
189. Wabash Cannonball, The
190. Waltzing Matilda
191. We Hunted And We Hunted
192. We Three Kings
193. What Child Is This
194. When Johnny Comes Marching Home
195. Where Oh Where Has My Little Dog Gone
196. Who Threw The Overalls In Mrs. Murphy's Chowder
197. Wish You A Happy Birthday
198. World Turned Upside Down, The
199. Yankee Doodle
200. Yellow Rose Of Texas

Any and all discs shown are for illustration only and may or may not represent the actual disc(s) included in this package.

 
Song List on your Discs

9346 Favorite Karaoke Songs (100 Traditional English and Spanish Karaoke Songs)

1. Abide With Me
2. Amazing Grace
3. Angel De Los Reinos Santos
4. Angels From The Realms Of Glory
5. Angels We Have Heard On High
6. April Shower
7. Auld Lang Syne
8. Ave Maria
9. Away In A Manger
10. Battle Hymn Of The Republic
11. Bicycle Built For Two
12. Bill Bailey, Won't You Come Home
13. Boom, Boom, Ain't It Great To Be Crazy
14. Brah'm's Lullaby
15. Bringing In The Sheaves
16. Campanas de Navidad
17. Church In The Wildwood
18. Con Mi Burrito Sabanero
19. Daddy Sang Bass
20. Danny Boy
21. Deck The Halls
22. Ding Dong Que Alegria
23. Doce Dias De Navidad
24. Down By The Riverside
25. El Buen Rey Weceslao
26. El Primer Noel
27. El Tamborilero
28. First Noel, The
29. Frankie And Johnny
30. Give My Regards To Broadway
31. Go Tell It On The Mountain
32. God Rest Ye Merry Gentlemen
33. Hail Hail The Gang's All Here
34. Hark! The Herald Angels Sing
35. He's Got The Whole World In His Hand
36. His Eye Is On The Sparrow
37. How Great Thou Art
38. I Love To Tell The Story
39. I'll Fly Away
40. In The Garden
41. It Came Upon A Midnight Clear
42. It Is No Secret What God Can Do
43. Jeannie With The Light Brown Hair
44. Jesus Loves Me
45. Jingle Bells (Childrens)
46. Joy To The World
47. Just A Closer Walk With Thee
48. Let Me Call You Sweetheart
49. Little Bo Peep
50. Little Miss Muffet
51. Llego A Mi Medianoche
52. Los Tres Reyes
53. Mary Had A Little Lamb
54. Mary Quite Contrary
55. Mozart's Lullaby
56. My Bonnie Lies Over The Ocean
57. My Old Kentucky Home
58. My Wild Irish Rose
59. Navidad, Navidad
60. Noche De Paz
61. Noche Santa
62. O Holy Night
63. Oh Christmas Tree
64. Oh Come All Ye Faithful
65. Oh Little Town Of Bethlehem
66. Oh Ven Oh Ven Emmanuel
67. Oh When The Saints Go Marching In
68. Oh You Beautiful Doll
69. Oh, Susanna
70. Old King Cole
71. Old MacDonald Had A Farm
72. Old Time Religion
73. One Day At A Time
74. One More River To Cross
75. Onward Christian Soldiers
76. Peace In The Valley
77. Precious Lord Take My Hand
78. Precious Memories
79. Rock Of Ages
80. Rock-A-My Soul
81. Silent Night
82. Sweet By And By
83. Sweet Hour Of Prayer
84. The Little Drummer Boy
85. The Lord's Prayer
86. The Old Rugged Cross
87. This Little Light Of Mine
88. Toda La Noche
89. Twelve Days Of Christmas
90. Twinkle Twinkle Little Star
91. We Gather Together
92. We Wish You A Merry Christmas
93. Wedding Song (There Is Love)
94. What A Friend We Have In Jesus
95. When Irish Eyes Are Smiling
96. When The Roll Is Called Up Yonder
97. While Shepherds Watched, Their Flocks
98. Whispering Hope
99. Ya Llego La Navidad
100. You're A Grand Old Flag

Any and all discs shown are for illustration only and may or may not represent the actual disc(s) included in this package.


Features

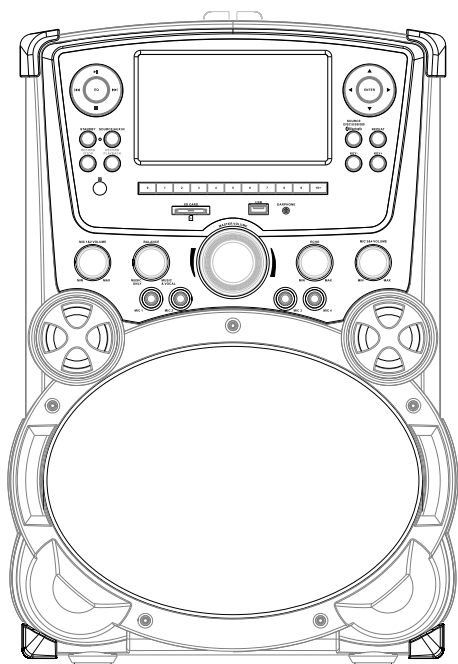

- Professional DVD, CD+G and MP3+G Karaoke Player
- 7" TFT Digital Color Display
- Record CD+G/MP3+G Video/Audio mix
- Record and Record Instant Playback
- 180 Watts Peak Power Output
- Numeric Direct Access to Select Songs
- Analog Echo Control
- Bluetooth wireless connection and Speaker
- EQ Control
- Music and Vocal Balance Control
- Digital Key Control
- Repeat One/All
- USB 2.0 and SD Card Slot (up to 128GB)
- Video & Audio In/Out
- USB Charger for Smart Devices
- AUX input (from Smart Devices)
- Audio/Video RCA Cable (Included)
- 4 Microphone Inputs & Holders
- Remote Control
- Smart Device Compatible
- Hi-Definition Signal Output to Your External TV

Front Panel Illustration

 
Front

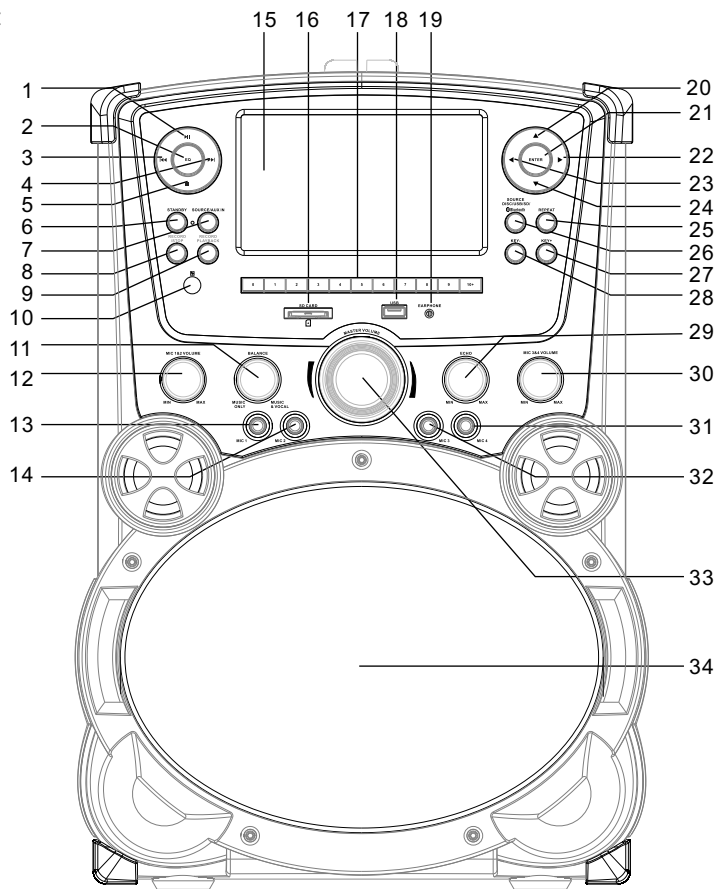


1. : Play or Pause.
2. EQ: Set different sound effect mode (STANDARD, CLASSIC, ROCK,JAZZ,POP,USER).
3. : Previous song or content.
4. : Next song or content.
5. : Stop.
6. STANDBY: Switch the player On/Off.
7. SOURCE/AUX IN: Select Play mode from Disc or Aux In source.
8. RECORD/STOP: Record start & stop.
9. RECORD PLAYBACK: Playback the recorded track.
10. :Infrared Remote Control .
11. BALANCE: MUSIC ONLY/MUSIC & VOCAL adjust.
12. MIC 1&2 VOLUME: Microphone 1 & 2 volume control .
13. MIC1: Microphone 1 input jack.
14. MIC2: Microphone 2 input jack.
15. Digital Monitor : 7" TFT color screen.

Panel Illustration

 16. SD CARD: SD slot to accommodate SD cards.
17. NUMBER KEYS: Press to Direct Access of a track number for playing, changing and programming.
18. USB: For transferring songs from your USB stick.
19. EARPHONE: Standard 3.5mm headphone jack.
20. ▲ : Navigate UP at the menu.
21. ENTER: Select a menu item.
22. ► : Navigate RIGHT at the menu.
23. ◀ : Navigate LEFT at the menu.
24. ▼ : Navigate DOWN at the menu.
25. REPEAT: Repeat the song playing.
26. SOURCE(DISC/USB/SD/Bluetooth): Source select from Disc, SD Card , USB Flash or Bluetooth.
27. KEY+: Raise the tone.
28. KEY-: Lower the tone.
29. ECHO: Enhance vocal quality when singing. rotate right to MAX to increase echo effect, rotate left to MIN to reduce echo effect.
30. MIC 3&4 VOLUME: Microphone 3 & 4 volume control
31. MIC4: Microphone 4 input jack.
32. MIC3: Microphone 3 input jack.
33. MASTER VOLUME: Master volume control.
34. Speaker: Audio speaker.

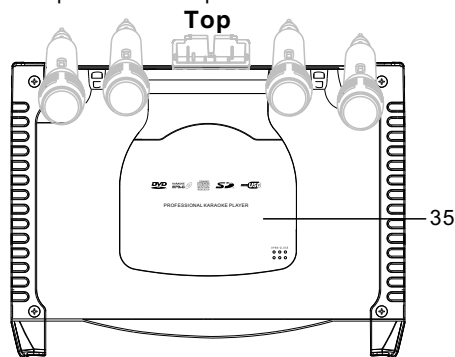


 35. CD DOOR: Open or Close to load or unload discs.
36. Smart Device Cradle (Removable).
37. Telescoping handle for good portability.
38. Air Vent.
39. AC Socket(for Power Cord supplied).
40. POWER ON/POWER OFF: Turn unit on/off.
41. HDMI OUTPUT: Hi-Definition Signal Output to Your External TV
42. USB CHARGER for smart device (1 Amp/5V power).
43. AUDIO OUT : RCA Jack R&L.
44. VIDEO OUT: RCA Jack(Yellow).
45. AUDIO IN : RCA Jack R&L.
46. VIDEO IN: RCA Jack(Yellow).
47. Wheels

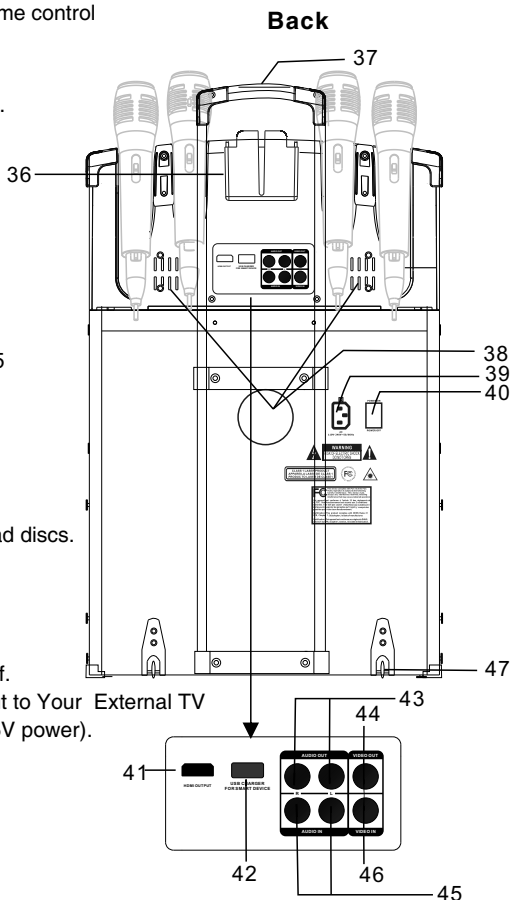


Connecting to a TV Set

 To watch lyrics on your TV screen, connect the yellow (video), red (audio) and white (audio) RCA ends into the matching color jacks on the TV. To view lyrics, you must select an input channel on your TV (Video1, Video 2 , Aux, etc.)

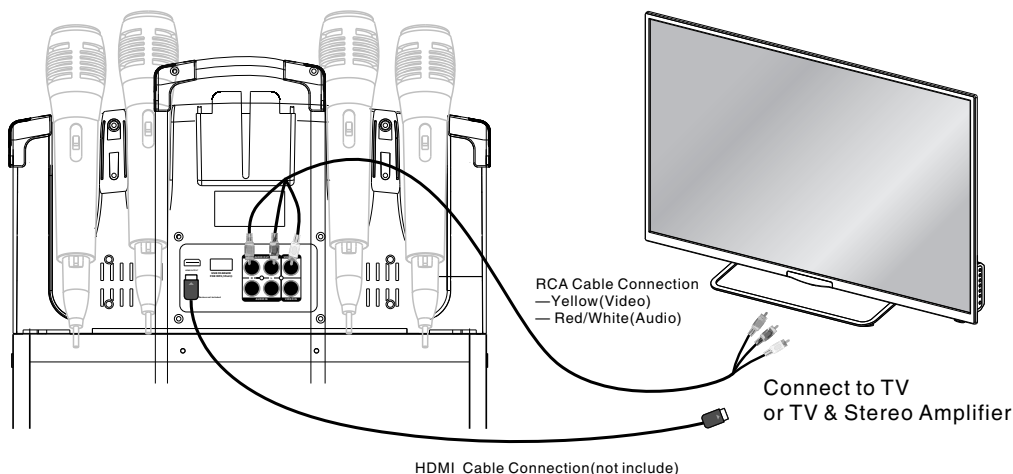

Smart Device Connection

 Charge your device while listen to the music:

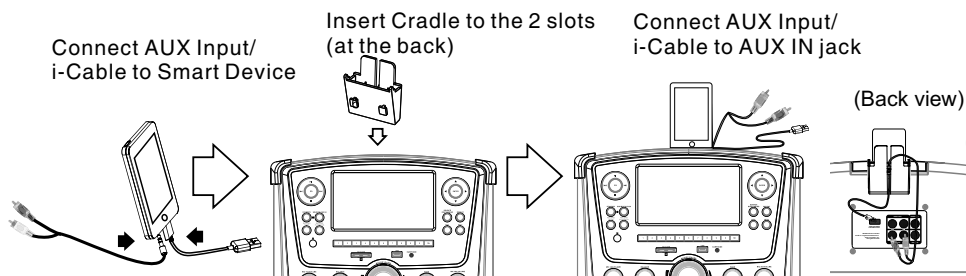


Connect your USB charging cable(not provided)to the USB slot (at back of machine)for charging

To charge your Smart Device, connect the charging cable to the USB port

NOTES.

- 1.If connecting to a surround sound or enhanced sound system, you may have to temporarily disable the sound effect(s). Sound systems manipulate incoming audio to give you the desired sound effect. This effect may cause two unwanted results: the timing between the audio and lyrics displayed on screen, and an echo affect on the audio.
- 2.To play music from your Smart Device, please connect it's headphone to the 3.5mm AUX-IN jack on the Karaoke Machine, then select AUX IN mode , Audio music will play through the speaker.You will not see lyrics showing on the screen ,music only.

 Remote Control

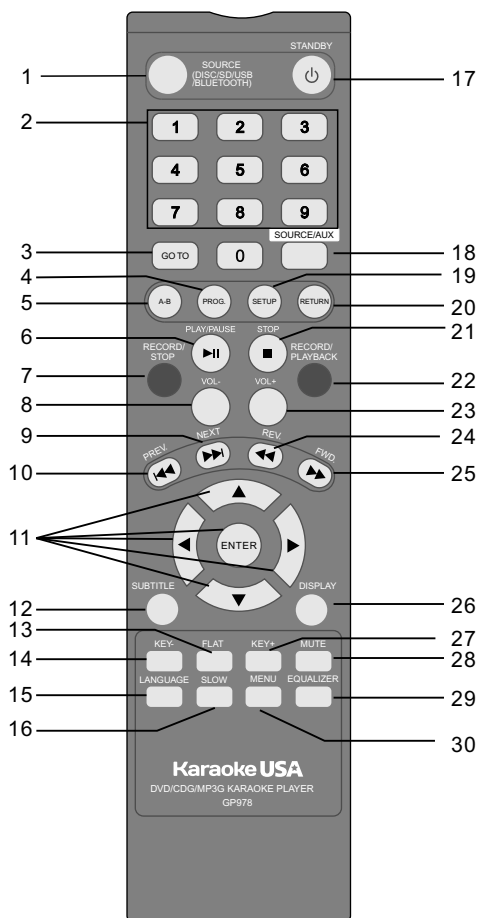

1. SOURCE/(DISC/SD/USB/BLEETOOTH)
2. NUMERIC KEYS
3. GOTO
4. PROGRAM
5. A-B
6. PLAY/PAUSE
7. RECORD/STOP
8. VOL-
9. NEXT
10. PREV. (PREVIOUS)
11. UP/DOWN/LEFT/RIGHT&ENTER BUTTON
12. SUBTITLE
13. FLAT
14. KEY-
15. LANGUAGE
16. SLOW
17. STANDBY
18. SOURCE/AUX
19. SET UP
20. RETURN
21. STOP
22. RECORD/PLAYBACK
23. VOL+ (VOLUME) Louder
24. REV. (REVERSE)
25. FWD (FORWARD)
26. DISPLAY
27. KEY+
28. MUTE
29. EQUALIZER
30. MENU

NOTES:

1. In this Manual, the directional symbols “◀▶▲▼” are NAVIGATION ARROWS on the Remote Control.
2. To operate any of the Remote Control functions, you must press and enter the relevant DISC, SD, USB mode.

 
Remote Control Operation

SOURCE
(DISC/SD/USB/BLUETOOTH)


1.



- Press to change media in [DISC->USB->SD->BLUETOOTH]. Press and Select.



 2.

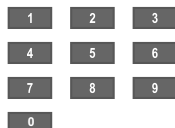


- Use to specify a track number for playing or programming.

3.



- During playback, press GOTO show the current time counter position.

 Enter number to choose the title

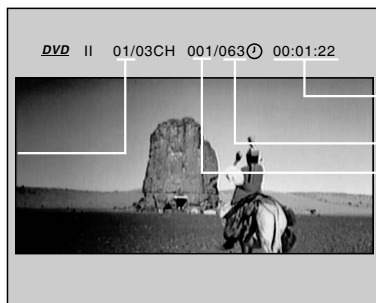


Enter number to choose the Play time
Total Chapter
Enter number to choose the chapter.

4.


PROGRAM



 - This is the function provide you to listen the tracks in a desire order. While [PROGRAM] is on, press ENTER to display the [Program submenu]:

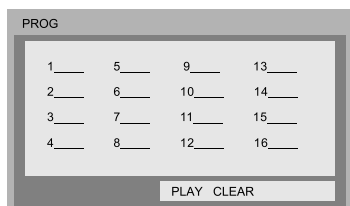

 Input the track numbers in the order you would like them to play. When you have finished, press PLAY then press ENTER to play the tracks in the new programmed order. Select CLEAR then press ENTER to clear all numbers

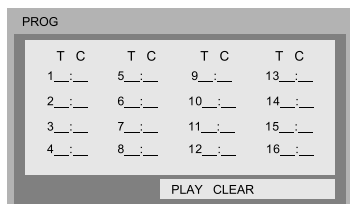

Input the title and chapter numbers in the desired order. Then press PLAY then press ENTER to play the chapters in the order you have set. Select CLEAR then press ENTER to clear all the numbers.

5.



- Press A-B first to set location A: REPEAT: A-,press again to set location B, and then playback will repeat during the two locations: REPEAT: A-B.Press A-B the third time to cancel the function and return to normal playback: REPEAT: CANCEL.

PLAY/PAUSE

6.



- Press PLAY to start playing. Press PAUSE during playback to pause.








 



 





RECORD/STOP

7.



- Record your vocal and music to the USB or SD card. (Note: USB or SD card must be inserted before start recording. DVD disc is not available for recording.)

 
Remote Control Operation

8.  ● Decrease the volume of analog audio output.
9.  ● Press NEXT to skip to next chapter or track.
10.  ● Press PREV. to skip to previous chapter or track.
11.  ● Used for navigation within a selection menu.
12.  ● Press to display the subtitles.
(Only applicable in movie, depends on your disc or your download file.)
13.  ● Set the music key as normal.
14.  ● Transpose the music key down.
15.  ● To select the movie language.
16.  ● To view a scene in slow motion (DVD disc).
17.  ● Turn the DVD player On/Off
18.  ● Press to change media in [SOURCE(DISC/USB/SD/BLUETOOTH)- > AUX IN].
Select and press “ENTER”. 
19.  ● Press to setup the TV settings according to your needs.
20.  ● Works with the PBC function to return to a menu screen while playing.
21.  ● Press STOP once during playback to stop and hold playback.
● Press PLAY to resume playback from the point you pressed STOP.
● Press STOP twice to stop playback completely.
22.  ● Press this button to listen the music that you **JUST** recorded.
23.  ● Increase the volume of analog audio output.

Remote Control Operation

24. **REV.**


- During CD/DVD playback, keep pressing **◀◀** to scan reverse. The player will review the disc at 2,4,8 and 20 times normal speed as follows:
(CD+G and MP3+G disc not applicable)



Press PLAY to resume normal playback.

25. **FWD.**

 
- During CD/DVD playback, keep pressing **▶▶** to scan forward. The player will review the disc at 2,4,8 and 20 times normal speed as follows:
(CD+G and MP3+G disc not applicable)



Press PLAY to resume normal playback.

26. **DISPLAY**

 - During playback, press DISPLAY to show the current time counter position.

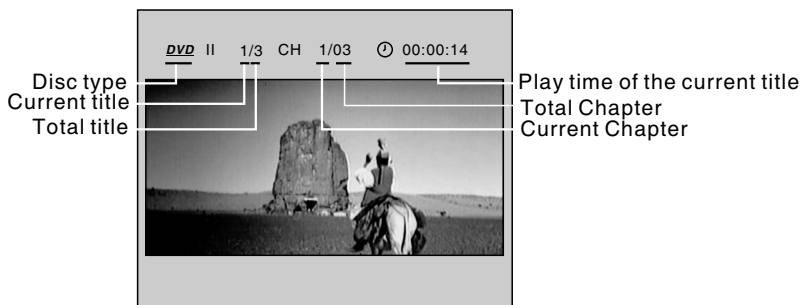

Press DISPLAY to show the audio and subtitle message menu.



27. **KEY+**

- Transpose the music key up.

28. **MUTE**

- Press MUTE to cut the Audio output.
Press MUTE again to resume normal Audio output.

29. **EQUALIZER**

- This key is set the different sound effect of the music.

 
30. **MENU**

- During DVD, playback, press MENU to return to the program menu.
Note: This function is subject to the disc.


Remote Control Preparation

Battery installation


1. Open the Cover

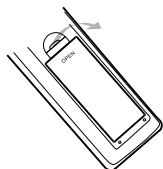


 
2. Install Batteries (AAA 1.5Vx2, not included)

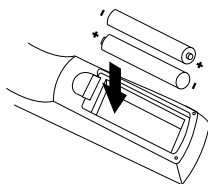

 3. Close the Cover

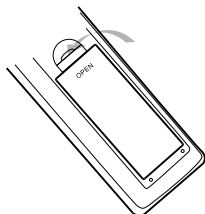

Using the remote control

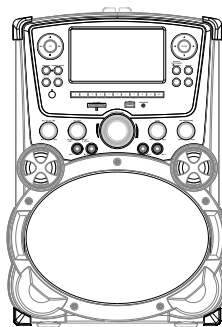  


Notes:

- Point the Remote Control directly to the sensor of the machine.
- Do not leave the Remote Control in an extremely hot or humid place.
- Do not spill water or put anything wet on the Remote Control.
- When this machine will not be used for an extended period of time, please remove all Batteries from the Battery Compartment.


How to play a disc

Your GP978 will support DVD ,CD,CDG,MP3,and MP3G format disc.

 1. Connect to power outlet;

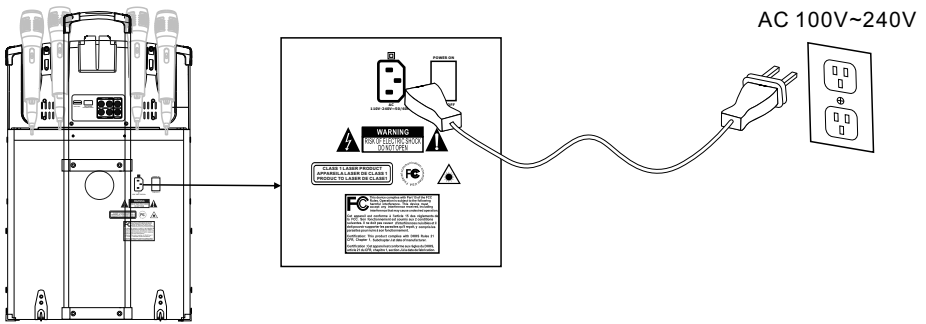


 
2. Push OPEN/CLOSE to load your disc;

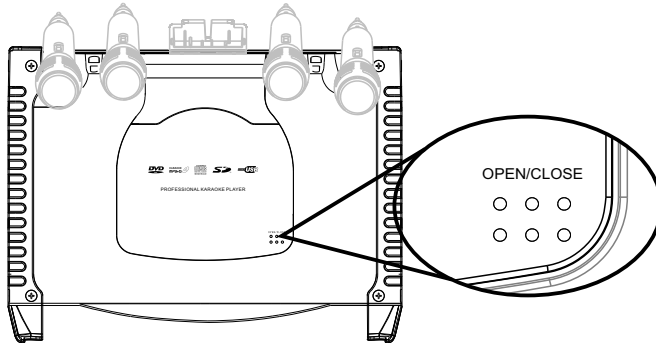

3. Push again to close the CD door;
4. Turn on the unit, the power indicator will light up;
5. Press PLAY to start playing your disc .

MP3G Disc and MP3G Format Music Playback

  When an MP3G Disc,SD Card or USB device is connected,the screen will display as follows:

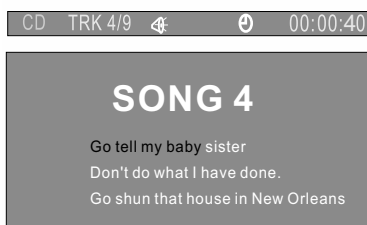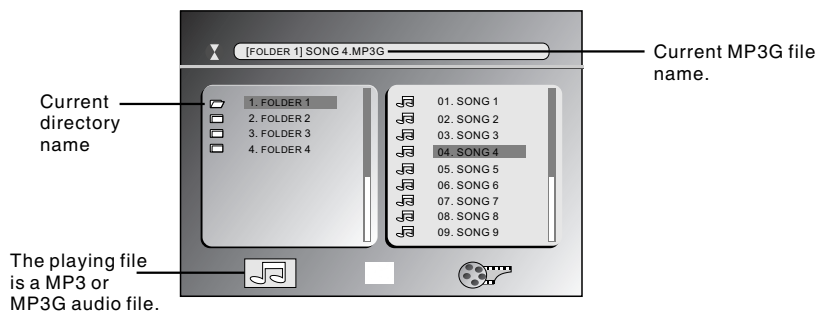

Press ▲ ▼ to select the file when the cursor appears in the file window.
Press PLAY to play the current file selected by the cursor.
Press ◀ ▶ to switch between the directory window and the file window.

 
Notes: The machine will not function correctly under the following condition:

1. The disc is badly scratched, damaged or dirty.
2. The recording format is not supported by the player.

Play Bluetooth Music

1. Pairing your Smart Phone using Bluetooth :

- A. Power the machine ON and then select DISC/USB/SD/BLUETOOTH mode.
- B. Select Bluetooth mode with the DISC/USB/SD/BLUETOOTH button.

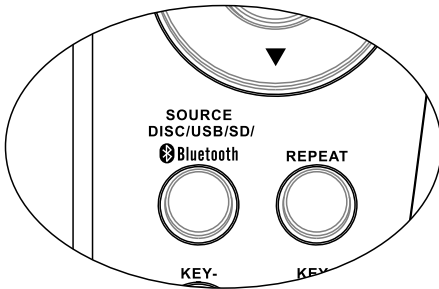

(on the Front Panel or on the Remote Control)

When in Bluetooth mode, the screen shows : “BLUETOOTH NO CONNECTION”.

2. Setting your Smart Device to “explore” the unit.

- A. Activate your Bluetooth function on your smart device.
- B. Click “Setting” and select “Bluetooth”

3. Using your Smart Device to connect to the Machine

- A. Your Smart Device will Discover: GP978.
- B. Select GP978.
- C. To accept the pairing to your smart Device .
- D. If they are paired, the screen will show: “Bluetooth Connected” and you will hear a “beep” sound.
- E. If they are not paired, the screen will show : “BLUETOOTH NOT CONNECTION”.
- F. Please repeat “Steps 1,2 & 3” above until they are paired.

4. Play Audio via Bluetooth After Pairing:

 
- A. Select the song files that you wish to play from your Smart Device.
- B. Then press “▶II” to start sending to the Machine by Bluetooth connection.
- C. Always remember to use full volume to send your song files from your smart device.
- D. Adjust the Master Volume on the Machine to a comfortable level when necessary.
- E. Music will be put “on Hold” automatically when your Smart Device receives a phone call to let you answer. The music will resume when you end the call.

5. Bluetooth transmits audio only. You will not see lyrics when using Bluetooth for a music source.

Play SD Card and USB

Play Music

Before you do this, make sure you have download the music(MP3,MP3G format) to your SD card or USB. Plug the SD card or USB to the machine, press “SOURCE[DISC/USB/SD/BLUETOOTH]” to select your desire device, then the screen will shows:

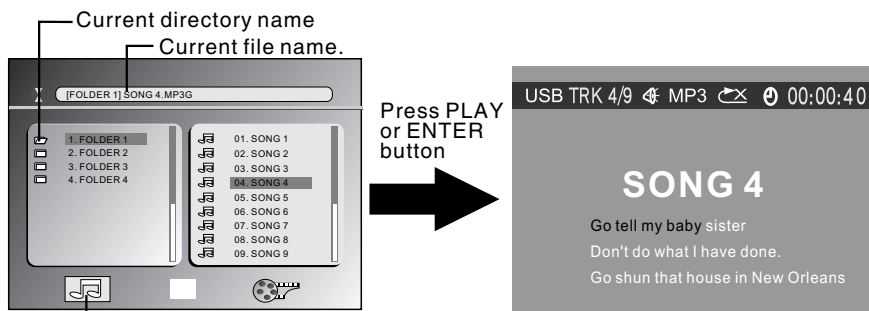


The frame shows it is in music mode.

Press ▼ ▲ to select the file when the cursor appears in the file window.
Press ENTER or PLAY to play the current file select by the cursor.
Press ◀ ▶ to switch between the directory window and the file window.

View Photo

 Before you do this, make sure you have download the image(JPG.format) to your SD card or USB(The operation is same as “Play Music”). And the screen will show:

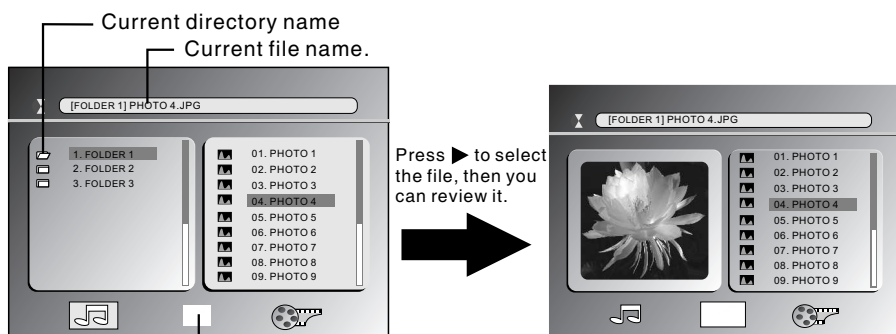

The frame shows it in photo mode.



Only support: FAT 32 format

Record Operation Procedures

Record your own voice / music mix to SD Card / USB Flash

1. Load Disc, SD Card or USB Flash Drive.
2. Select song title from the song list.
3. Press PLAY. Music will start.
4. Press RECORD/STOP. Music will start over in record mode.
5. Sing and record your song.
6. When finished, press RECORD/STOP to stop Recording.

 
For Best Recordings

1. Set Microphone Volume(s) to 70% or higher. The higher the Microphone Volume(s), the louder the singer's voice will be on the recording.
2. Set the Master Volume to whatever is comfortable, or less.
3. This unit supports recording on these formats: MP3, MP3G, CD, CDG.
4. Recording will not work with DVD's or auxiliary devices connected to the AUX-IN jacks.
5. SD Cards and USB Flash Drives should be formatted to FAT32 on your computer before inserting into machine.
6. Recording will record to SD Card or USB Drives, not discs.
7. If SD Card and USB Flash Drive are both installed, the default recording will go on the USB Flash Drive, regardless of the music source.
8. If it's necessary to have the recording on the SD Card, remove the USB Flash Drive.
9. To clean out old recordings, insert SD Card or USB Flash in your computer and delete selected files.


When recording, the screen shows the below:

A. In MP3G mode

①. Playing

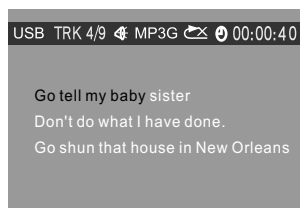

②. Recording

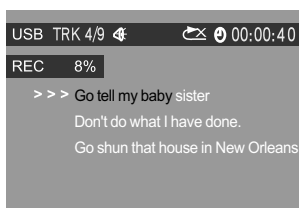 


③. Recording finished




B. In CDG mode

 ①. Playing

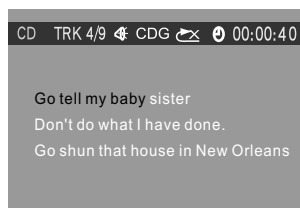

②. Recording

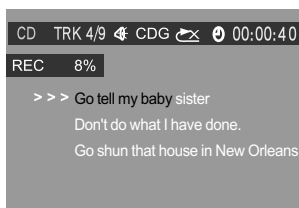 

③. Recording finished



 
4. Press "RECORD PLAYBACK" to listen the song you just recorded.

Note:


USB Flash Drives and SD Cards should be formatted to FAT32 on your computer before use. Not all USB Flash Drives are created equal. Some USB Flash Drives may not work properly with this machine. Please try a different brand if you have recording problem. Most SD Cards work well with this machine. DVD format discs do not support Recording function.

Playback the Recorded File

- 1.Press"RECORD PLAYBACK"RIGHT AFTER YOUR RECORDING.
- 2.Press SOURCE[DISC/USB/SD/BLUETOOTH] button to select USB or SD mode.

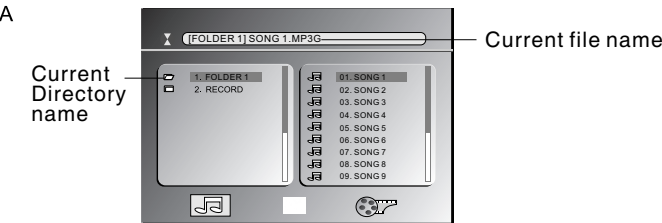

 - B. Select RECORD folder, then press ENTER.
--> Screen shows all tack numbers.

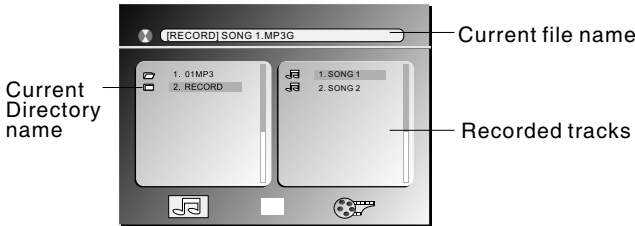

- C. Use the navigation buttons to pick the identical track number when the Song/Vocal was recorded, Press ENTER to playback.

* THE OPERATION IS SETTING UP BY THE REMOTE CONTROL ONLY

1. SYSTEM SETUP

The system setup options are illustrated as below:

1.1 TV SYSTEM

Using UP/DOWN arrow button to make a selection for TV system.

There are some TV output systems for choosen: NTSC ,PAL, AUTO.

1.2 SCREEN SAVER

The SCREEN SAVER function is always on; when the machine is in STOP mode, after few minutes in Open or No disc state, it will appear a DVD logo moving around the screen.

 
1.3 TV TYPE

According to the TV type, you can choose 16:9,4:3LB or 4:3 PS.

16:9 : The picture fills the screen of a wide screen TV.

4:3 PS: Pan and Scan, the image is cut in order to fit the whole screen.

4:3 LB: Letter box, two black bands will appear on the upper and lower part of the screen.

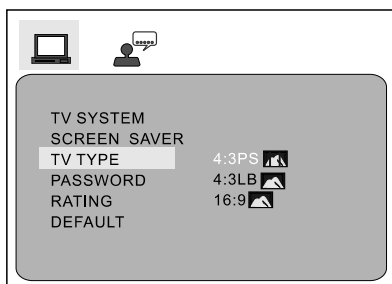

1.4 PASSWORD

The password option is initialized locked, and you can not set the ratings limit or change the password. In order to set the Ratings feature to work, the password mode must be turned on. If you want to set the rating limit, you will need to enter the default password. which is 0000, then press ENTER to confirm. To change the password, you will be prompted for the old password, then be prompted for a new one. Enter a 4-digit number (this is your password). Please remember your PASSWORD, as the DEFAULT setting will revert everything.

1.5 RATING

The Rating feature is a rating limit system, like movie ratings. it works with DVD discs that have been assigned a rating. This helps you control the types for DVDs that your family watches.

1.6 DEFAULT

The DEFAULT setup options are RESTORE factory setup.

 
When your machine does not work properly. It may probably result from some wrong setting. Please try the Restore Factory Setting function to see if the unit can restor to its normal working status.

2. LANGUAGE SETUP

The language setup options are illustrated as below:


2.1 OSD LANGUAGE

Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press ENTER to confirm, then the language will be set as OSD language.

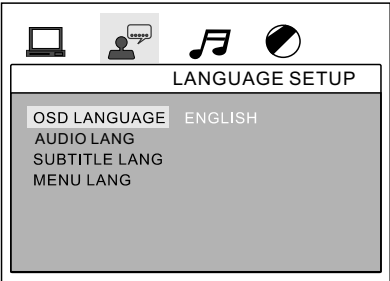


2.2 AUDIO LANG

 Highlight the AUDIO LANG option, and press the Arrow buttons to choose the subtitle language you prefer. Press ENTER to confirm. if the disc you are playing has that language, it will display subtitles in that language.

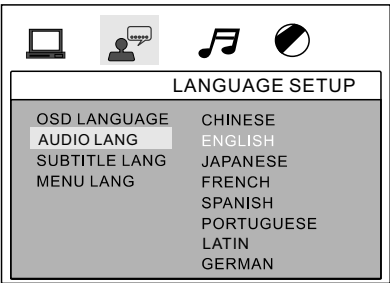

2.3 SUBTITLE LANG

 
Highlight the SUBTITLE LANG option, and press the Arrow buttons to choose the subtitle language you prefer. Press ENTER to confirm. if the disc you are playing has that language, it will display subtitles in that language.

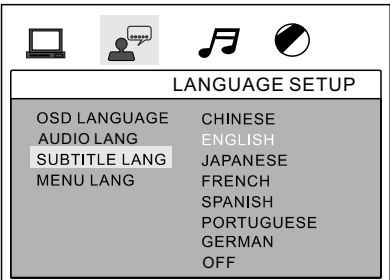

2.4 MENU LANG

Highlight the MENU LANG option, and press the Arrow buttons to choose the menu language you prefer. Press ENTER to confirm. if the disc you are playing has that language, it will display the menu in the language.

 
Notes: if your preferred language is not available, the disc default language will be played.

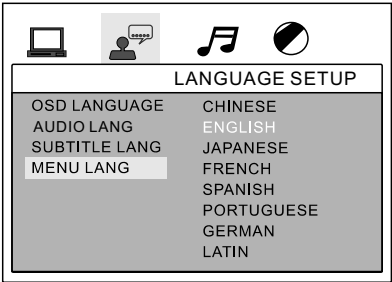

3. Audio Setup


3.1 MIC SETUP

 Use right arrow button to select status of the Karaoke. The Karaoke may set to be AUTO or OFF.

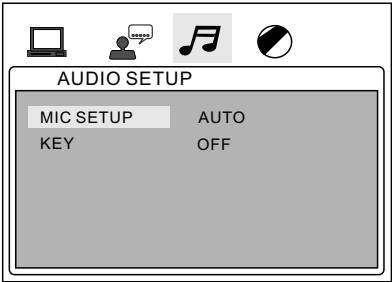

3.2 KEY

 
You can use up/down buttons to increase or decrease the tone level.

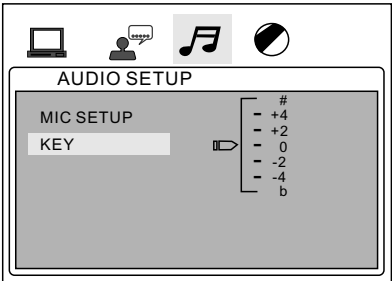

4. Video Setup


4.1 BRIGHTNESS

 Use up/down buttons to adjust the brightness of the video output.

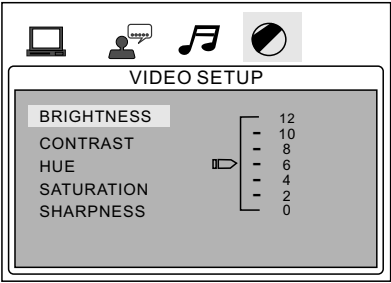


4.2 CONTRAST

 Use up/down to adjust the contrast value of video output.

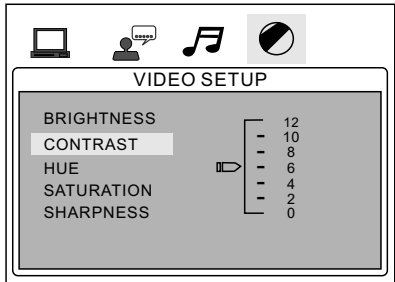


4.3 HUE

 Use up/down to adjust HUE value of video output.

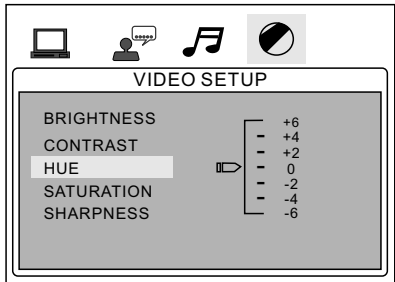


4.4 SATURATION

 Use up/down to adjust saturation value of video output.

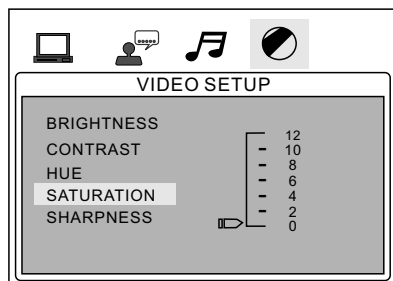

4.4 SHARPNESS

 Use up/down to adjust sharpness value of video output.

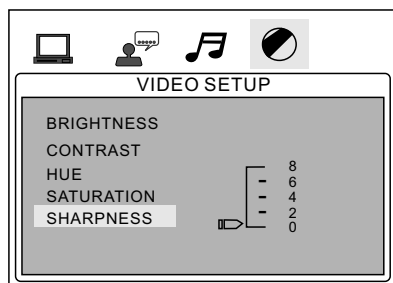

Specifications

Power requirements: AC Operation, AC 110V/50Hz~AC 240V/60Hz

Power Consumption: 105W

Video standard: NTSC

Video output

1.0 V(p-p) / 75 Ω , sync, negative polarity, RCA pin jack x 1

Audio output

2.0 channel output

Frequency response : 100HZ to 10KHZ

S/N ratio: >80 dB

Total harmonic distortion: <0.0025%

Troubleshooting


If you have any questions, please consult the troubleshooting guide below.

	Symptom		Solution
General	No Power	Power outlet	Ensure all are connected firmly
		power adaptor	
		Power cord	
		Power switch on OFF position	Ensure the switch is in "ON" mode(on top)
	Powered but no respond	Needs reset	Turn off the unit then turn on again
Microphone	Volume too low	Microphone volume setting	Set the microphone volume higher especially when recording
TV Connection	No picture (or sound) on TV	RCA cable connect in the wrong way	Ensure the RCA cable connect to the correct AV input on your TV
		Wrong setting on your TV	Ensure TV setting on the proper channel (video 1, channel 1 etc.)
Play Disc	No picture displays on the unit	No disc	Put in a disc
		Disc stained, warped or scratched	Ensure the disc is in good condition
		Wrong disc type	The unit will plays DVD, CD, CD+G, MP3+G
		Unit set in AUX IN mode	Set the Function knob in DISC/USB/SD mode
Play USB & SD	No read	No files or wrong format file on your USB & SD	Download the files to your device and try different format if necessary
	No record	USB or SD store memory is full	Delete some files to reserve some space for recording
	No function at all	wrong format or use too long time	Backup your files on your computer and format the USB or SD card
Play AUX IN	No music	AUX IN cable not connected properly	Ensure the AUX IN cable connect to the correct RCA input jack on the back
		Unit set in DISC/USB/SD mode	Set the Function knob in AUX IN mode
		The volume setting too low on your smart device and the unit	Set the volume higher on your smart device and the unit
Bluetooth	No pairing	In the wrong mode	Set the Function knob to DISC/USB/SD/ Bluetooth mode, and select the source button to Bluetooth mode.
	No music	Unit set in AUX IN mode, or no connection	Set the Function knob to DISC/USB/SD/ Bluetooth mode, and select the source button to Bluetooth mode, make sure the Bluetooth is connected
	Music too low	Volume setting too low on your smart device	Turn the volume up on your smart device and the unit volume,too

Notes on SD Card

SD CARD

 - * Please use standardized SD Cards. poor quality SD Cards may cause Karaoke machine to malfunction.
- * Gently insert the SD Card with its label facing upwards.

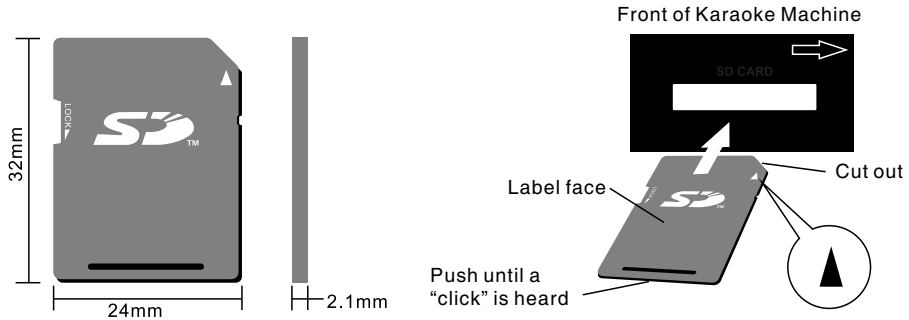

- * Compliant card type: SDHC Card, SD Card, miniSD Card, mini SDHC Card, microSD Card, mircoSDHC Card (requiring miniSD Card/miniSDHC Card/microSD Card/microSDHC Card adaptor)
- * When any mini size SD Card or TF Card is used, firstly insert it to an Adaptor before application.

Karaoke USA

KARAOKE USA
1185 GOODEN CROSSING
LARGO, FL 33778 USA

TECH SUPPORT: WWW.KARAOKEUSA.COM/CS
DOWNLOAD SONGS: WWW.SINGTHEHITS.COM
SALES DEPARTMENT: SALES@KARAOKEUSA.COM