

Karaoke USA

PORTABLE KARAOKE PLAYER

User's Guide

MODEL:
SD519



Smart Device
Not Included.

Before operating this product, please read these instructions.

Contents

Thank you for purchasing our product. For operation and security, read this manual carefully and keep it handy for future reference.

Contents.....	01
Warnings and Precautions.....	02
Important Safety Instructions.....	03
Songs Included with Player Stored in Memory.....	04-05
What's in the Box.....	06
Features.....	07
Controls.....	08-10
Charge Personal Player.....	11
Display Scenario	12-13
Download Introduction	14
Operation.....	15-20
Troubleshooting.....	21

Warnings and Precautions

WARNING: To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

"Caution Marking and Rating Label" is affixed under the lid or on the bottom of the unit with a mass not exceeding 7kg.



This symbol is intended to alert you to the presence of uninsulated, dangerous voltage within the unit's enclosure that might be of a sufficient magnitude to constitute a risk of electric shock. DO NOT OPEN THE UNITS CASE.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

SAFETY

For units with an insertable AC Power Adapter cordset:

- The power adapter should remain operable for its intended use. Disconnect the AC Power Adapter if you are not intending to use the unit for a long period of time.
- When connecting or disconnecting the AC Power Adapter Cord, grip the plug and not the cord itself. Pulling the cord may cause damage and create a hazard.

For units with a Rechargeable Battery:

- Do not expose batteries to excessive conditions – extreme cold, heat, sun or fire.

MOISTURE AND CONDENSATION

If the unit is exposed to moisture and extreme cold temperatures and moved to a warm environment, condensation may form on the units internal components. Under these circumstances, turning the power "ON" may cause damage to the unit or cause harm to the user. Allow the unit to stand in a warm environment for 1 to 3 hours and allow the unit to air dry safely.

WHEN IN USE

- Do not use this unit in conditions that are extreme – hot, cold, dusty or humid.
- Do not restrict the air flow of the unit by placing it on a soft surface like a bed, carpet or covering.

FCC INFORMATION

This unit complies with part 15 of the "FCC Rules." Operation is subject to the following conditions:

1. This unit may not cause harmful interference.
2. This unit must accept any interference received, including interference that may cause undesirable operation.

Important Safety Instructions

1. Read These Instructions: All safety and operations manual should be read before the product is operated.

2. Keep These Instructions: The safety and operations manual should be retained for future reference.

3. Heed All Warnings: All warnings applicable to the unit and in the operations manual should be adhered to.

4. Follow All Instructions: All operations manual should be followed.

5. Water and Moisture: Do not use this unit near water. For example, do not use near a bath tub, wash bowl, kitchen sink, or laundry tub. Do not use this unit in a wet basement or near a swimming pool or similar location. The unit shall not be exposed to dripping or splashing and no objects filled with liquids (ex: vases), shall be placed on or near this unit.

6. Cleaning: Clean the unit only with a dry cloth. Unit must be unplugged from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the unit.

7. Ventilation: Slots and openings in the cabinet of the unit are provided to ensure reliable operation and ventilation and to protect the unit from overheating. The openings must not be covered and should never be blocked by placing the product on a soft surface like a bed, sofa, or rug. This unit should not be placed in a built-in installation like a bookcase or rack, unless proper ventilation is provided.

8. Heat: Do not install the unit near any heat source like a radiator, heat register, stove or other device that produces heat, including amplifiers.

9. Grounding or Polarization: If applicable, do not disable or circumvent the polarized or grounding-type plug. A polarized plug has 2 blades with 1 wider than the other. A grounding-type plug has 2 blades and a 3rd grounding plug. The wide blade, or the 3rd prong, is provided for your safety. If the provided plug does not fit into an outlet, consult a qualified electrician for replacement of this outlet.

10. Power Cord Protection: Protect the power cord from being walked on, pinched or cut or damaged in any

way. If any damage occurs, consult with a trained technician for repair.

11. Accessories: Only use accessories specified and approved by the manufacturer. Do not place this unit on an unstable cart, stand, tripod, bracket or table that has not been previously approved by the manufacturer. This unit may fall, causing serious injury to a child, adult or to the unit itself. Any mounting of the unit should be done within the manufacturer's guidelines.

12. Transporting: If a pre-approved device is used to transport this unit, caution and care must be observed and practiced to avoid damages. Make sure the device and unit together are stable before moving.



13. Lightning: Unplug this unit and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will help prevent damage to the unit due to lightning and power line surges.

14. Servicing: Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

 
15. Power Sources: Only connect to the type of household power supply as indicated in the operations manual and "Caution Marking and Rating Label." If you are not sure of the type of power supplied to your home (or location of the outlet the unit is being plugged into), consult with the local power company. For units intended to operate from battery power, or other sources, refer to the manufacturer's operations manual.

16. Overloading: Do not overload wall outlets or extension cords. This can result in a risk of fire or electric shock and may be hazardous.

17. Foreign Material: Protect this unit from intrusion of any foreign substances like dirt, water, moisture and insects. Do not force any foreign materials or chemicals into this unit. This could result in a risk of fire or electric shock and may be hazardous.

18. Replacement Parts and Safety Check: When replacement parts are required, be sure the service technician has used replacement parts specified and approved by the manufacturer. Ask the service technician to perform safety checks to ensure the proper operation to avoid possible fire, electric shock or other hazards.

19. Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. If there is any doubt to the proper grounding of these systems, contact a qualified electrician to inspect your location.

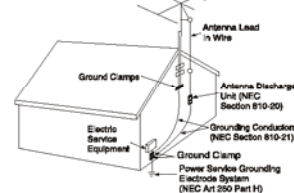

20. Wall or Ceiling Mounted: The unit should be mounted to a wall or a ceiling only as recommended by the manufacturer.

21. Disconnect Device: Make sure all disconnect devices are in proper working condition and readily available in the event of an emergency or if power "off" is needed quickly.

22. Protective Attachment Plug: If applicable, this unit may be equipped with an attachment plug having overload protection. This is a safety feature. See the operations manual for replacement or resetting of this protective device. If replacement of the plug is required, be sure the qualified service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

23. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal. Always consult with your local power company before installing an outside antenna.

Songs Included with Player Stored in Memory

Download your Favorite MP3.LRC SONGS from **SingtheHits.com**
and load them into your SD519 Karaoke Player All Songs include on Screen Lyric.


1. 900 Miles
2. Abide With Me
3. Alexanders Ragtime Band
4. All The Pretty Little Horses
5. All Things Bright And Beautiful
6. All Through The Night
7. Alouette
8. Alphabet Song The
9. Amazing Grace
10. America (My Country Tis Of Thee)
11. America The Beautiful
12. Angels From The Realms Of Glory
13. Angels We Have Heard On High
14. Animal Fair
15. Around And Around The Village
16. Auld Lang Syne
17. Away In A Manger
18. Aye Aye Aye The Limerick Song
19. B I N G O
20. Baa Baa Black Sheep
21. Barney Buntline
22. Battle Hymn Of The Republic
23. Be Kind To Your Web Footed Friends
24. Bear Went Over The Mountain
25. Bicycle Built For Two
26. Big Rock Candy Mountain
27. Bill Bailey Wont You Come Home
28. Bill Grogans Goat
29. Billy Boy
30. Billy Pringle
31. Birds Song
32. Blessed Assurance
33. Blow The Man Down
34. Blue Bells Of Scotland
35. Bluebird
36. Bollweevil
37. Brahms Lullaby
38. Bringing In The Sheaves
39. Bye Baby Bunting
40. Caissons Go Rolling Along
41. Calendar Song
42. Camptown Races
43. Capital Ship A
44. Cat Came Back The
45. Church In The Wildwood
46. Cinderella
47. Clementine
48. Cock A Doodle Doo
49. Cockles And Mussels
50. Cocky Robin
51. Colors
52. Come O Come Emanuel
53. Counting Song
54. Crawdad Song
55. Crocodile The
56. Cuckoo Is A Pretty Bird
57. Daddy Sang Bass
58. Danny Boy
59. Day And Night
60. Deck The Halls
61. Dixie
62. Down By The Old Mill Stream
63. Down By The Riverside
64. Dry Bones
65. Elephant And The Flea
66. Father Grumble
67. Fiddle De De
68. First Noel The
69. Fishes
70. Five Currant Buns
71. For Hes A Jolly Good Fellow
72. For Me And My Gal
73. Frankie And Johnny
74. Frere Jacques
75. Froggie Went A Courting
76. Georgie Porgie
77. German Lullaby
78. Git Along Little Dogies
79. Go Tell It On The Mountain
80. God Rest Ye Merry Gentlemen
81. Golden Slumbers
82. Good Morning Merry Sunshine
83. Goosey Goosey Gander
84. Grasshopper
85. Grasshoppers Three
86. Greensleeves
87. Ground Hog
88. Hail Hail The Gangs All Here
89. Hark! The Herald Angels Sing
90. Harrigan
91. Here We Go Around The Mulberry Bush
92. Here We Go Looby Loo
93. Hes Got The Whole World In His Hand
94. Hey Diddle Diddle
95. Hickory Dickory Dock
96. Higgledy Piggledy My Black Hen
97. Home On The Range
98. How Great Thou Art
99. Humpty Dumpty
100. Hunting We Will Go A
101. Hush Little Baby
102. Hush-A-Bye
103. I Am A Young Musician
104. I Gave My Love A Cherry
105. I Had A Little Nut Tree
106. I Had A Rooster
107. I Love You Truly
108. I Spy
109. If Youre Happy And You Know It
110. Ill Take You Home Again Kathleen
111. Im A Little Teapot
112. In The Good Old Summertime
113. It Aint Gonna Rain No More
114. It Came Upon A Midnight Clear
115. Its Raining Its Pouring
116. Ive Been Working On The Railroad
117. Jack And Jill
118. Jack Be Nimble
119. Jack Spratt
120. Jeanie With The Light Brown Hair

Songs Included with Player Stored in Memory

Download your Favorite MP3.LRC SONGS from **SingtheHits.com**
and load them into your SD519 Karaoke Player All Songs include on Screen Lyric

- | | |
|--|--|
| 121. Jenny Jenkins | 179. Oranges And Lemons |
| 122. Jesus Loves Me | 180. Over In The Meadow |
| 123. Jimmy Crack Corn | 181. Over The River And Through
The Woods |
| 124. Jingle Bells | 182. Pat A Cake |
| 125. Joy To The World | 183. Peace In The Valley |
| 126. La Bamba | 184. Peg O My Heart |
| 127. Lady Bird Lady Bird | 185. Peter Peter Pumpkin Eater |
| 128. Let Me Call You Sweetheart | 186. Polly Put The Kettle On |
| 129. Letters Of The Alphabet | 187. Polly Wolly Doodle |
| 130. Little Black Bull | 188. Pop Goes The Weasel |
| 131. Little Bo Peep | 189. Precious Memories |
| 132. Little Boy Blue | 190. Ride A Cock Horse To Banbury Cross |
| 133. Little Jack Horner | 191. Right Hand Says Good Morning |
| 134. Little Miss Muffet | 192. Ring Around The Rosie |
| 135. Little Sally Waters | 193. Rise And Shine |
| 136. Little Things The | 194. Rock A Bye Baby |
| 137. Little Tommy Tucker | 195. Rock A Bye Baby Green |
| 138. London Bridge Falling Down | 196. Rock Island Line |
| 139. London Street | 197. Rock Of Ages |
| 140. Ma Shes Making Eyes At Me | 198. Rock-A-Bye Your Baby With A
Dixie Melody |
| 141. Macnamaras Band | 199. Rock-A-My Soul |
| 142. Mademoiselle From Armentieres | 200. Rockin Robin |
| 143. Marines Hymn | |
| 144. Mary Had A Little Lamb | |
| 145. Michael Row The Boat Ashore | |
| 146. Midnight Special The | |
| 147. Moonlight Bay | |
| 148. Mozarts Lullaby | |
| 149. My Bonnie Lies Over The Ocean | |
| 150. My Old Dog Tray | |
| 151. My Old Hen | |
| 152. My Old Kentucky Home | |
| 153. My Wild Irish Rose | |
| 154. Now I Lay Me Down To Sleep | |
| 155. O Holy Night | |
| 156. Oats Beans And Barley Grow | |
| 157. Off To Bed Now | |
| 158. Oh Christmas Tree | |
| 159. Oh Come All Ye Faithful | |
| 160. Oh Dear What Can The Matter Be | |
| 161. Oh Little Town Of Bethlehem | |
| 162. Oh Susanna | |
| 163. Oh When The Saints Go Marching In | |
| 164. Oh You Beautiful Doll | |
| 165. Ol Woman Who Lived In A Shoe | |
| 166. Old Blue | |
| 167. Old John Brattleum | |
| 168. Old King Cole | |
| 169. Old Macdonald Had A Farm | |
| 170. Old Mother Hubbard | |
| 171. Old Time Religion | |
| 172. On The Banks Of The Sacramento | |
| 173. On Top Of Old Smokey | |
| 174. One Meat Ball | |
| 175. One More River To Cross | |
| 176. One Two Buckle My Shoe | |
| 177. One Two Three Four Five | |
| 178. Onward Christian Soldiers | |

 What's in the Box

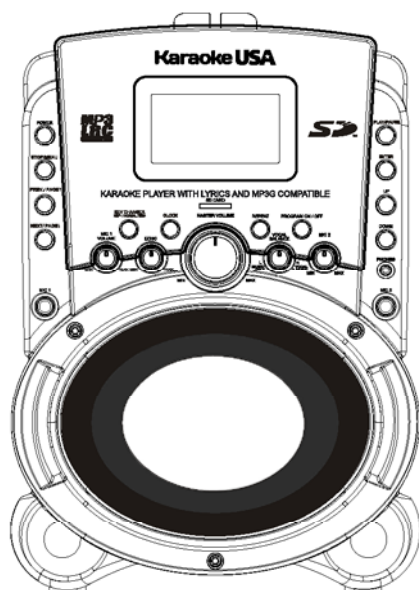

Microphone



200 Songs Stored in Memory (SD Card not Included)



Device Cradle



AC/DC Adaptor



3.5mm Headphone Jack AUX-IN Cable Connector

 


User's Manual




Warranty Card

Features

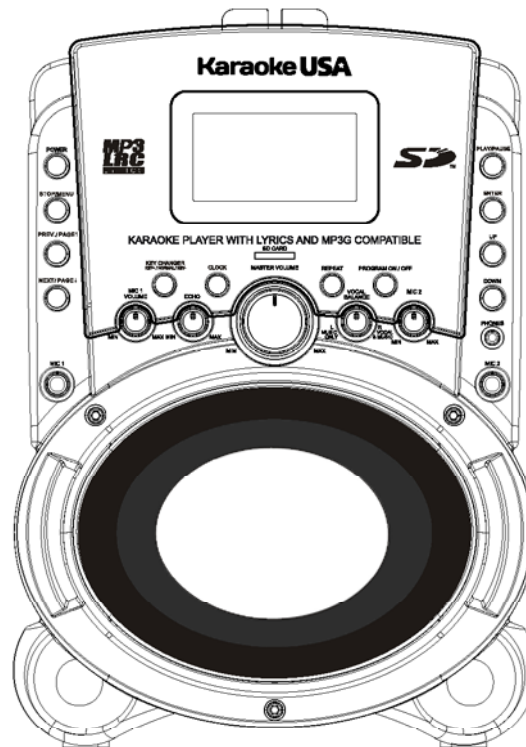

- 1 GB NAND Flash Memory With Songs Pre-Loaded MP3G format with video output
- 3.2" STN Display
- USB Slot
- RCA Video Out Jack for MP3G Formatted Songs
- Lyrics Display On Screen for LRC Formatted Songs
- Music/Vocal Balance Control (Left/Right Channels)
- Microphone Input Jack(6.3mm)
- AUX IN for iPod® and MP3 Players
- Headphone Jack
- Master Volume Control
- Function select: MP3/AUX INPUT, KARAOKE
- Play/Pause, Skip, Forward & Backward
- Repeat
- Program
- Echo Control
- Personal Player Cradle for iPod®/MP3/MP4 Players
- AC/DC (4 "C " Batteries not included)

 Controls

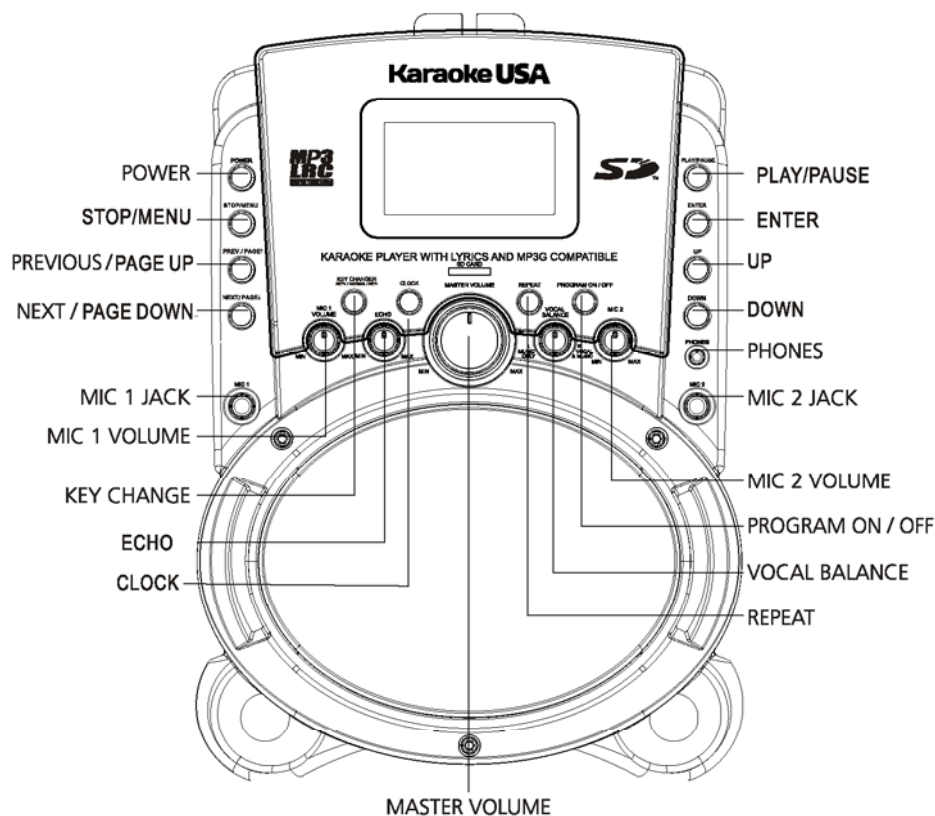

FUNCTIONS

On/Off: Power On/Off

Stop / MENU: Stop / and to MENU mode

Play: Play or Enter button

Vol +/-: Increase or decrease volume

Balance +/-: Adjust to more or less left (music only) or right channels (more vocal)

Repeat: Repeat the song playing

Key Control: Adjust music to high or lower key of music up or down

 
Program: Create your own program list of songs

Next/Previous: Select Next or Previous song or page up and down when in song list

Up: Navigation up

Down: Navigation down


Controls

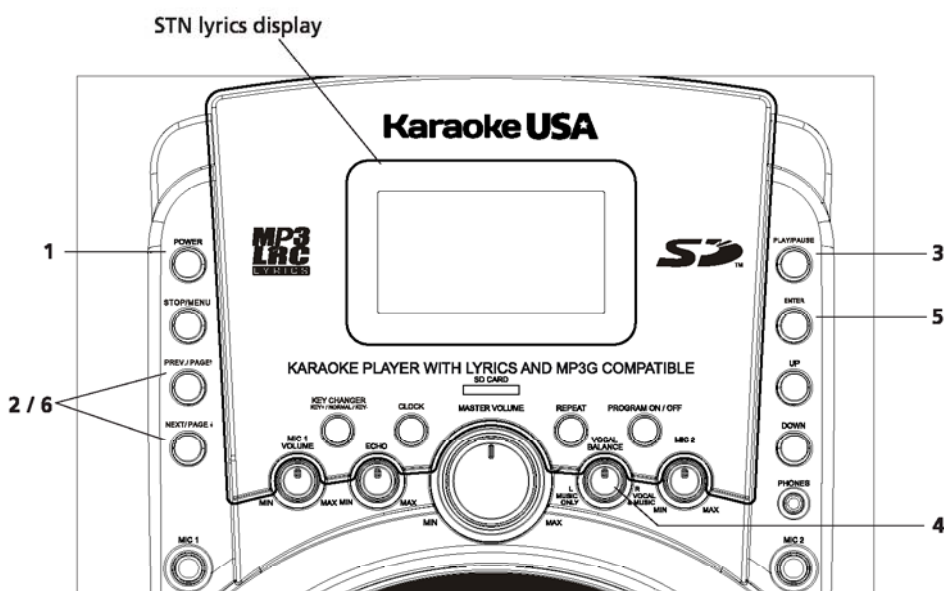

1. Press the **POWER** button to turn the player ON, song listing should appear automatically.
2. Press **PREV./PAGE↑** or **NEXT/PAGE↓** to navigate through song list (by page), then press UP or DOWN (one by one) to select the specific song.
3. Press **PLAY/PAUSE** to choose or stop a song.
4. Adjust **VOCAL BALANCE** to increase or decrease vocal output.
Adjust **Vocal Balance Control** to (-) to remove vocals from music playing.
Adjust **Vocal Balance Control** to (+) to increase vocals from music playing.
5. Press **ENTER** to Confirm your selection or play.
6. Press **PREV** or **NEXT** to skip to the next songs.

*When playing a song, lyrics will scroll upwards off screen.

 Controls

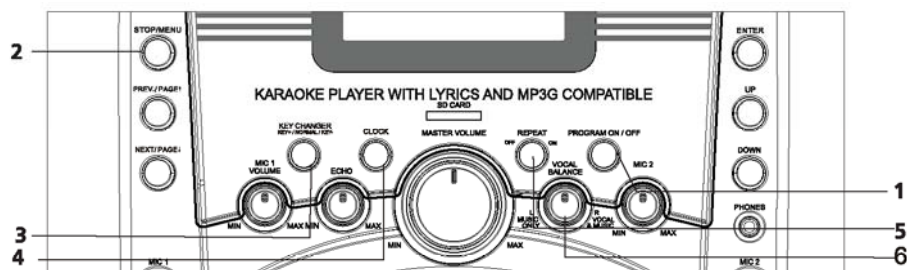

1. PROGRAM

Press PROGRAM to turn it ON. Select songs through song list, go to the song you wish to play, press ENTER (the song name blinks). Then go to another song, ENTER again (song name blinks), repeat these steps to add more songs, then enter PLAY play songs you have selected. Press PROGRAM again to turn the function OFF.

2. STOP/MENU

Press STOP button to stop playing and go to the song list

Press MENU button once to enter the selection screen, using Up and Down buttons.

Press ENTER to select a desire function;

3. KEY CHANGER:

Press the button to increase or decrease the pitch, in circulation like: KEY+1, KEY+2, KEY+3, KEY-1, KEY-2, KEY-3

4. CLOCK

Press this button will display the clock

5. REPEAT:

Press the button to repeat the song selected, or repeat the whole song list.

 
Press it again to cancel the Repeat function.

6. VOCAL BALANCE:

Turn knob to the left to gradually cancel vocals and hear music only. Turn the knob to the right to increase vocals.

Connect MP3/MP4/iPod®


Connect iCable to Personal Player Headphone Jack.

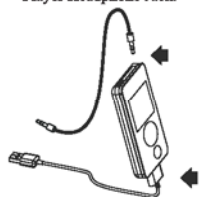

Connect your Personal Player USB charging cord to your player's recharge socket.



 Insert Personal Player with cords attached into built-in cradle.

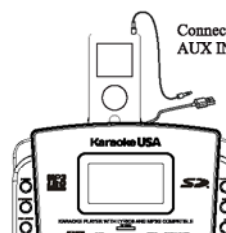


Connect iCable to AUX IN jack

Plug unit into 120V to charge Personal Player


Connect USB cable to charging port on pack of player

Charge Personal Device

 Connect personal player to USB charging port to charge your Device.
(USB cable not included.)

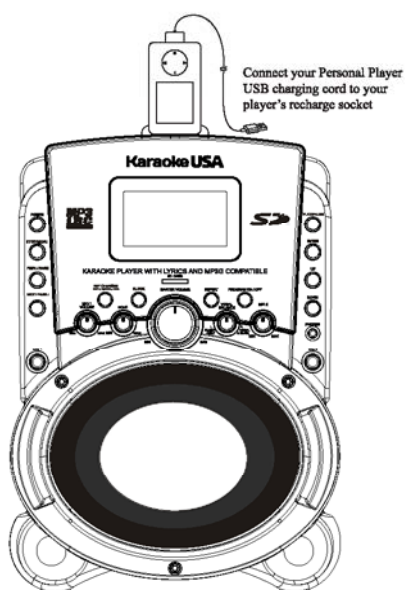

 Use the MP3 charger cord come with your MP3 player.

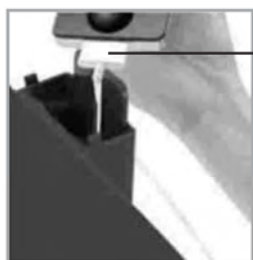

MP3/iPod®/Zune®
Personal Player Cradle




****The unit provides 5V, 500mAh charging power only, for some devices like Apple iPhone 5s, it will not charge.***

 
Display Scenarios

This SD519 unit contains pre-loaded songs in two formats: MP3 with LRC (Lyrics) file and MP3G. This allows lyrics to be viewed on both the SD519 display screen and your TV if you choose to connect. Likewise, if your SD Card contains songs in both MP3.LRC and MP3G formats, lyrics will display on screen and on your TV as well. If your SD Card only contains MP3.LRC formatted song lyrics can only be viewed on the SD519 display, not your TV screen. If your SD Card only contains MP3G formatted songs lyrics can be viewed on your TV, but not the SD519 display. If your SD Card contains only MP3 songs, lyrics are not available for either the SD519 display or your TV screen.

Scenario: Playing pre-loaded songs

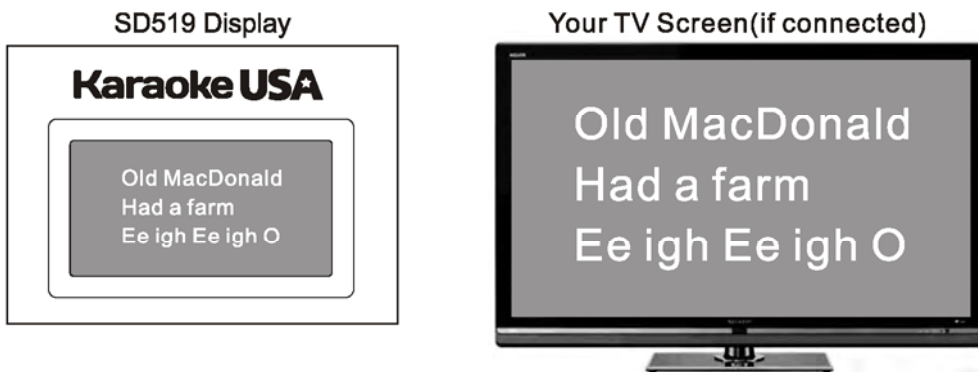

 Scenario: Your SD Card with MP3.LRC only

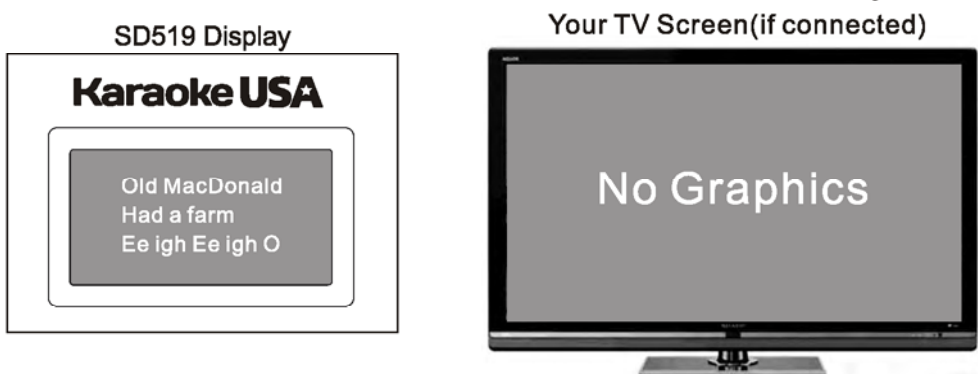


Display Scenarios

Scenario: Your SD Card with MP3G only



 Scenario: Your SD Card with Mp3 audio only

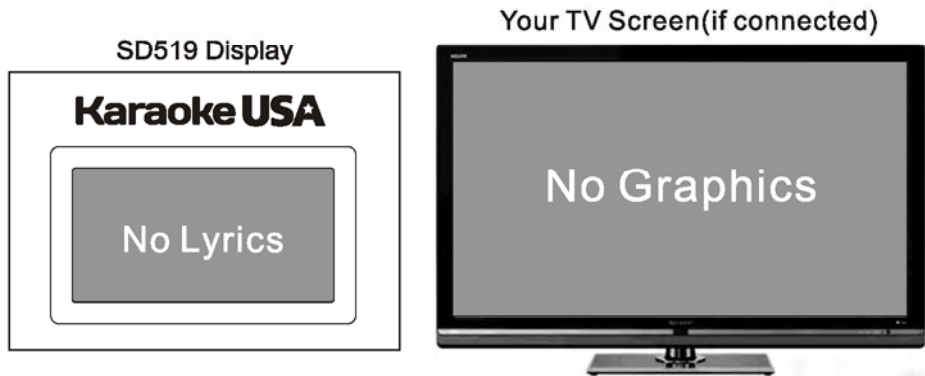

Download Introduction

WORKING WITH MP3 AND LRC FILES

MP3 files may be intimidating to some. They are nothing more than computer files that can be moved, copied, stored and deleted. When made available for an MP3 player to access, great sound is the result. MP3 files are the most common format of downloadable music on the internet.

Your player comes with 200 songs preloaded. (please see page 4 for the song list)

**You can always download additional music songs by using a SD card
(any size up to 16G flash memory)**

- 1. From your own computer or laptop, download any stored songs/music in the hard disc into the SD card.(please apply .MP3 format of the music);**
- 2. From the internet. There are many Internet sites that you can find MP3 Karaoke songs & titles for download into your SD card.**
- 3. There are a large number of good Mp3 music on our web-site that you can download from.Please go to www.singthehits.com for karaoke songs.We do not sell music and do not offer them anything free.**

WORKING WITH MP3 AND LRC (LYRIC) FILES

Your player will play MP3 files with an added benefit. If a matching LRC file is provided, you can view the lyrics to your MP3 song on the player's lyric display. However, LRC files are not necessary to listen to great music or to sing along as karaoke. An LRC file is nothing more than a text file with timing marks inserted before each line of lyrics. The timing marks tell the player when to insert the line of lyrics into the display as the song is played.

MP3 and matching LRC files may be found searching the internet. Whether you decide to download, share or create your own lyrics file, you must follow one simple rule. The MP3 and LRC filenames must be exactly the same except for the extensions *.MP3 and *.LRC. If they are exactly the same, the player will know to access both automatically. You don't have to do anything extra like tell the player you have a lyrics file. It automatically searches each time an MP3 is played.

MUSIC COPYRIGHTS

Songs, music and lyrics are created by real people like musicians and song-writers. Their work is considered intellectual property. Even though MP3 files are easily accessible and shared often, you are still responsible to abide by copyright laws. We neither advertise or promote violation(s) of copyright laws.

Operation

Note

This unit designed to play MP3 music with LRC File (Lyrics) or MP3 or MP3+G music

The LCD can play the lyrics on screen.



Power On/Off

Press ON/OFF key once to on or off.

* When the unit is turned on, it will display the song list.



 
* Press ENTER to directly play the current selected song (default setting is 1st song)

* Press UP or DOWN to scroll through the list

* Then Press ENTER to play the song you have chosen.

Built in songs or SD Card song will have same operation, just go Direct from menu to SD Card song.

Operation

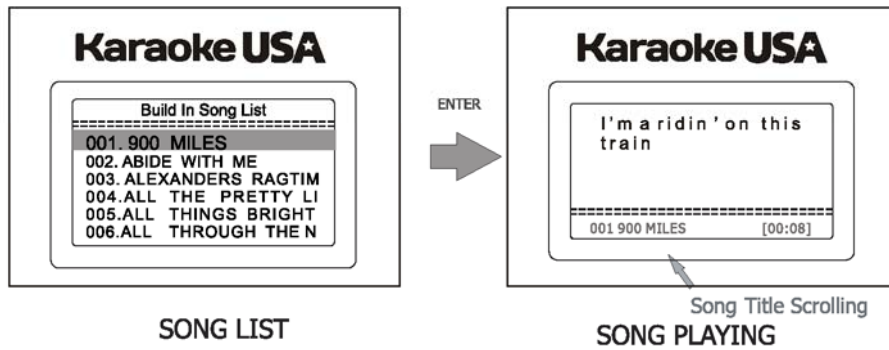


- * Lyric will be displayed on screen and scroll upward.
- * Song title or the Timer are displayed at the bottom line.
- * Press **NEXT/PAGE ↓** or **PREV./PAGE ↑** to directly play next or previous songs.
- * User can sing with the microphone and their voice will be mixed with the music coming out from the speaker.



- * Press **PAUSE** to suspend the music and press **PLAY** to resume (status on LCD)

 
Operation

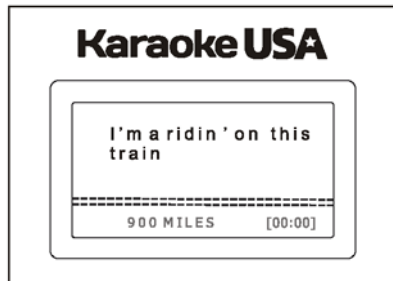

Song Title and timing Scrolling

* Lyrics will display on screen and scroll up as the song plays.

 Program

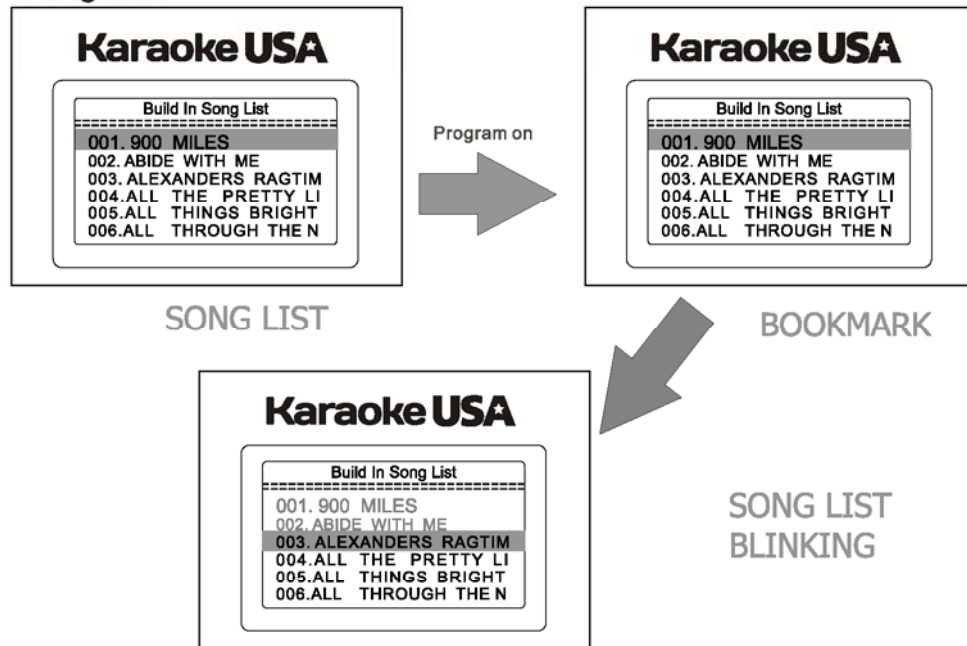

PROGRAM On/Off - - Press PROGRAM ON/OFF button to start the program in the song list. Select your favor song and Press ENTER (song bookmarked). The song you selected will be blinked on the screen. Press UP & DOWN to scroll through the song list and press ENTER to mark next song, Press ENTER again to remove it from bookmark list. After marking all songs, press PLAY to play those selected songs;

Operation

Play SD Card

Before you do this, make sure there are some MP3 format musics stored in your SD card.




*Insert your SD card to the SD card slot, then press MENU, press ▼ to select the SD CARD SONG, press ENTER again to go to the songs that stored in your SD card.

*If you want watch the lyric by your own download songs, you have to download the LCR. file or MP3G file, but the files name must be EXACTLY same as the songs name, so that you can watch the lyrics on the unit screen or the connected TV.

AUX IN

 *Plug your ipod or your portable player through the cable to the MP3/iPOD/AUX IN port on the back of the unit.
(cable provided in the package)

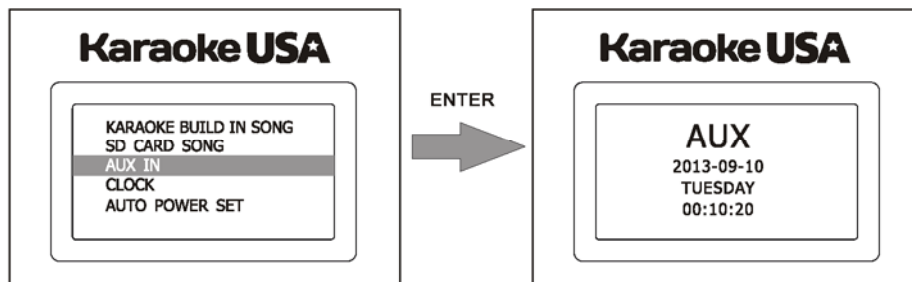

*Press MENU, then press ▼ to select the AUX IN, press ENTER again to listen your external player's music.

*Audio from your iPod or MP3/Mp4 player will be mixed with the singer's voice and be played through the player's speaker.

 
*Adjust volume up or down

Operation

Time Set

*Press MENU once to enter mode selection screen.

*Press DOWN to the CLOCK and ENTER to select.

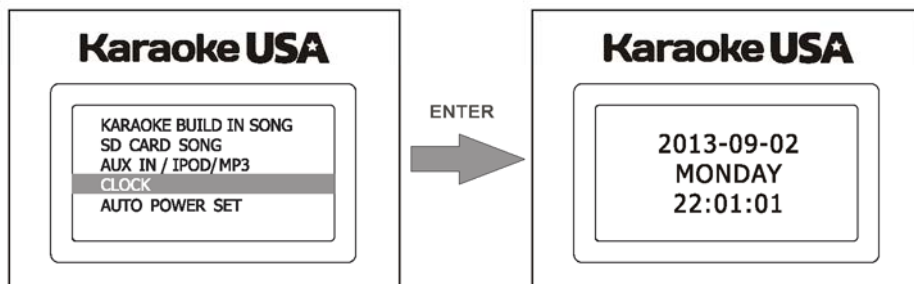

*Press ENTER again to star time setting.



*Press PREV./PAGE↑ or NEXT/PAGE↓ to change the blinking digit.

*Press UP & DOWN and continue with next digit.

 
*The sequence is Year > Month > Day> Hour > Minute.

*After setting all digits, Press ENTER then display return to normal clock display.

Operation

AUTO POWER SET

- *Press MENU once to enter mode selection screen.
- *Press PREV./PAGE↑ or NEXT/PAGE↓ to the AUTO POWER SET and ENTER to select.
- *Press UP or DOWN to change auto power off time.

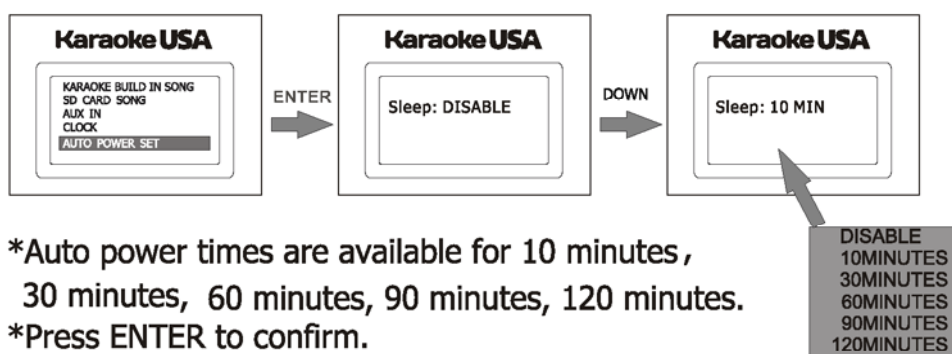


- *Auto power times are available for 10 minutes, 30 minutes, 60 minutes, 90 minutes, 120 minutes.
- *Press ENTER to confirm.
- *If the battery is low, the unit screen will display "LOW POWER" in a second then SWITCH OFF automatically.

4"C" battery



Connect MP3/MP4/iPod®

 Connect AUX Input/iCable to Smart Device

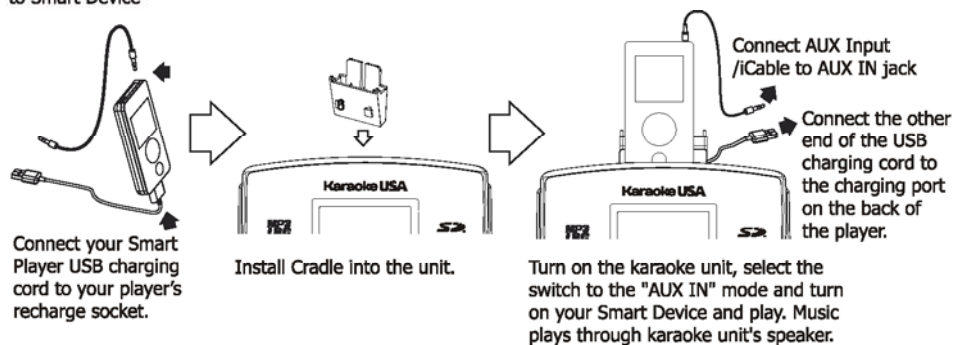


Troubleshooting


Symptom	Possible Solutions
Can't turn on.	Check Battery polarities being installed correctly Check if AC Adaptor is functioning.
Can't play Music.	Check if the Power is turned ON. Are the Music files in MP3 format? Check if the Music files are intact.
Music file is played but no sound output.	Adjust the Volume Control up to desire level for listening. Check if the music files are intact.
No sound output after iPod is hooked up	Check if the Connecting cable between iPod and Unit is damaged. Check if iPod and Unit is connected correctly. (Please refer to the Manual for proper connection) Set the unit at the proper mode.
Can't Play Music files in SD card.	Check if the SD card is inserted correctly sticker upwards. Make sure the music on your SD card is.mp3 format.
If your Unit doesn't respond or displays strange characters and symbols, you are recommended to RESET the Machine at the back with a Pin. (Note: The Time and Program setting will be lost!)	

SD CARD

 * Use the SD Card which meets SD standards. If not, it may cause the Karaoke to malfunction.

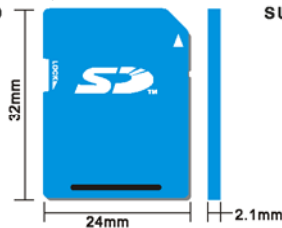

 * Gently insert the SD Card label surface facing front.

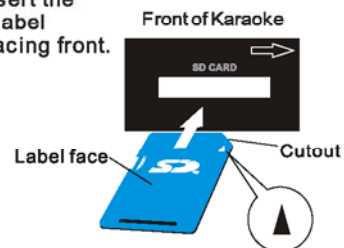

* Compliant card type: SDHC Card, SD Card, miniSD Card, miniSDHC Card, microSD Card, microSDHC Card (requiring miniSD Card/miniSDHC Card/microSD Card/microSDHC Card adapter)

* If a miniSD Card, miniSDHC Card, microSD Card or microSDHC Card is used, insert/remove it together with the adapter.

Should you still have problem operating this machine, please call us for assistance in

USA: 1-800-800-8466 or USA & International:(727) 209-1313

KARAOKE USA

1185 Gooden Crossing, Largo,

Florida, 33778, USA

www.KaraokeUSA.com

1-800-568-2000 ■ 727-209-1313

Printed in China