

Karaoke USA

PORTABLE MP3G KARAOKE MEDIA PLAYER WITH BLUETOOTH

- English
- Español
- Français

User's Guide

MODEL NO.:
SD520



Before operating this product, please read these instructions.

Contents

 
Warnings and Precautions	02
Important Safety Instructions	03
What's in the Gift Box.....	04
Features.....	04
Song List.....	05-06
Introduction	07
Location Controls	08
External Device Slots	09
Power Supply Setup	09
Sing with Microphone.....	09
Connecting to the Headphone or Earphone.....	10
Remote Control	11
Remote Control Operations.....	12
Remote Control Preparation.....	13
How to Play the Machine.....	14-18
Recording Operation.....	19
Connect to your home TV	19
Specifications	20
Troubleshooting.....	21

Warnings and Precautions

WARNING: To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

“Caution Marking and Rating Label” is affixed under the lid or on the bottom of the unit with a mass not exceeding 7kg.

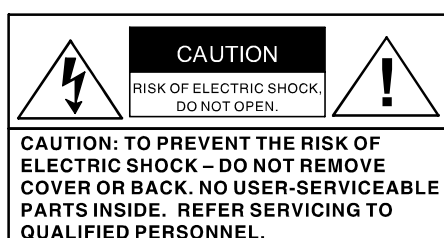

This symbol is intended to alert you to the presence of uninsulated, dangerous voltage within the unit's enclosure that might be of a sufficient magnitude to constitute a risk of electric shock. DO NOT OPEN THE UNITS CASE.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

SAFETY

For units with an insertable AC Power Adapter cord set:

- The power adapter should remain operable for its intended use. Disconnect the AC Power Adapter if you are not intending to use the unit for a long period of time.
- When connecting or disconnecting the AC Power Adapter Cord, grip the plug and not the cord itself. Pulling the cord may cause damage and create a hazard.

For units with a Rechargeable Battery:

- Do not expose batteries to excessive conditions – extreme cold, heat, sun or fire.

MOISTURE AND CONDENSATION

If the unit is exposed to moisture and extreme cold temperatures and moved to a warm environment, condensation may form on the units internal components. Under these circumstances, turning the power “ON” may cause damage to the unit or cause harm to the user. Allow the unit to stand in a warm environment for 1 to 3 hours and allow the unit to air dry safely.

WHEN IN USE

- Do not use this unit in conditions that are extreme – hot, cold, dusty or humid.
- Do not restrict the air flow of the unit by placing it on a soft surface like a bed, carpet or covering.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AEWJSD520

Important Safety Instructions

1. Read These Instructions: All safety and operations manual should be read before the product is operated.

2. Keep These Instructions: The safety and operations manual should be retained for future reference.

3. Heed All Warnings: All warnings applicable to the unit and in the operations manual should be adhered to.

4. Follow All Instructions: All operations manual should be followed.

5. Water and Moisture: Do not use this unit near water. For example, do not use near a bath tub, wash bowl, kitchen sink, or laundry tub. Do not use this unit in a wet basement or near a swimming pool or similar location. The unit shall not be exposed to dripping or splashing and no objects filled with liquids (ex: vases), shall be placed on or near this unit.

6. Cleaning: Clean the unit only with a dry cloth. Unit must be unplugged from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the unit.

7. Ventilation: Slots and openings in the cabinet of the unit are provided to ensure reliable operation and ventilation and to protect the unit from overheating. The openings must not be covered and should never be blocked by placing the product on a soft surface like a bed, sofa, or rug. This unit should not be placed in a built-in installation like a bookcase or rack, unless proper ventilation is provided.

8. Heat: Do not install the unit near any heat source like a radiator, heat register, stove or other device that produces heat, including amplifiers.

9. Grounding or Polarization: If applicable, do not disable or circumvent the polarized or grounding-type plug. A polarized plug has 2 blades with 1 wider than the other. A grounding-type plug has 2 blades and a 3rd grounding plug. The wide blade, or the 3rd prong, is provided for your safety. If the provided plug does not fit into an outlet, consult a qualified electrician for replacement of this outlet.

10. Power Cord Protection: Protect the power cord from being walked on, pinched or cut or damaged in any

way. If any damage occurs, consult with a trained technician for repair.

11. Accessories: Only use accessories specified and approved by the manufacturer. Do not place this unit on an unstable cart, stand, tripod, bracket or table that has not been previously approved by the manufacturer. This unit may fall, causing serious injury to a child, adult or to the unit itself. Any mounting of the unit should be done within the manufacturer's guidelines.

12. Transporting: If a pre-approved device is used to transport this unit, caution and care must be observed and practiced to avoid damages. Make sure the device and unit together are stable before moving.



PORTABLE
CART
WARNING

S3125A

13. Lightning: Unplug this unit and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will help prevent damage to the unit due to lightning and power line surges.

14. Servicing: Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

 
15. Power Sources: Only connect to the type of household power supply as indicated in the operations manual and "Caution Marking and Rating Label." If you are not sure of the type of power supplied to your home (or location of the outlet the unit is being plugged into), consult with the local power company. For units intended to operate from battery power, or other sources, refer to the manufacturer's operations manual.

16. Overloading: Do not overload wall outlets or extension cords. This can result in a risk of fire or electric shock and may be hazardous.

17. Foreign Material: Protect this unit from intrusion of any foreign substances like dirt, water, moisture and insects. Do not force any foreign materials or chemicals into this unit. This could result in a risk of fire or electric shock and may be hazardous.

18. Replacement Parts and Safety Check: When replacement parts are required, be sure the service technician has used replacement parts specified and approved by the manufacturer. Ask the service technician to perform safety checks to ensure the proper operation to avoid possible fire, electric shock or other hazards.

19. Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. If there is any doubt to the proper grounding of these systems, contact a qualified electrician to inspect your location.

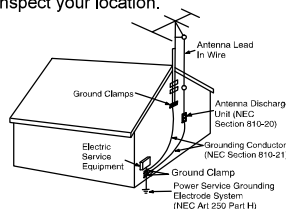

20. Wall or Ceiling Mounted: The unit should be mounted to a wall or a ceiling only as recommended by the manufacturer.


21. Disconnect Device: Make sure all disconnect devices are in proper working condition and readily available in the event of an emergency or if power "off" is needed quickly.

22. Protective Attachment Plug: If applicable, this unit may be equipped with an attachment plug having overload protection. This is a safety feature. See the operations manual for replacement or resetting of this protective device. If replacement of the plug is required, be sure the qualified service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

23. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal. Always consult with your local power company before installing an outside antenna.

What's in the Gift Box

 SD520-MP3+G Karaoke System

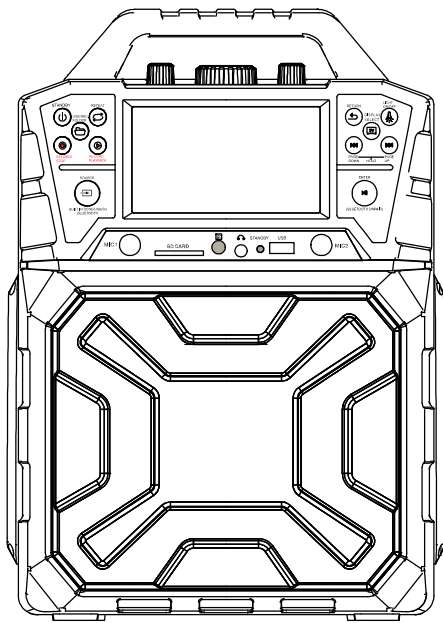

iCable



Microphone



AC/DC Adaptor



Instruction Manual
& Warranty Card



Remote Control

Features

- Media Player: MP3, MP3+G
- Mic Volume Controls
- Echo Control
- Balance Control
- 4.3" TFT Color Display
- 3.5mm Earphone Jack
- 2 x 6.3mm Microphone Inputs
- SD Card Reader
- USB Thumb Reader
- USB Charger
- Play Music with Bluetooth
- Built In 300 Songs
- Personal Device Stand
- LED Flashing Lights
- Audio/Video RCA Output (i-RCA Cable included)
- Built-in Rechargeable Lithium Battery
- Built-in Loud Speaker
- Power: AC Adapter DC 5V 2A(included)

Song List (Built-in)


01. Abide With Me
02. Alexander's Ragtime Band
03. All Things Bright And Beautiful
04. All Through The Night
05. Alouette
06. Alphabet Song, The
07. Amazing Grace
08. America (My Country Tis Of Thee)
09. Angel De Los Reinos Santos
10. Angels From The Realms Of Glory
11. Angels We Have Heard On High
12. Animal Fair
13. April Shower
14. Around And Around The Village
15. Auld Lang Syne
16. Ave Maria
17. Away In A Manger
18. Aye Aye Aye Aye The Limerick Song
19. B I N G O
20. Baa Baa Black Sheep
21. Barney Buntline
22. Battle Hymn Of The Republic
23. Be Kind To Your Web Footed Friends
24. Bear Went Over The Mountain
25. Bicycle Built For Two
26. Big Rock Candy Mountain
27. Bill Bailey, Won't You Come Home
28. Billy Boy
29. Billy Pringle
30. Bird's Song
31. Blessed Assurance
32. Blow The Man Down
33. Blue Bells Of Scotland
34. Bluebird
35. Bollweevil
36. Boom, Boom, Ain't It Great To Be Crazy
37. Brahm's Lullaby
38. Bringing In The Sheaves
39. Bye, Baby Bunting
40. Caissons Go Rolling Along
41. Calendar Song
42. Campanas de Navidad
43. Camptown Races
44. Capital Ship, A
45. Cat Came Back, The
46. Church in The Wildwood
47. Cinderella
48. Clementine
49. Cock A Doodle Doo
50. Cockles And Mussels
51. Cocky Robin
52. Colors
53. Come, O Come, Emanuel
54. Con Mi Burrito Sabanero
55. Counting Song
56. Crawdad Song
57. Crocodile, The
58. Cuckoo Is A Pretty Bird
59. Daddy Sang Bass
60. Danny Boy
61. Day And Night
62. Deck The Halls
63. Ding Dong Que Alegria
64. Dixie
65. Do Your Ears Hang Low
66. Doce Dias De Navidad
67. Down By The Riverside
68. Dry Bones
69. El Buen Rey Wenceslao
70. El Primer Noel
71. El Tamborilero
72. Elephant And The Flea
73. Father Grumble
74. Fiddle De De
75. First Noel, The
76. Fishes
77. Five Currant Buns
78. For He's A Jolly Good Fellow
79. For Me And My Gal
80. Fox
81. Frankie And Johnny
82. Frere Jacques
83. Froggie Went A Courting
84. Georgie Porgie
85. German Lullaby
86. Girls And Boys Come Out To Play
87. Git Along Little Dogies
88. Give My Regards To Broadway
89. Go Tell It On The Mountain
90. God Rest Ye Merry Gentlemen
91. Golden Slumbers
92. Good Morning Merry Sunshine
93. Goosey Goosey Gander
94. Grasshopper
95. Grasshoppers Three
96. Greensleeves
97. Ground Hog
98. Hail Hail The Gang's All Here
99. Hark! The Herald Angels Sing
100. Harrigan
101. Here We Go Around The Mulberry Bush
102. Here We Go Looby Loo
103. He's Got The Whole World In His Hand
104. Hey Diddle Diddle
105. Hickory Dickory Dock
106. Higgledy Piggledy My Black Hen
107. His Eye Is On The Sparrow
108. Home On The Range
109. How Great Thou Art
110. Humpty Dumpty
111. Hunting We Will Go, A
112. Hush Little Baby
113. Hush-a-bye
114. I Am A Young Musician
115. I Gave My Love A Cherry
116. I Had A Little Nut Tree
117. I Love To Tell The Story
118. I Love You Truly
119. I Spy
120. If You're Happy And You Know It
121. I'll Fly Away
122. I'll Take You Home Again, Kathleen
123. I'm A Little Teapot
124. I'm Always Chasing Rainbows
125. I'm Looking Over A Four Leaf Clover
126. In The Garden
127. In The Good Old Summertime
128. It Ain't Gonna Rain No More
129. It Came Upon A Midnight Clear
130. It Is No Secret What God Can Do
131. It's Raining It's Pouring
132. I've Been Working On The Railroad
133. Jack And Jill
134. Jack Be Nimble
135. Jack Spratt
136. Jeanie With The Light Brown Hair
137. Jenny Jenkins
138. Jesus Loves Me
139. Jimmy Crack Corn
140. Jingle Bells (Childrens)
141. Joy To The World
142. Just A Closer Walk With Thee
143. Lady Bird Lady Bird
144. Let Me Call You Sweetheart
145. Letters Of The Alphabet
146. Little Black Bull
147. Little Bo Peep
148. Little Boy Blue
149. Little Jack Horner
150. Little Miss Muffet
151. Little Sally Waters
152. Little Things, The
153. Little Tommy Tucker
154. Llego A Mi Medianoche
155. London Bridge Falling Down
156. London Street
157. Los Tres Reyes
158. Ma She's Making Eyes At Me
159. Mademoiselle From Armentieres
160. Marine's Hymn
161. Mary Had A Little Lamb
162. Mary Quite Contrary
163. Michael Row The Boat Ashore
164. Midnight Special, The
165. Moonlight Bay
166. Mozart's Lullaby
167. My Bonnie Lies Over The Ocean
168. My Old Dog Tray
169. My Old Hen
170. My Old Kentucky Home
171. My Wild Irish Rose
172. Navidad, Navidad
173. Noche De Paz
174. Noche Santa
175. Now I Lay Me Down To Sleep
176. O Holy Night
177. Oats Beans And Barley Grow
178. Off To Bed Now
179. Oh Christmas Tree
180. Oh Come All Ye Faithful
181. Oh Dear What Can The Matter Be
182. Oh Little Town Of Bethlehem
183. Oh, Susanna
184. Oh Ven Oh Ven Emmanuel
185. Oh When The Saints Go Marching In
186. Oh You Beautiful Doll
187. Ol Woman Who Lived In A Shoe
188. Old Blue
189. Old John Braddelium
190. Old King Cole
191. Old MacDonald Had A Farm
192. Old Mother Hubbard
193. Old Time Religion
194. On The Banks Of The Sacramento
195. On Top Of Old Smokey
196. One Day At A Time
197. One Meat Ball
198. One More River To Cross
199. One Two Buckle My Shoe
200. One Two Three Four Five

Song List (Built-in)


- | | |
|-------------------------------------------|-----------------------------------------------------|
| 201. Onward Christian Soldiers | 268. Three Little Pigs |
| 202. Oranges And Lemons | 269. Tisket A Tasket, A |
| 203. Over In The Meadow | 270. To Market To Market |
| 204. Over The River And Through The Woods | 271. Toda La Noche |
| 205. Pat A Cake | 272. Toot Toot Toosie Goodbye |
| 206. Peace In The Valley | 273. Try Try Again |
| 207. Pease Porridge Hot | 274. Tura Lura Lura |
| 208. Peg O' My Heart | 275. Turkey In The Straw |
| 209. Peter Peter Pumpkin Eater | 276. Twelve Days Of Christmas |
| 210. Polly Put The Kettle On | 277. Twinkle Twinkle Little Star |
| 211. Polly Wolly Doodle | 278. Vive La Compagne |
| 212. Pop Goes The Weasel | 279. Wabash Cannonball, The |
| 213. Precious Lord Take My Hand | 280. Waltzing Matilda |
| 214. Precious Memories | 281. We Gather Together |
| 215. Ride A Cock Horse To Banbury Cross | 282. We Hunted And We Hunted |
| 216. Right Hand Says Good Morning | 283. We Three Kings |
| 217. Ring Around The Rosie | 284. We Wish You A Merry Christmas |
| 218. Rise And Shine | 285. Wedding Song (There Is Love) |
| 219. Rock A Bye Baby Green | 286. What A Friend We Have In Jesus |
| 220. Rock A Bye Baby | 287. What Child Is This |
| 221. Rock Island Line | 288. When Irish Eyes Are Smiling |
| 222. Rock Of Ages | 289. When Johnny Comes Marching Home |
| 223. Rock-A-My Soul | 290. When The Roll Is Called Up Yonder |
| 224. Rocking The Cradle | 291. Where Oh Where Has My Little Dog Gone |
| 225. Rose Of Tralee | 292. While Shepherds Watched, Their Flocks |
| 226. Row Row Row Your Boat | 293. Whispering Hope |
| 227. Russian Cradle Song | 294. Who Threw The Overalls In Mrs Murphy's Chowder |
| 228. Sailing Sailing | 295. Wish You A Happy Birthday |
| 229. School Days | 296. World Turned Upside Down, The |
| 230. She'll Be Coming Around The Mountain | 297. Ya Llego La Navidad |
| 231. Shoo Fly Don't Bother Me | 298. Yankee Doodle |
| 232. Shortening Bread | 299. Yellow Rose Of Texas |
| 233. Silent Night | 300. You're A Grand Old Flag |
| 234. Simple Simon | |
| 235. Sing A Song Of Sixpence | |
| 236. Six Little Ducks | |
| 237. Skip To My Lou | |
| 238. Sleep Baby Sleep | |
| 239. Spelling | |
| 240. Spider And The Fly, The | |
| 241. Star Spangled Banner, The | |
| 242. Sur Le Pont D'avignon | |
| 243. Swanee River | |
| 244. Sweet By And By | |
| 245. Sweet Hour Of Prayer | |
| 246. Sweetly Sings The Donkey | |
| 247. Swing Low Sweet Chariot | |
| 248. Tailor And The Mouse | |
| 249. Take Me Out To The Ball Game | |
| 250. Ten In A Bed | |
| 251. The Ants Go Marching | |
| 252. The Eensy Weensy Spider | |
| 253. The Farmer In The Dell | |
| 254. The Holly And The Ivy | |
| 255. The Little Drummer Boy | |
| 256. The Lord's Prayer | |
| 257. The Muffin Man | |
| 258. The Old Gray Mare | |
| 259. The Old Rugged Cross | |
| 260. There Was A Little Man | |
| 261. There Was A Tree | |
| 262. There's A Hole In Middle Of Sea | |
| 263. This Little Light Of Mine | |
| 264. This Little Pig Went To Market | |
| 265. This Old Man | |
| 266. Three Blind Mice | |
| 267. Three Little Kittens | |

Introduction

 
Front Panel

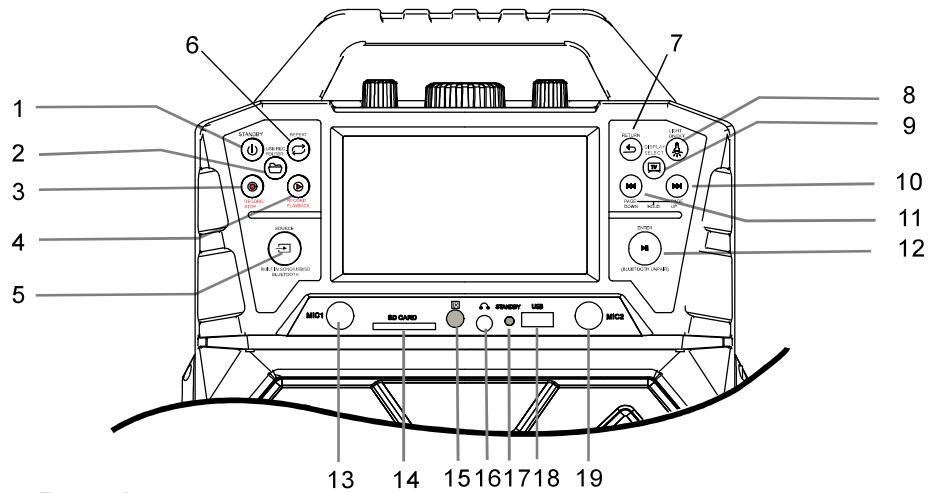

Top Panel

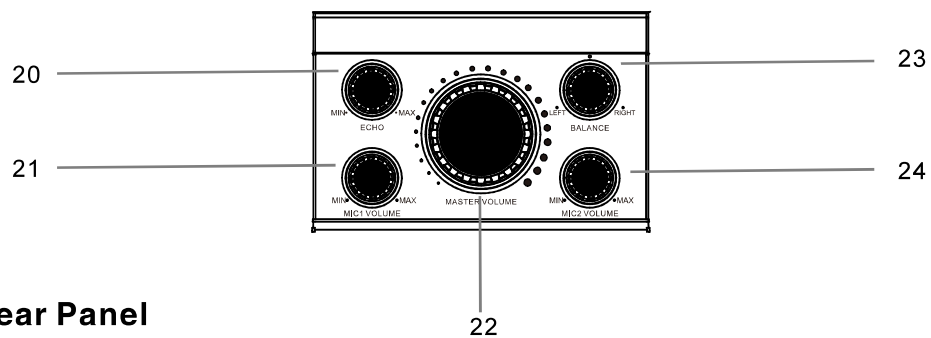 

Rear Panel

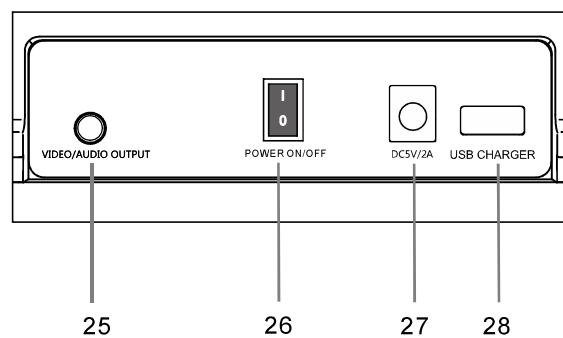 


Location Controls

1. **STANDBY:** Press this button to activate machine.
2. **USB REC. FOLDER:** Folder of songs that you have recorded.
3. **RECORD/STOP:** Start and stop for record function.
4. **RECORD PLAYBACK:** Playback the recorded track.
5. **SOURCE (BUILT IN SONG/ USB/SD/BLUETOOTH):** Select the source that you wish to play.
6. **REPEAT:** Press repeatedly to set track(s) to repeat.
7. **RETURN:** Press to return to previous screen while playing.
8. **LIGHT ON/OFF:** LED Lights ON/OFF button.
9. **DISPLAY SELECT:** Press this button to switch video & audio to external TV set.(make sure the i-cable is connected)
10. **▶▶:** Next song or page.
11. **◀◀:** Previous song or page.
12. **ENTER (BLUETOOTH UNPAIR):** Play or Pause & unpair BLUETOOTH.
- 13/19. **MIC1/MIC2:** Microphone-input jack.
14. **SD CARD SLOT:** SD card reading & playback.
15. **IR:** REMOTE CONTROL Infrared receiver.
16. **HEADPHONE:** Standard 3.5mm headphone jack.
17. **STANDBY:** Power standby indicator.
18. **USB SLOT:** For playing / recording music.
20. **ECHO:** Rotate to adjust echo sound effect.
21. **MIC1 VOLUME:** Rotate to adjust volume level for MIC1.
22. **MASTER VOLUME:** Rotate to adjust level of main sound output.
23. **BALANCE:** Rotate to adjust between vocal and music mix output.
24. **MIC2 VOLUME:** Rotate to adjust volume level for MIC2.
25. **VIDEO/AUDIO OUTPUT:** Connect to TV VIDEO /AUDIO input.
26. **POWER ON/OFF:** (Master Control seesaw switch)To turn power OFF and put this machine to stand-by mode.[**Press Power button(#1) to activate machine**]
27. **DC 5V/2A:** AC Adaptor Input jack.
28. **USB CHARGER:** for charging smart devices (cell phone only).

External Device Slots

 Place your Personal Mobile Phone / Tablet on the slot while charging and displaying.

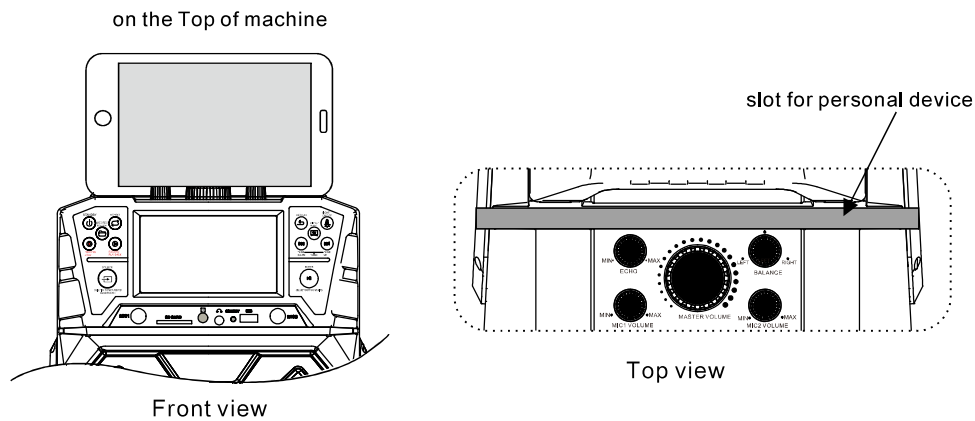


Power Supply Setup

How to connect Power Adapter

Plug the included AC adapter into an AC power outlet to power this KARAOKE MACHINE.
Connect $\phi 5.5\text{mm}$ plug into DC INPUT jack and the AC Adapter to wall Power Output.
[Note: For Power ON the machine, please refer to page 14.]

 
REAR SIDE OF MACHINE

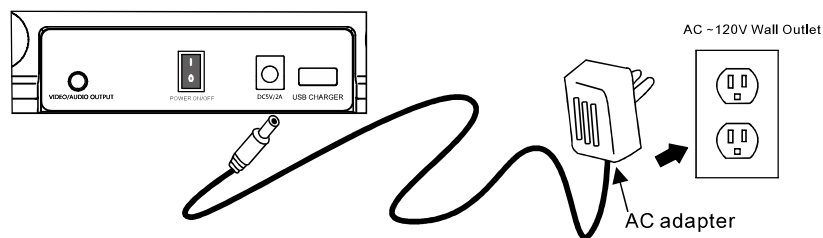

Sing with Microphone

Requires microphone (included) .

 
1. Plug the microphone (see below figure) into the MIC 1 INPUT or MIC 2 INPUT.
2. Slide the ON /OFF switch to ON.
3. Adjust the microphone volume to your desire level by rotating the MIC VOLUME knobs (on the top of the unit).
4. Sing along with the music.

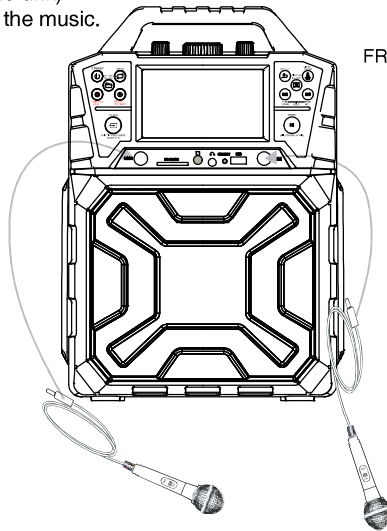


FRONT VIEW OF MACHINE

  Connect the Headphone or Earphone



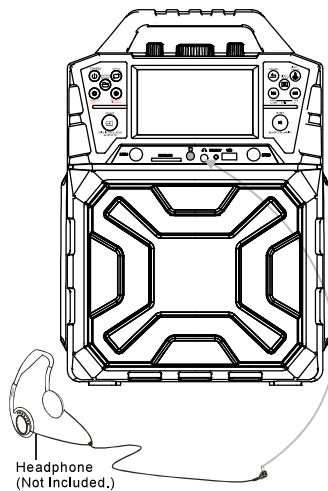

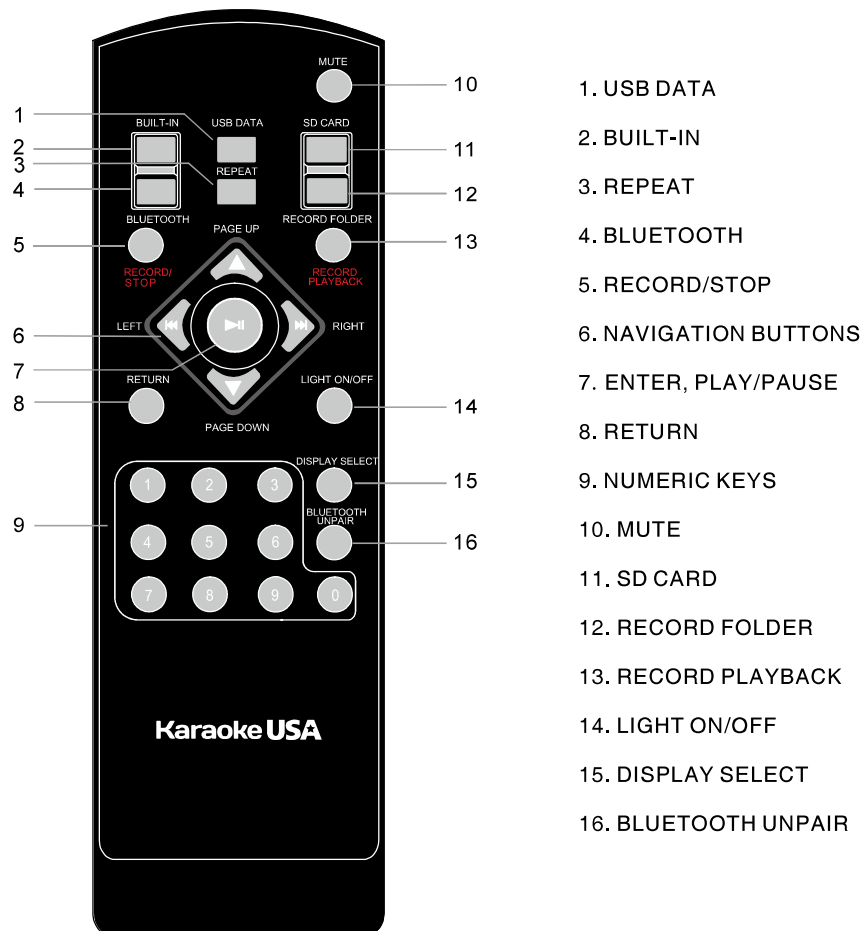

 

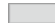 
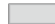 




Simply connect a low impedance ϕ 3.5mm (max. 32 ohm) stereo headphone / earphone (not included) to PHONES jack of SD520. The speaker will be cut off when the headphone / earphone is plug in.



Remote Control

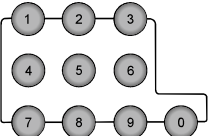

 
Remote Control Operations

1. USB DATA  ● Press to select media to USB mode.
2. BUILT-IN  ● Press to select Built-in songs.
3. REPEAT  ● Press this key to play selected item repeatedly.
The screen shows as below:
REP: [OFF] REP: [REP1] REP: [REP ALL]
4. BLUETOOTH  ● Press to select BLUETOOTH function.
5. RECORD  ● Record your vocal and music to the USB.
(Note: USB must be inserted before recording.)
6. PAGE UP/PAGE DOWN/
LEFT/RIGHT ● Use to navigate Up/Down and Left/Right to search for song
titles from source.
7. ENTER,PLAY/PAUSE ● To activate Play/Pause or to confirm a selected function.
8. RETURN  ● Return to a Menu screen while playing.
9. NUMERIC KEY  ● Use to specify a track number for playing.
10. MUTE  ● Press MUTE to cut off the Audio output.
Press MUTE again to resume normal Audio output.
11. SD CARD  ● Press to select SD card mode.
12. RECORD FOLDER  ● The folder that stores recorded file(s)
13. RECORD PLAYBACK  ● Press this button to playback the music that you **JUST** recorded.
14. LIGHT ON/OFF  ● To turn the LED lights ON or OFF.
15. DISPLAY SELECT  ● Press to switch from TFT color screen to TV flat screen.
16. BLUETOOTH UNPAIR  ● Disconnect existing Bluetooth function, so as to make room for
new Bluetooth connection to another device.


Remote Control Preparation

Battery installation


1. Open the Cover

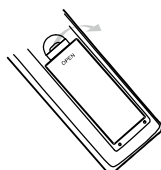

 
2. Install Batteries (AAA 1.5Vx2, not included)

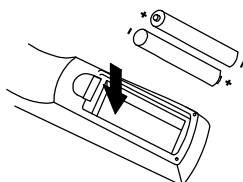

 3. Close the Cover

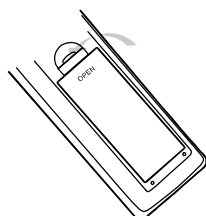

To use the Remote Control

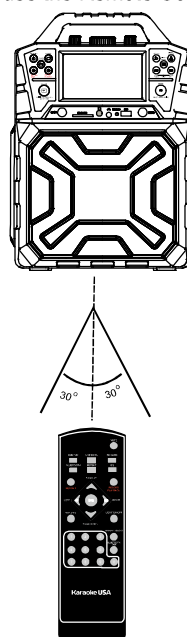 


Notes:

- Point the Remote Control directly to the sensor of the machine.
- Do not leave the Remote Control in an extremely hot or humid place.
- Do not spill water or put anything wet on the Remote Control.
- When this machine will not be used for an extended period of time, please remove the Battery from the Battery Compartment.

How to Play the Machine

Press the [POWER ON/OFF] to switch ON(at the back), depress [STANDBY] button(in the front) to activate the machine.

 After powering on the system, the Home Screen will display short cut icons as shown below:

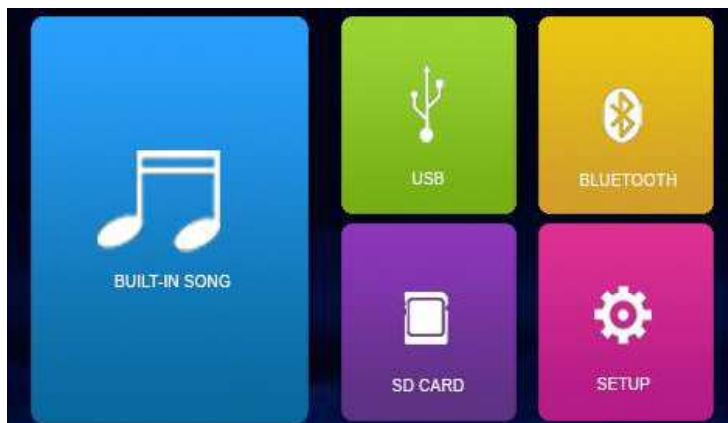

① BUILT-IN SONG

 
There are 2 ways to operate and playback Built-in Songs, namely by A. Machine Front Panel Control or B. Remote Control.

A. Machine Front Panel Control


1. Depress SOURCE[Ref.page8 (#5)]button once, Built-in song mode is detected.
2. [Built- in Songs] will be displayed on the left-hand top corner of the color screen.
3. Use ◀◀ or ▶▶key[Ref.page8 (#10&11)]to scroll up or down to pick your favorite song title.
4. Follow by depressing [ENTER] key [Ref.page8 (#12)] to activate play.

B. Remote Control

1. Depress [BUILT-IN]key[Ref.page11 (#2)] to select Built-in song function.
2. Then press [NAVIGATION]buttons[Ref.page11 (#6)] to scroll the song list up or down to select your favorite song title, followed by pressing the center round [ENTER]key [Ref.page11 (#7)] to play.
3. Or use the [NUMERIC KEYS] buttons [Ref.page11 (#9)]to enter the song number you wish to play. Press [ENTER] key to complete your song selection.

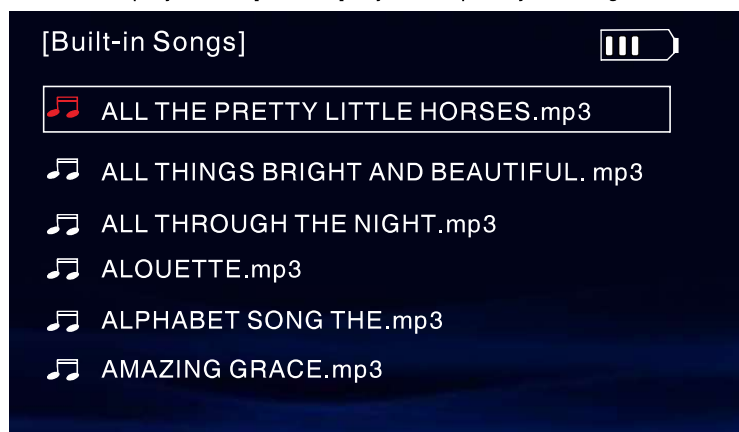

How to Play the machine

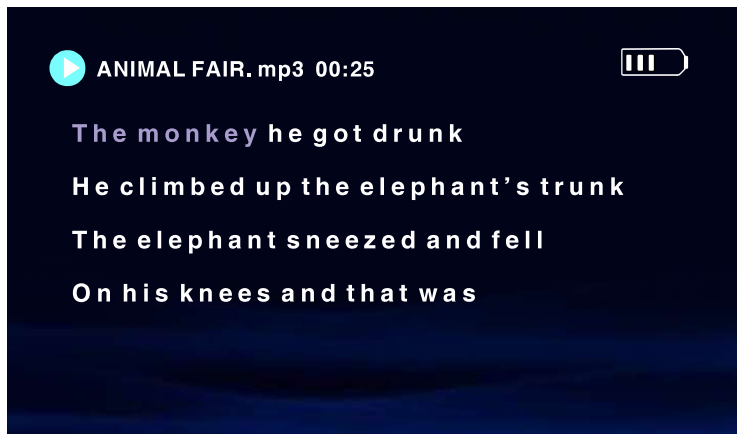 


② USB Mode

1. The machine plays MP3 music that have been downloaded to your USB flash. Insert your USB flash to the USB Slot for playing.
2. Depress SOURCE [Ref. page 8 (#5)] button twice to select. A complete song list will be displayed, select your favorite song and play.




How to Play the Machine

 If your downloaded music file has included graphics(MP3G), the machine will play and display lyrics on the screen as well.

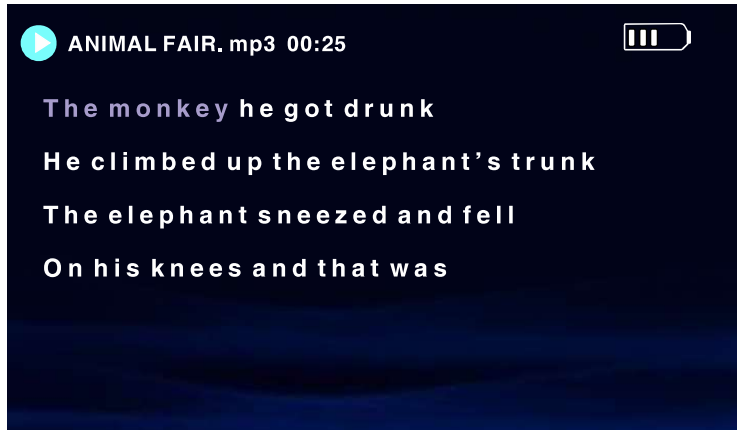

 Noted: If the downloaded music files are in Mp3 format, no lyrics will be displayed on screen.
[Only MP3G format downloaded song can play and display song lyrics]

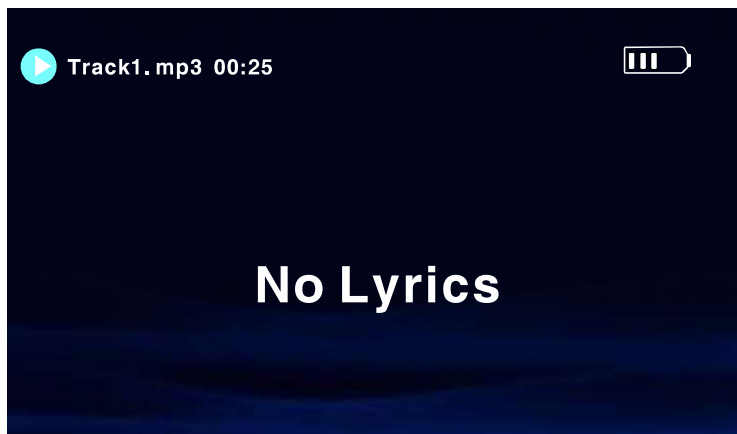


How to Play the Machine

③ SD Card Mode

This machine plays MP3 & MP3G music that were downloaded to your SD card. Just insert the SD card to the SD card slot for playing. If MP3G format was used, the lyrics of a selected song will be displayed.

[Note: Your SD card can not be used for “Recording”]

 
Play SD card by following the same procedures as described on ② for USB Flash.

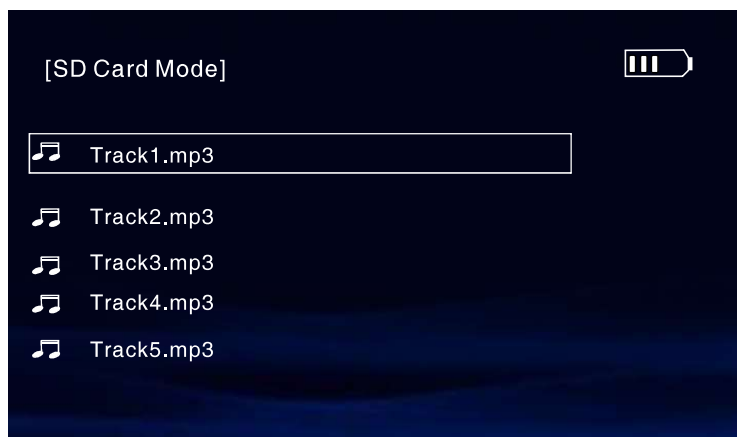

④ Bluetooth Mode

1. Pairing Bluetooth between this machine with your Smart device :

 Power ON this machine and then select Bluetooth mode on the SOURCE button.

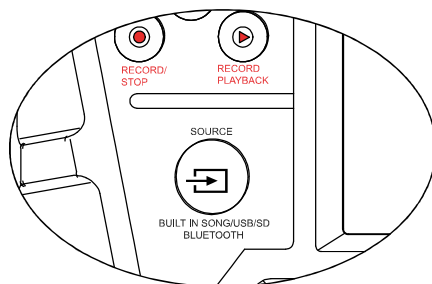


When Bluetooth is ON, the screen shows : “Please Connect Bluetooth”.


2. Setting your Smart Device to “explore”.

- A. Activate the Bluetooth searching function on your smart device.
- B. Pick the “Smart device” you want to pair.

 3. Pairing your Smart Device to connect to this Machine
 - A. Your Smart Device will Discover: "Mini Karaoke".
 - B. Select Mini Karaoke to allow pairing to your Smart Device.
 - C. If they are paired, the screen will show: "Bluetooth is Connected" and you will hear a "beep" sound to confirm.

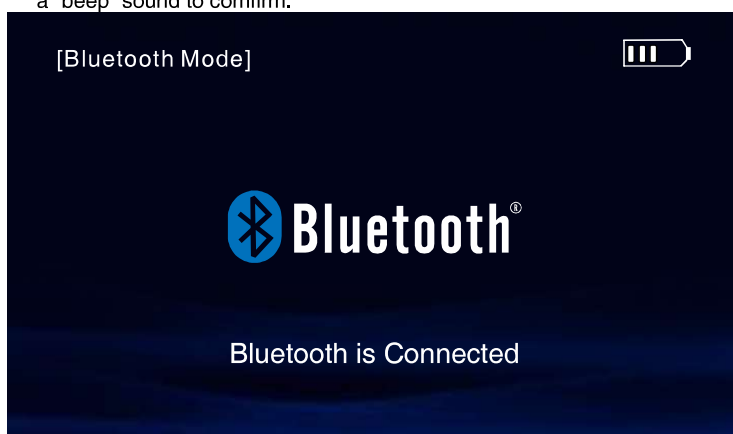

 - D. If they are not paired, the screen will continue to display: "Please connect Bluetooth".

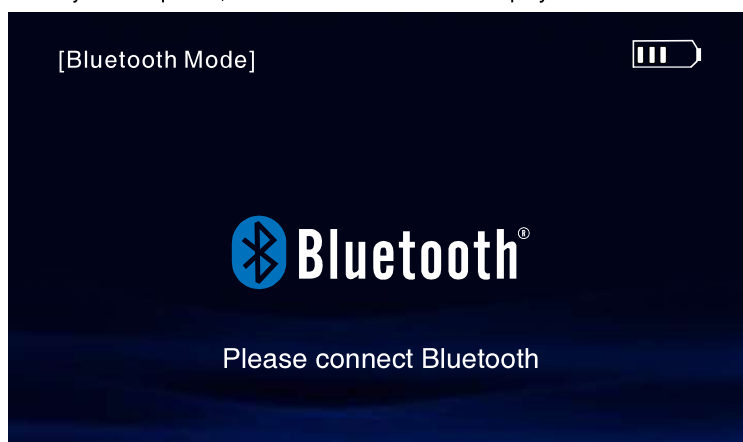





- E. Please repeat "Steps 1,2 & 3" above until they are paired.
4. Play music via Bluetooth After Pairing:
 - A. Select the song files that you wish to play from your Smart Device.
 - B. Then press "▶||" to start sending music to the Machine.
 - C. Always remember to use full volume on your Smart Device to send your song files .
 - D. Adjust the Master Volume on the Machine to a comfortable level as required.
 - E. Music will be put "on Hold" automatically when your Smart Device receives a phone call in order to let you answer. The music will resume when you end the call.
5. **Bluetooth transmits audio/music only. You cannot see lyrics displaying on the screen.**

Recording Operation

- Music source can be the built-in songs from the machine, your own USB stick, SD Card or Bluetooth connecting.
- Recorded tracks will be stored in the USB stick, under the file name "Record Folder"
- Default recording file format is MP3.
- This machine allows you to "Record" your vocal with music mix to the USB flash, please get ready by inserting a Microphone along with a USB stick to slot.

Procedures:

 
1. Plug in your Microphone, insert the USB stick;
2. Play the music;
3. Press  RECORD / STOP [Ref. page8 (#3)] to start recording;
4. Sing directly into the top of the microphone (not the side). see right picture
The microphones are uni-directional to lessen ambient interference. Sing loud and clear to the microphone;
5. When recording is done, press  to stop;
6. Press  RECORD / PLAYBACK [Ref. page8 (#4)] to listen to your recording. Or you can press  USB REC. FOLDER [Ref. page8 (#2)] to browse all your recorded files.



Connect to your home TV

You can export the lyric displaying on this machine to an external flat screen TV at your home by simply connecting the provided i-Cable.

1. Insert the RCA ends of the i-Cable with the Yellow(video), Red(audio) and the white(audio) into the matching color input jacks on the back of your big & flat color TV set.
2. Then insert the $\phi 3.5\text{mm}$ Male Jack to the Video/ Audio/Output Socket at the rear side of this machine.
3. To activate display transfer of lyrics & audio/sound to your home TV set, press the round button-DISPLAY SELECT [Ref. page8 (#9)] to proceed.
(Press this button again to return to this machine)

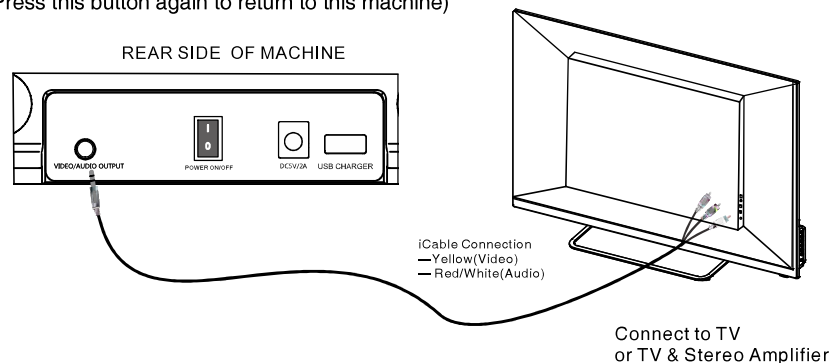

Specifications

AC Power Adapter Connect DC Jack	Use included AC adapter AC~ Input 120~240V, 50/60Hz Output, DC 5V, 2A
Bluetooth	For Music Share V4.0
MP3G Player	Support MP3 & MP3G formats
Master Power Output	25W Peak Power
Speakers Spec	5Inch, 8 Ohm
Built-in Lithium Battery	2000 mAh

Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.

Troubleshooting

Symptom	Possible Cause	Solution
GENERAL		
No Power	Power is not ON	Switch the unit ON on the back, and turn the screen on by POWER ON/OFF button
	Battery is running out	Connect the power to this machine and charge up the battery.
KARAOKE		
Microphone has no sound	Microphone not turned on.	Turn on the microphone.
	Microphone volume turned all the way down.	Turn the Microphone volume up.
	Microphone connection loose.	Insert the Microphone plug totally to the MIC jack.
Feedback is heard when singing	Microphone is too close to the unit or MIC volume is too high.	Move Microphone away from the machine or decrease Micphone Volume
Lyrics/Words do not display on TV screen	Video cable connected improperly to TV.	3.5mm plug needs to connect to the back panel OUPUT jack, 3 RCA plugs connect to matching color INPUT jacks
	DISPLAY SELECT button is not activated	Press DISPLAY SELECT button to transfer lyrics to TV set.
Machine screen has no display	TV display in ON	Press DISPLAY SELECT button to switch back from TV to the unit



KARAOKE USA

1185 GOODEN CROSSING
LARGO, FL 33778 USA

TECH SUPPORT: WWW.KARAOKEUSA.COM/CS
DOWNLOAD SONGS: WWW.SINGTHEHITS.COM
SALES DEPARTMENT: SALES@KARAOKEUSA.COM

Printed in China